

1. Display Menu:

NO.	Display /EN	Display/中文	Detail
1	Menu	菜单	1. reverse 2. sound control sensitivity 3. no signal mode 4. reset 5. restore default. 6. factory setting
2	Addr	地址	change address
3	Disp	显示	Change display mode
4	En/Ch	中英	Language switching
5	Mode	模式	DMX512/auto-fast/auto-slow/sound mode
6	CH	通道	27/17 channel

2. DMX channel:

27 channel:

CH	Function	Value	Detail
1	X	0-255	0~540 degrees
2	Y	0-255	0~270 degrees
3	Zoom	0-255	/
4	Dimmer	0-255	From dark to light
5	R1 dimmer	0-255	Red 1
6	G1 dimmer	0-255	Green 1
7	B1 dimmer	0-255	Blue 1
8	W1 dimmer	0-255	White 1
9	Y1 dimmer	0-255	Yellow 1
10	R2 dimmer	0-255	Red 2
11	G2 dimmer	0-255	Green 2
12	B2 dimmer	0-255	Blue 2
13	W2 dimmer	0-255	White 2
14	Y2 dimmer	0-255	Yellow 2

15	R3 dimmer	0-255	Red 3
16	G3 dimmer	0-255	Green 3
17	B3 dimmer	0-255	Blue 3
18	W3 dimmer	0-255	White 3
19	Y3 dimmer	0-255	Yellow 3
20	Strobe	10-255	/
21	Show	0-24	Internal program 1
		25-49	Internal program 2
		50-74	Internal program 3
		75-99	Internal program 4
		100-124	Internal program 5
		125-149	Internal program 6
		150-174	Internal program 7
		175-199	Internal program 8
		200-224	Internal program 9
		225-255	Internal program 10
22	Speed	0-255	From fast to slow
23	Macro function	0-49	/
		50-99	Lighting effect display)
		100-149	Auto 1
		150-199	Auto 2
		200-255	Sound control
24	X fine	0-255	16bit
25	Y fine	0-255	16bit
26	XY speed	0-255	speed, from fast to slow
27	Reset	0-250	/
		251-255	Reset (3s)

17 channel:

CH	Function	Value	Detail
1	X	0-255	0~540 degrees
2	Y	0-255	0~270 degrees
3	Zoom	0-255	/
4	Dimmer	0-255	From dark to light
5	R dimmer	0-255	Red
6	G dimmer	0-255	Green
7	B dimmer	0-255	Blue

8	W dimmer	0-255	white
9	Y dimmer	0-255	Yellow
10	Strobe	10-255	
11	Show	0-24	Internal program 1
		25-49	Internal program 2
		50-74	Internal program 3
		75-99	Internal program 4
		100-124	Internal program 5
		125-149	Internal program 6
		150-174	Internal program 7
		175-199	Internal program 8
		200-224	Internal program 9
		225-255	Internal program 10
12	Speed	0-255	From fast to slow
13	Macro function	0-49	/
		50-99	Lighting effect display)
		100-149	Auto 1
		150-199	Auto 2
		200-255	Sound control
14	X fine	0-255	16bit
15	Y fine	0-255	16bit
16	XY speed	0-255	speed, from fast to slow
17	Reset	0-250	/
		251-255	Reset (3s)