

Technical:

Voltage: AC110-220V 50/60HZ

Power supply: 200W

Light source: 100W*2PCS

Color: WW/CW

Channel:8/4CH

Operation: DMX512, Auto, Sound, Master-slave



LED Stage Lighting Operating Manual

LED blinder

PL. --100W*2PCS

TEXT

Thank you so much to choose this product; it is adopting the most advanced lamps, which is called LED lamps. It conquers a lot of disadvantages such as power wasting, short using life, high temperature, etc. It has advantages of power saving, long life (it can reach 60,000.00 hours in general circs), high brightness, fresh colors...It is the best stage illuminating and various effect decorative products.

Security:

1. Make sure the user voltage cannot higher or lower than the regulate value of the user manual.

2. Please take more attention while installing the fixtures. Avoid touching exposed AC cord, or will cause deadly accident.
3. When installing the fixtures, make sure the fixtures are not exposed in extremely hot, humid or dusty environment. Make sure the distance between the fixture and the lighted object is not less than 0.5 meter. Make sure there is no combustible or explosive object around 0.5 meters.

DMX512Control : 8 Channel Model(A001)

Channel	Function	Instruction
CH1	Dimmer	WW CW dimmer : from dark to bright
CH2	WW dimmer	WW dimmer : from dark to bright
CH3	CW dimmer	CW dimmer : from dark to bright
CH4	WW1 dimmer	WW1 dimmer : from dark to bright
CH5	CW1 dimmer	CW1 dimmer: from dark to bright
CH6	Strobe	WW CW strobe: from slow to fast
CH7	Function choice	0~50: DMX 8CH Control. 51~100: Different Colors Output 101~150: Colors Jump Change. 151~200: Colors Gradate. 201~250: Colors Pulse Change. 251~255: Sound-Active
CH8	Function speed	Speed function, from slow to fast

DMX512Control : 4Channel Model(D001)

Channel	Function	Instruction
CH1	WW Dimmer	Dimmer- Dark to Bright
CH2	CW Dimmer	Dimmer- Dark to Bright
CH3	WW1 Dimmer	Dimmer- Dark to Bright
CH4	CW1 Dimmer	Dimmer- Dark to Bright

DMXDISPLAY

No	Show	Function	Instruction
1	d001	DMX Address (001~512)	DMX-512 address set, 4 Channels mode
2	A001	DMX Address (001~512)	DMX-512 address set, 8 Channels mode
3	r255	WW (000~255)	UP、DOWN Change brightness
4	G255	CW (000~255)	UP、DOWN Change brightness
5	b255	WW1 (000~255)	UP、DOWN Change brightness
6	u255	CW1 (000~255)	UP、DOWN Change brightness
7	FH99	Strobe flash (01~99)	UP、DOWN Change the speed
8	CL01	Different Colors Output (01~08)	UP、DOWN Change brightness
9	CC99	Colors Jump Change (01~99)	UP、DOWN Change the speed
10	DE99	Colors Gradate (01~99)	UP、DOWN Change the speed
11	CP99	Colors Pulse Change (01~99)	UP、DOWN Change the speed
12	SU01	Colors sound-Active (01~09)	UP、DOWN Change the effects