

Safety Notes


- Please read the following notes carefully because they include important safety information about the installation, usage, and maintenance of this product.
- Always make sure that the voltage of the outlet to which you are connecting this product is within the range stated on the decal or rear panel of the fixture.
- This product is for indoor use only! To prevent risk of fire or shock, do not expose this fixture to rain or moisture.
- Make sure there are no flammable materials close to the unit while operating.
- Always install this product in a location with adequate ventilation, at least 20 in (50 cm) from adjacent surfaces.
- Be sure that no ventilation slots on the unit's housing are blocked.
- Always disconnect this product from the power source before cleaning it or replacing fuse.
- Make sure to replace the fuse with another of the same type and rating
- If mounting this product overhead, always secure it to a fastening device using a safety cable.
- The maximum ambient temperature (Ta) is 104°F (40°C).
- In the event of a serious operating problem, stop using the unit immediately.
- Make sure the power cord is not crimped or damaged.
- Never disconnect the power cord by pulling or tugging on the cord.
- Always avoid direct eye exposure to the light source when this fixture is on.

Technical parameter

Power Supply	AC 100-240V 50/60HZ
Light Source	COB/4x50W Cold White+Warm White
DMX Channel	2/6CH
Rated Power	220W
Control Mode	DMX/Master-slave/Sound/Auto
Ra	≥90

Button Instruction

To access the control panel functions, use the four buttons located underneath the display.

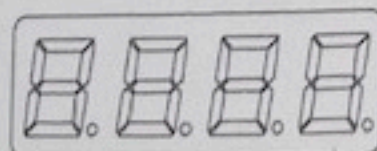

MENU UP DOWN ENTER

Button	Function
<MENU>	Press it to find an operation mode or to back out of the current menu option
<UP>	Use it to scroll up the list of options or to find a higher value
<DOWN>	Use it to scroll down the list of options or to find a lower value
<ENTER>	Use it to activate a menu option or a selected value

Menu Function Instruction

Pls remember to press ENTER to store the setting after all function selection and operation.

No.	Menu	Function
1	D.001	2 CH address code, press UP、DOWN to add or reduce the value 001-512
2	A.001	6 CH address code, press UP、DOWN to add or reduce the value 001-512
3	U.255	Cold white color, press UP、DOWN to adjust the brightness 000-255
4	O.255	Warm white color, press UP、DOWN to adjust the brightness 000-255
5	FH.00	Strobe, press UP、DOWN to adjust the speed 1-99
6	CL.01	Manual color selection, press UP、DOWN to change the color 1-3
7	CC.71	Jumping change, press UP、DOWN to adjust the speed 1-99
8	dE.72	Gradual change, press UP、DOWN to adjust the speed 1-99
9	CP.73	Pulse change, press UP、DOWN to adjust the speed 1-99
10	SOU.9	Sound control, press UP、DOWN to choose the function 1-9 : 9 is colorful effect under sound control changes, 1-8 is strobe effect under sound control

DMX512 (2CH)

No.	Function	Instruction
CH1	U Dimmer	Cold white Dimmer, from dark to bright
CH2	O Dimmer	Warm white Dimmer, from dark to bright

DMX512 (6CH)

No.	Function	Instruction
CH 1	Main Dimmer	Main dimmer, linear dimmer, from dark to bright
CH 2	U Dimmer	Cold white Dimmer, from dark to bright
CH 3	O Dimmer	Warm white Dimmer, from dark to bright
CH 4	Strobe	Strobe speed, from slow to quick
CH 5	Function Selection	0-50 dimmer, 51-100 color selection, 101-150 jumping change, 151-200 gradual change, 201-250 pulse change, 251-255 sound control
CH 6	Function Speed	The speed from slow to quick for the function under 5 CH (51-250) Sound control mode selection under 5 CH (251-255)