

### 28 Channel Mode (D001 Status)

No.	Function	Description
CH1	Total Dimmer	Total Dimmer, from dark to bright
CH2	Total Strobe	Total Strobe, from slow to fast
CH3	Function Selection	0: Dimmer Mode
		1-50: Color Selection (selected by CH4)
		51-82: Single Jump Change Effect 1-32
		83-100: Jump Change All Effects
		101-132: Single Gradient Change Effect 1-32
		133-150: Gradient Change All Effects
		151-182: Single Pulse Change Effect 1-32
		183-200: Pulse Change All Effects
		201-255: Sound Control (CH4 selects sound control 1 and 2)
CH4	Function Speed	Function speed, from slow to fast (color selection for color output and sound control for strobe and jump change)
CH5	R1 Dimmer	Red 1 Dimmer, from dark to bright
CH6	R2 Dimmer	Red 2 Dimmer, from dark to bright
CH7	R3 Dimmer	Red 3 Dimmer, from dark to bright
CH8	R4 Dimmer	Red 4 Dimmer, from dark to bright
CH9	R5 Dimmer	Red 5 Dimmer, from dark to bright
CH10	R6 Dimmer	Red 6 Dimmer, from dark to bright
CH11	G1 Dimmer	Green 1 Dimmer, from dark to bright
CH12	G2 Dimmer	Green 2 Dimmer, from dark to light
CH13	G3 Dimmer	Green 3 Dimmer, from dark to bright
CH14	G4 Dimmer	Green 4 Dimmer, from dark to bright
CH15	G5 Dimmer	Green 5 Dimmer, from dark to bright
CH16	G6 Dimmer	Green 6 Dimmer, from dark to light
CH17	B1 Dimmer	Blue 1 Dimmer, from dark to bright
CH18	B2 Dimmer	Blue 2 Dimmer, from dark to bright
CH19	B3 Dimmer	Blue 3 Dimmer, from dark to bright
CH20	B4 Dimmer	Blue 4 Dimmer, from dark to bright
CH21	B5 Dimmer	Blue 5 Dimmer, from dark to bright
CH22	B6 Dimmer	Blue 6 Dimmer, from dark to bright
CH23	W1 Dimmer	White 1 Dimmer, from dark to bright
CH24	W2 Dimmer	White 2 Dimmer, from dark to bright
CH25	W3 Dimmer	White 3 Dimmer, from dark to bright
CH26	W4 Dimmer	White 4 Dimmer, from dark to bright
CH27	W5 Dimmer	White 5 Dimmer, from dark to bright
CH28	W6 Dimmer	White 6 Dimmer, from dark to bright

### Menu Function and Description

No.	Menu	Value	Function and Description
1	A001	001- 512	DMX512 Address Code Setting -8 Channel Mode
2	d001	001- 512	DMX512 Address Code Setting -28 Channel Mode
3	r255	000 - 255	Red Dimmer, from dark to bright
4	G255	000 - 255	Green Dimmer, from dark to bright
5	b255	000 - 255	Blue Dimmer, from dark to bright
6	u255	000 - 255	White Dimmer, from dark to bright
7	FH99	00 - 99	No strobe at 00, total strobe at 01-99, from slow to fast
8	CL01	01 - 49	Manual color selection mode
9	CC99	01 - 99	Jump change from slow to fast
10	DE99	01 - 99	Gradient change from slow to fast
11	CP99	01 - 99	Pulse change from slow to fast
12	Auto		Automatic effects
13	SU01	01 - 02	Mode: 1 refers to strobe, 2 refers to jump change

**Master slave description:** In D001 or A001 status, the slave signal is automatically received without additional setting.



### Safety Notes


- Please read the following notes carefully because they include important safety information about the installation, usage, and maintenance of this product.
- Always make sure that the voltage of the outlet to which you are connecting this product is within the range stated on the decal or rear panel of the fixture.
- This product is for indoor use only! To prevent risk of fire or shock, do not expose this fixture to rain or moisture.
- Make sure there are no flammable materials close to the unit while operating.
- Always install this product in a location with adequate ventilation, at least 20 in (50 cm) from adjacent surfaces.
- Be sure that no ventilation slots on the unit's housing are blocked.
- Always disconnect this product from the power source before cleaning it or replacing fuse.
- Make sure to replace the fuse with another of the same type and rating
- If mounting this product overhead, always secure it to a fastening device using a safety cable.
- The maximum ambient temperature (Ta) is 104°F (40°C).
- In the event of a serious operating problem, stop using the unit immediately.
- Make sure the power cord is not crimped or damaged.
- Never disconnect the power cord by pulling or tugging on the cord.
- Always avoid direct eye exposure to the light source when this fixture is on.

### Technical parameters

Light Source	18*8W RGBW 4in1 LED
Rated Power	150W
Control Mode	Auto/Sound/DMX/Master-slave/Point Control
Voltage	AC100-240V 50/60Hz
DMX Channel	8/28
Lifespan	50000 Hours

### Button Instruction

To access the control panel functions, use the four buttons located underneath the display.

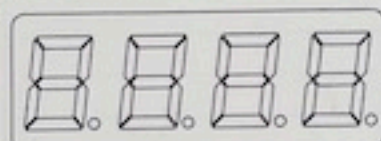

Button	Function
<MENU>	Press it to find an operation mode or to back out of the current menu option
<UP>	Use it to scroll up the list of options or to find a higher value
<DOWN>	Use it to scroll down the list of options or to find a lower value
<ENTER>	Use it to activate a menu option or a selected value

### 8 Channel Mode (A001 Status)

No.	Function	Description
CH1	Total Dimmer	Total Dimmer, from dark to bright
CH2	R Dimmer	Red Dimmer, from dark to bright
CH3	G Dimmer	Green Dimmer, from dark to bright
CH4	B Dimmer	Blue Dimmer, from dark to bright
CH5	W Dimmer	White Dimmer, from dark to bright
CH6	Total Strobe	Total Strobe, from slow to fast
CH7	Function Selection	0: Dimmer Mode 1-50: Color Selection (selected by CH8) 51-82: Single Jump Change Effect 1-32 83-100: Jump Change All Effects 101-132: Single Gradient Change Effect 1-32 133-150: Gradient Change All Effects 151-182: Single Pulse Change Effect 1-32 183-200: Pulse Change All Effects 201-255: Sound Control (CH8 Selects Sound Control 1 and 2)
CH8	Function Speed	Function Speed, from slow to fast (color selection for color output and sound control for strobe and jump change)