

Specifications :

Power input:110~240V,50/60Hz

LEDs: 14pcs 3W Warm/Cold White LED, 56pcs SMD5050 RGB LED

DMX Channels: 6CH,8CH,12CH,60CH

Control mode: DMX512,Master/Slave ,Auto-run & Sound active

Front cover color: White and black


Size: 100x7x12cm

N.W: 2.86KG


G.W:3.86KG

Features:

- 1.Each LED Can control individual & created a wonderful of image & video effects
- 2.56pcs 5050SMD RGB 3in1 Backlight Effect
- 3.The angle of the base can be adjusted
- 4.Can be seamlessly spliced between the two fixtures

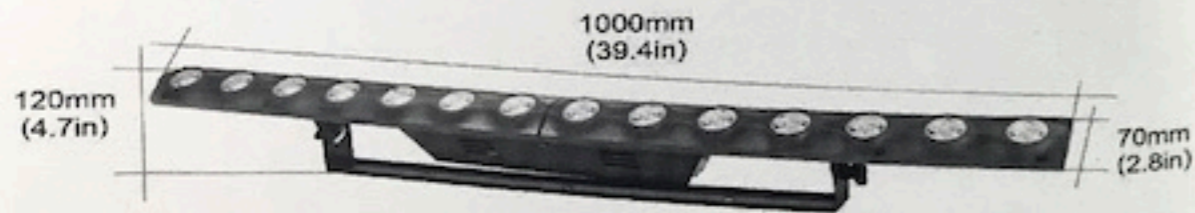

Display:

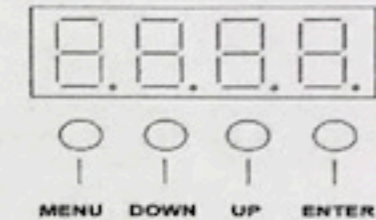

MENU	To select the programming functions
DOWN	To go backward in the selected functions
UP	To go forward in the selected functions
ENTER	To confirm the selected functions

Main Function:

To select any of the given functions, press the MENU button up to when the Require done is showing on the display. Select the function by ENTER button and the display will blink. Use DOWN and UP button to change the mode. Once the required mode has been selected, press the ENTER button to setup, to go back to the functions without any change press the MENU button again. Hold and press the MENU button about one second or wait for one minute to exit the menu mode.

8channels:

channel	value	function
1	0-255	ALL dimmer
2	0-255	strobe
3	0-255	Red
4	0-255	Green
5	0-255	Blue
6	0-255	White
7	0-7	No function
	8-12	Color Chase 1
	13-16	Color Chase 2

	223-226	Color Chase 58
	227-247	Color Chase 59
	248-255	Sound active
8	0-255	Chase Speed Slow To Fast

12channels:

channel	value	function
1	0-255	ALL dimmer
2	0-255	strobe
3	0-255	Red 1
4	0-255	Green 1
5	0-255	Blue 1
6	0-255	White 1
7	0-255	Red 2
8	0-255	Green 2
9	0-255	Blue 2
10	0-255	White 2
11	0-7	No function
	8-12	Color Chase 1
	13-16	Color Chase 2

	223-226	Color Chase 58
	227-247	Color Chase 59
	248-255	Sound active
	12	0-255

60 channels:

channel	value	function
1	0-255	ALL dimmer
2	0-255	Strobe
3	0-255	Red 1
4	0-255	Green 1
5	0-255	Blue 1
6	0-255	White 1
6	0-255	Red 2
8	0-255	Green 2
9	0-255	Blue 2
10	0-255	White 2
11	0-255	Red 3
12	0-255	Green 3
13	0-255	Blue 3
14	0-255	White 3
15	0-255	Red 4
16	0-255	Green 4
17	0-255	Blue 4
18	0-255	White 4

19	0-255	Red 5
20	0-255	Green 5
21	0-255	Blue 5
22	0-255	White 5
.....
.....
.....
55	0-255	Red 14
56	0-255	Green 14
57	0-255	Blue 14
58	0-255	White 14
59	0-7	No function
	8-12	Color Chase 1
	13-16	Color Chase 2

	223-226	Color Chase 58
	227-247	Color Chase 59
60	248-255	Sound active
	0-255	Chase Speed Slow To Fast