

## LED Wall Wash 18x18W RGBWA+UV Lighting



### Maintenance

1. Please keep the light in dryness and avoiding use in wet place.
2. Using intermittently can be extended the life.
3. Attention to clean the fan and lens usually in order to get the ventilating effects and lighting effects better.
4. Please do not wipe the crust using organic menstruum for avoid to damaged the product.

### Statement


The product has well capability and intact packing when leave factory, All of the user should comply with above warning item and manual ,any misuse cause of the damages are not included in our guarantee, and also can't be responsible for any malfunction & problem owing to ignore the manual. Please forgive that we will not be notice for technical change

### Attention Item

1. For guarantee the life of product, please do not put it on the wet place and not use it the place over 40 degree.
2. Please don't lay the product on the un-fixable or shakable place.
3. Ask for the professional to maintain the product in order to avoid the danger of get an electric shock.
4. Power supply should not be changed over +&-10% while the light is using, it will be decreased the life of lamp if the power is too high, but it will be influenced the luminosity if the power is too low.
5. After power off, if it is need used again, please cool down over 20 minuter.
6. Please look round the manual for ensure the product can be used normally.

# Display Control Instruction

Welcome to use our light. The light uses energy-saving LED, long Product life, shockproof, dustproof, DMX receiver and self-running feature, which can produce a variety of vivid lighting effects, easy to operate, suitable for all types of entertainment decoration, architectural lighting industry.

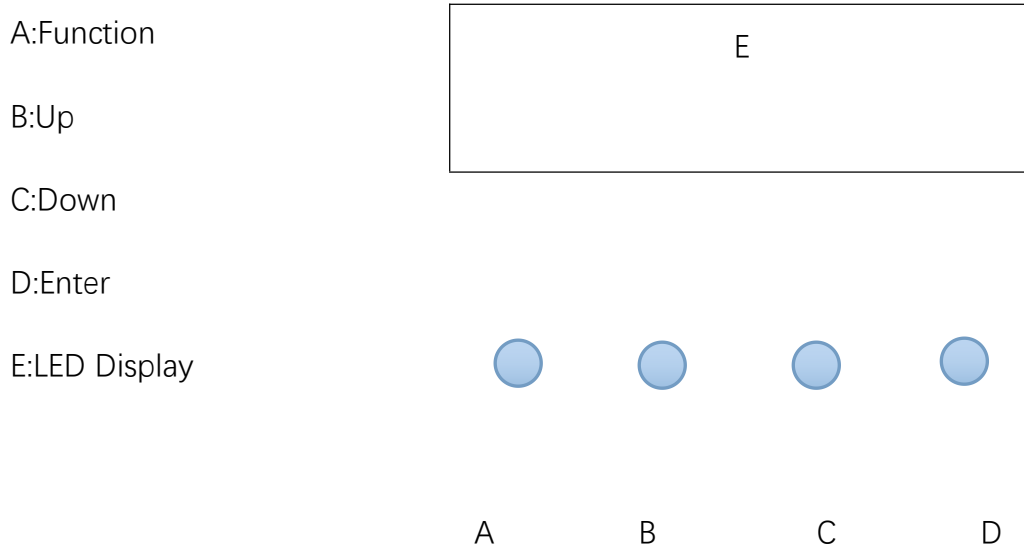

Instructions: Press the function key A cycled out the eight different function effects, digital tube first two digits on behalf of which the current function (see menu). The last two digits represent the functions in which the address code or speed parameters. Press the B or C key to modify the parameter values. Press the D key to confirm.

## Product Introduction

- \* Power Supply: AC90--275V, 50--60HZ
- \* Power consumption: 324W
- \* Fixing lamp: LED 18×18W RGBWA+UV
- \* DMX-Control-channels: 11/29/108/119 DMX Channels
- \* Shuttle: Flash rate: 0--10HZ
- \* Dimmer: 0-100% dimmer
- \* Long Lifespan LEDs (more than 60,000 hours)

## DMX Channel Summary-11 Channels Mode

<b>Channel</b>	<b>Value</b>	<b>Function</b>
<b>CH1</b>	0-255	Total Dimmer
<b>CH2</b>	0-255	Total Strobe/Flash
<b>CH3</b>	26-35	White color
	36-55	Run horse mode1(Color control by CH5-10)
	56-65	Color select (Color control by CH5)
	66-75	Color Jump mode
	76-85	Color Gradual change mode
	86-245	Run horse mode
	246-255	Sound control
<b>CH4</b>	0-255	Run horse mode direction
<b>CH5</b>	0-255	Program Speed adjustment
<b>CH6</b>	0-255	Total Red Dimmer
<b>CH7</b>	0-255	Total Green Dimmer
<b>CH8</b>	0-255	Total Blue Dimmer
<b>CH9</b>	0-255	Total White Dimmer
<b>CH10</b>	0-255	Total Amber Dimmer
<b>CH11</b>	0-255	Total Violet Dimmer

## DMX Channel Summary-29 Channels Mode

Channel	Value	Function
<b>CH1</b>	0-255	Total Dimmer
<b>CH2</b>	0-255	Total Strobe/Flash
<b>CH3</b>	26-35	White color
	36-55	Run horse mode1(Color control by CH5-10)
	56-65	Color select (Color control by CH5)
	66-75	Color Jump mode
	76-85	Color Gradual change mode
	86-245	Run horse mode
	246-255	Sound control
<b>CH4</b>	0-255	Run horse mode direction
<b>CH5</b>	0-255	Program Speed adjustment
<b>CH6</b>	0-255	Total Red Dimmer
<b>CH7</b>	0-255	Total Green Dimmer
<b>CH8</b>	0-255	Total Blue Dimmer
<b>CH9</b>	0-255	Total White Dimmer
<b>CH10</b>	0-255	Total Amber Dimmer
<b>CH11</b>	0-255	Total Violet Dimmer
<b>CH12-29</b>	0-255	1-18# LED color select

## DMX Channel Summary-108 Channels Mode

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
<b>R</b>	1	7	13	19	25	31	37	43	49	55	61	67	73	79	85	91	97	103
<b>G</b>	2	8	14	20	26	32	38	44	50	56	62	68	74	80	86	92	98	104
<b>B</b>	3	9	15	21	27	33	39	45	51	57	63	69	75	81	87	93	99	105
<b>W</b>	4	10	16	22	28	34	40	46	52	58	64	70	76	82	88	94	100	106
<b>A</b>	5	11	17	23	29	35	41	47	53	59	65	71	77	83	89	95	101	107
<b>UV</b>	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108

## DMX Channel Summary-119 Channels Mode

Channel	Value	Function
<b>CH12</b>	0-255	Total Dimmer
<b>CH13</b>	0-255	Total Strobe/Flash
<b>CH14</b>	26-35	White color
	36-55	run horse mode1(Color control by CH5-10)
	56-65	Color select (Color control by CH5)
	66-75	Color Jump mode
	76-85	Color Gradual change mode
	86-245	Run horse mode
	246-255	Sound control
<b>CH15</b>	0-255	Run horse mode direction
<b>CH16</b>	0-255	Program Speed adjustment
<b>CH17</b>	0-255	Total Red Dimmer
<b>CH18</b>	0-255	Total Green Dimmer
<b>CH19</b>	0-255	Total Blue Dimmer
<b>CH20</b>	0-255	Total White Dimmer
<b>CH21</b>	0-255	Total Amber Dimmer
<b>CH22</b>	0-255	Total Violet Dimmer
<b>CH12-119</b>	0-255	Point control

## 119CH mode LED point control channel

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
<b>R</b>	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108	114
<b>G</b>	13	19	25	31	37	43	49	55	61	67	73	79	85	91	97	103	109	115
<b>B</b>	14	20	26	32	38	44	50	56	62	68	74	80	86	92	98	104	110	116
<b>W</b>	15	21	27	33	39	45	51	57	63	69	75	81	87	93	99	105	111	117
<b>A</b>	16	22	28	34	40	46	52	58	64	70	76	82	88	94	100	106	112	118
<b>UV</b>	17	23	29	35	41	47	53	59	65	71	77	83	89	95	101	107	113	119

## Display Control Instruction

No	Function
<i>R00 1-255</i>	DMX Address
<i>ch 11-29- 108</i>	11/28/108/119 channel DMX Address
<i>cc00-99</i>	Color jump mode
<i>E000-99</i>	Gradual change mode
<i>E100-99</i>	Run horse mode
<i>P000-99</i>	Run horse mode
<i>t100-99</i>	Run horse mode
<i>P000-99</i>	Run horse mode
<i>t100-99</i>	Run horse mode
<i>tU00-99</i>	Run horse mode
<i>bE00-99</i>	Sound mode
<i>r00 1-255</i>	Red Color 0-255
<i>G00 1-255</i>	Green Color 0-255
<i>b00 1-255</i>	Blue Color 0-255
<i>o00 1-255</i>	White Color 0-255
<i>y00 1-255</i>	Amber Color 0-255
<i>P00 1-255</i>	Violet Color 0-255
<i>1d0 1- 14</i>	ID