



# RPS-4M/W2, RPS-4M/W4 Quick Start

v1.0, January 2021

## Packing List

 
In addition to this guide, the package includes the following items:



RPS-4M/W2  
RPS-4M/W4



Screw Driver

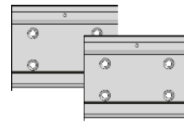

60 mm DIN-Rail  
Clip x 2



M3 x 6L  
Screw \* 8

## Resources

 
How to search for drivers, manuals and spec information on ICP DAS website.

## Technical Support


[service@icpdas.com](mailto:service@icpdas.com)

[www.icpdas.com](http://www.icpdas.com)

- For Mobile Web

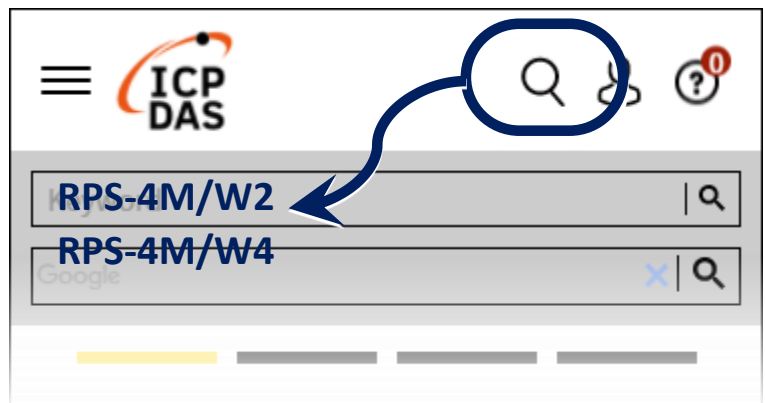


- For Desktop Web

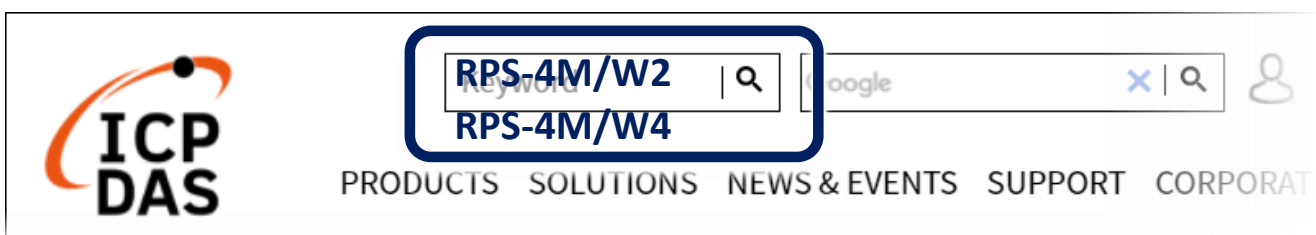 


# Pin Assignments
 
## 1. DC Output

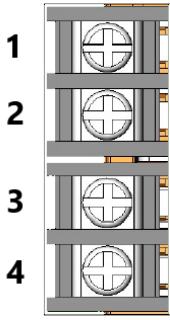


Pin	Description
1	Power output +24 V <sub>DC</sub>
2	Power output +24 V <sub>DC</sub>
3	Ground
4	Ground

## 2. Relay Output

 


Pin	Description
1	Relay output: NO.
2	Relay output: COM

## 3. A.C. Power Input

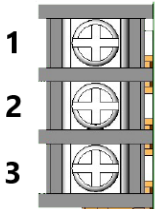 

Pin	Description
1	Live Wire (L)
2	Naught wire (N)
3	Earth Wire (G)

## 4. RS-485 Interface

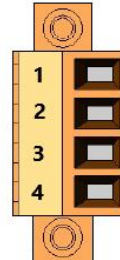 

Pin	Description
1	Data+ (D+)
2	Data- (D-)
3	Data+ (D+)
4	Data- (D-)

## How to Start

Boot RPS-4M/W2 or RPS-4M/W4 with Initial mode. The default IP address is 192.168.255.1. Use this IP address open the configuration web.

