

230w BEAM MOVE HEAD LIGHT



Channel description

Channel	Name	Data	Introduce
1	Color	0-4	White
		5-9	White+Color1
		10-14	Color1
		15-19	Color1+Color2
		20-24	Color2
		25-29	Color2+Color3
		30-34	Color3
		35-39	Color3+Color4
		40-44	Color4
		45-49	Color4+Color5
		50-54	Color5
		55-59	Color5+Color6
		60-64	Color6
		65-69	Color6+Color7
		70-74	Color7
		75-79	Color7+Color8
		80-84	Color8
		85-89	Color8+Color9
		90-94	Color9
		95-99	Color9+Color10
		100-104	Color10
		105-109	Color10~Color11
		110-114	Color11
		115-119	Color11+Color12
		120-124	Color12
		125-129	Color12+Color13
130-134	Color13		
135-139	Color13+Color14		
140-144	Color14		
145-149	Color14+White		
150-200	Forwards rainbow from fast to slow		
201-255	Backwards rainbow from slow to fast		
2	Strobe	0-3	Close
		4-103	Fadeout slow to fast
		104-107	Open
		108-207	Free Strobe slow to fast

		208-212	Open
		213-251	Pulse Strobe slow to fast
		252-255	Open
3	Dimmer	0~255	Dimmer intensity from 0% to 100%
4	Gobo	0-4	White
		5-9	Gobo1
		10-14	Gobo2
		15-19	Gobo3
		20-24	Gobo4
		25-29	Gobo5
		30-34	Gobo6
		35-39	Gobo7
		40-44	Gobo8
		45-49	Gobo9
		50-54	Gobo10
		55-59	Gobo11
		60-64	Gobo12
		65-69	Gobo13
		70-125	Forwards rainbow from fast to slow
		126-130	Stop
		131-190	Backwards rainbow from slow to fast
		191-195	Gobo1 Shake, Slow to fast
		196-200	Gobo2 Shake, Slow to fast
		201-205	Gobo3 Shake, Slow to fast
		206-210	Gobo4 Shake, Slow to fast
		216-220	Gobo6 Shake, Slow to fast
		221-225	Gobo7 Shake, Slow to fast
		226-230	Gobo8 Shake, Slow to fast
231-235	Gobo9 Shake, Slow to fast		
236-240	Gobo10 Shake, Slow to fast		
241-245	Gobo11 Shake, Slow to fast		
246-250	Gobo12 Shake, Slow to fast		
251-255	Gobo13 Shake, Slow to fast		
5	Prism	0-127	Close Prism
		128-255	Insert Prism
6	Prism.Rot	0-127	0~400 degree
		128-187	Forwards rainbow from fast to slow
		188-195	Stop
		196-255	Backwards rainbow from slow to fast
7	Colorful	0-127	

		128-255	Insert colorful
8	Frost	0~127	
		128~255	Insert frost
9	Zoom	0~255	Zoom Large to small
10	PAN	0~255	Pan movement by 540
11	PAN fine	0~255	Tilt movement by 270
12	TILT	0~255	Fine control of pan movement
13	TILT fine	0~255	Fine control of tilt movement
14	Macro Function	0~255	Close frost
15	Reset	100-105	Lamp Off (Over 3 seconds)
		200-205	Lamp on (Over 3 seconds)
		210-215	Reset XY(over 3 seconds)
		220-235	Reset effect moto(over 3 seconds)
		240-255	Reset all(over 3 seconds)
16	lamp open	200-205	open
		26-100	shut