

EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com


Ducati Multistrada V4
Tail Tidy Instructions






Kit Contents PRN015778


- Ⓐ 2 x M4 x 12mm Black Button Bolts
- Ⓑ 2 x Light Spacer
- Ⓒ 2 x Indicator Shields
- Ⓓ 2 x M5 x 16mm Black Button Bolts
- Ⓔ 2 x M5 x 12mm Countersunk Screw
- Ⓕ 2 x M6 x 16mm Caphead
- Ⓖ 2 x M6 x 25mm Black Button Bolts
- Ⓗ 2 x Large Spacer
- Ⓘ 4 x Indicator Cups
- Ⓙ 4 x M5 x 12mm Black Button Bolts
- Ⓚ 4 x Small Spacer
- Ⓛ 4 x M6 x 12mm Black Button Bolts


EVERTECH[®]
PERFORMANCE

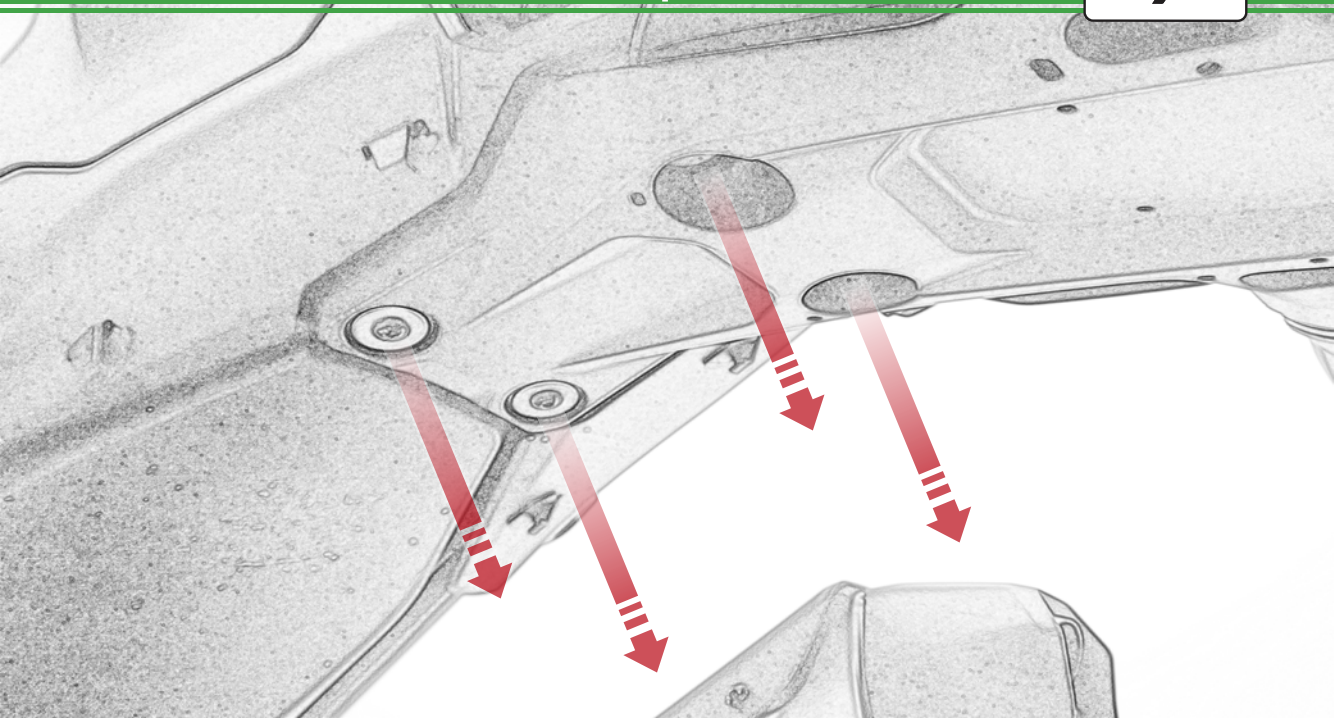


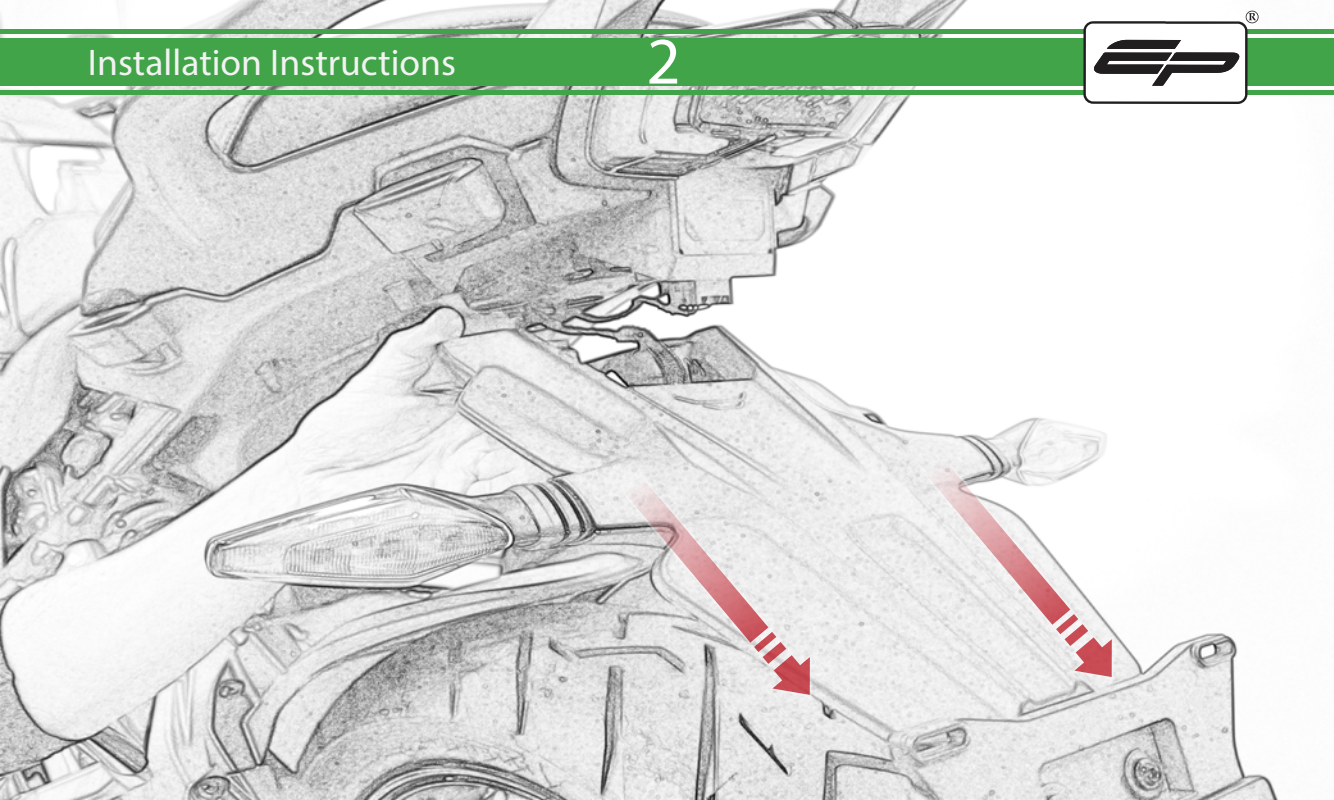


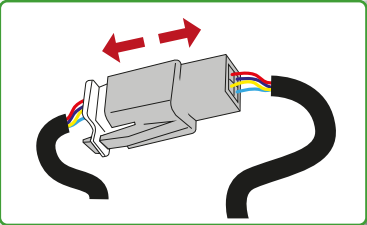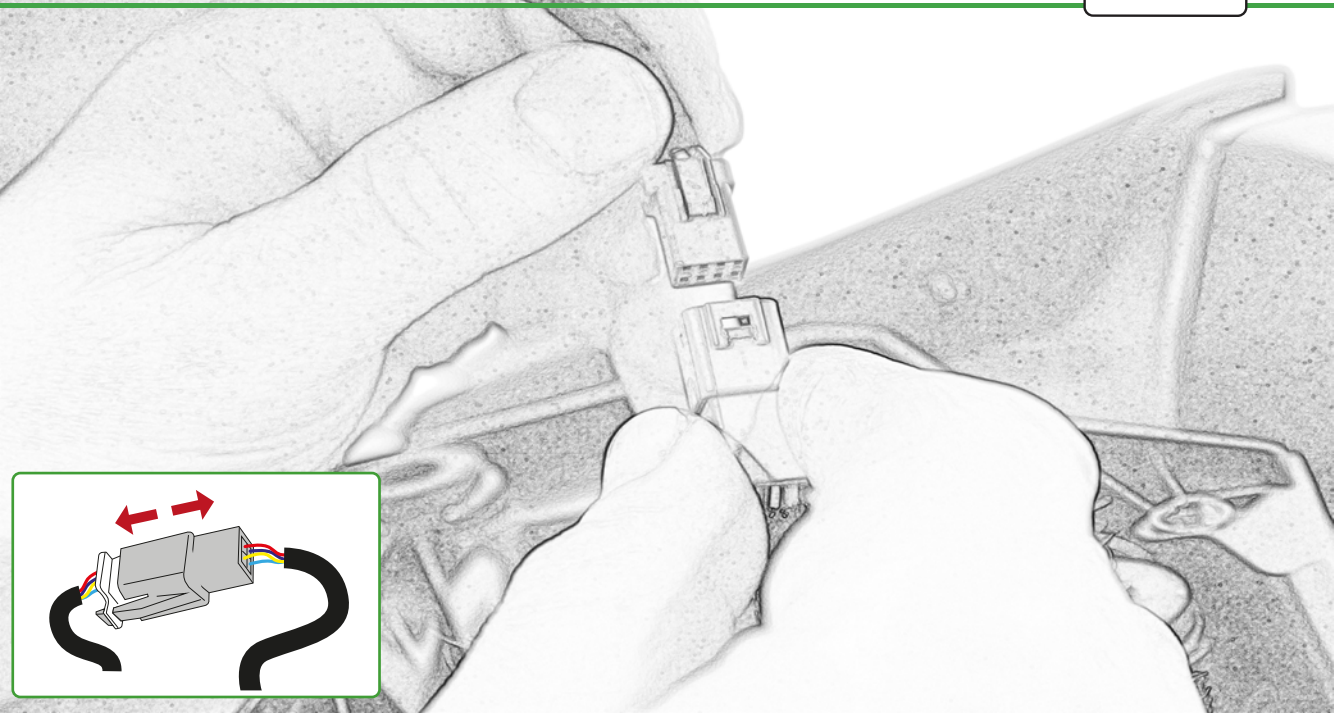


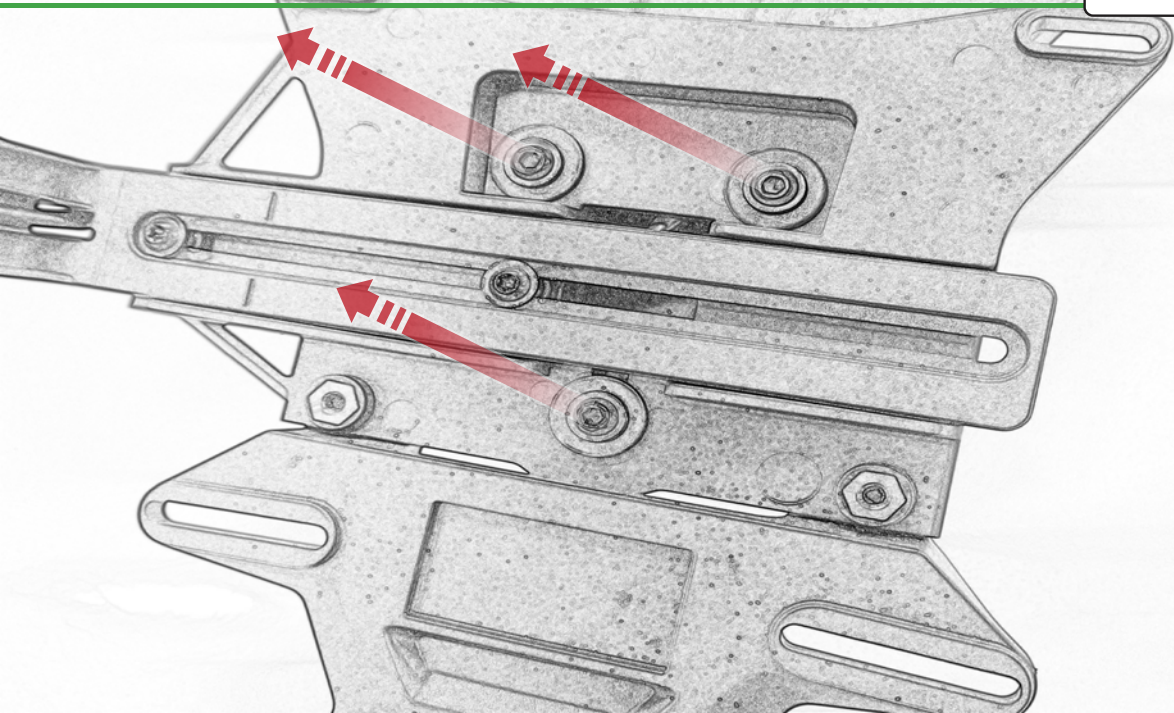



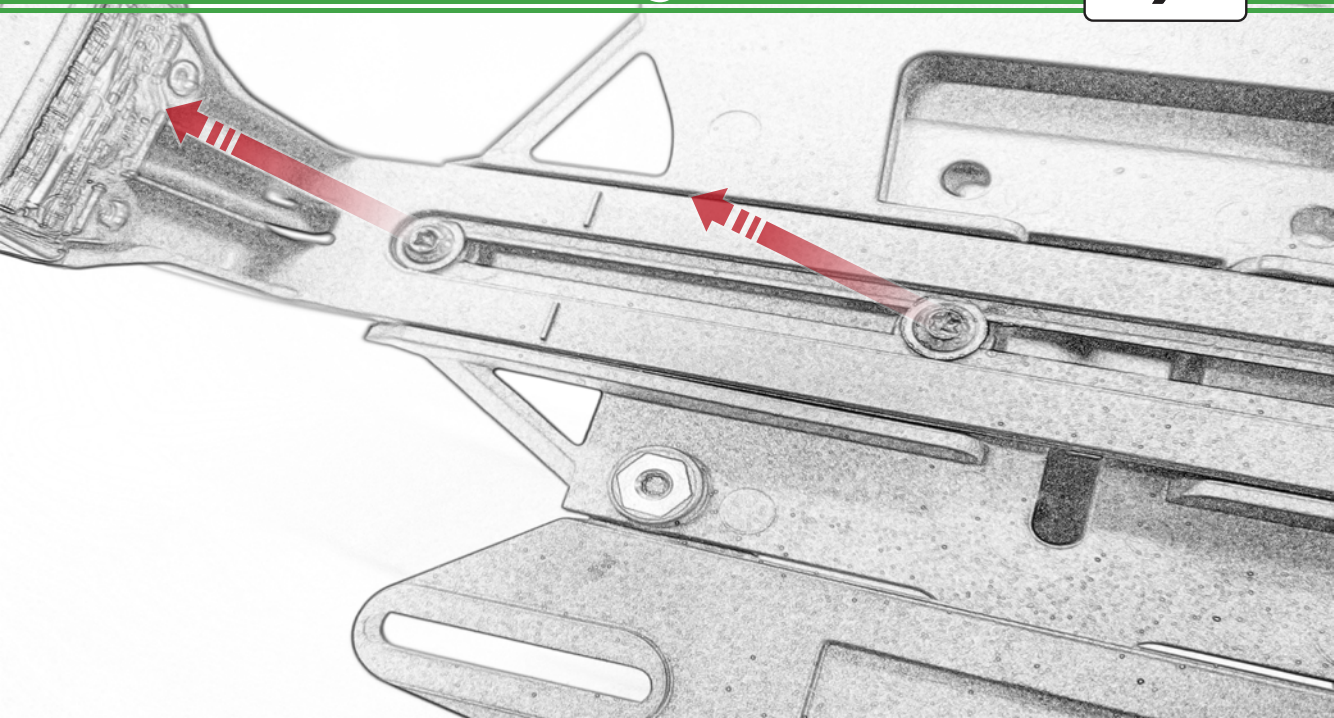



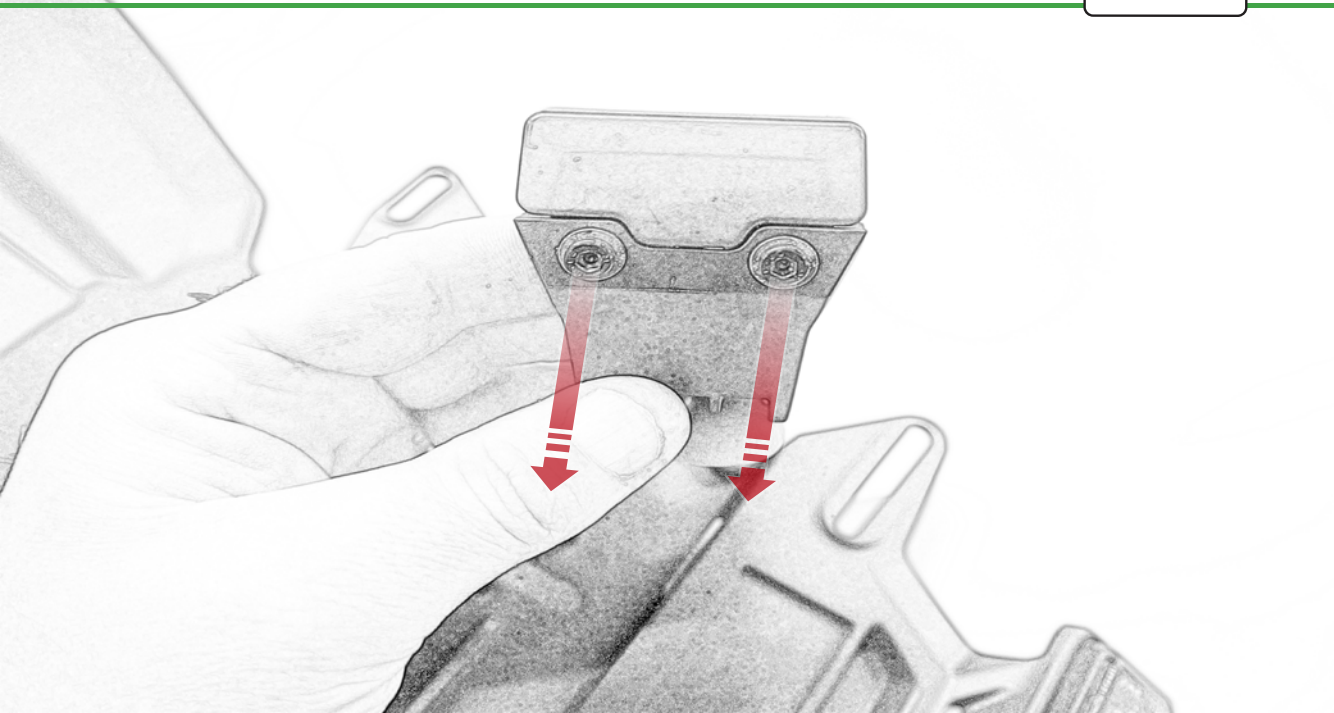


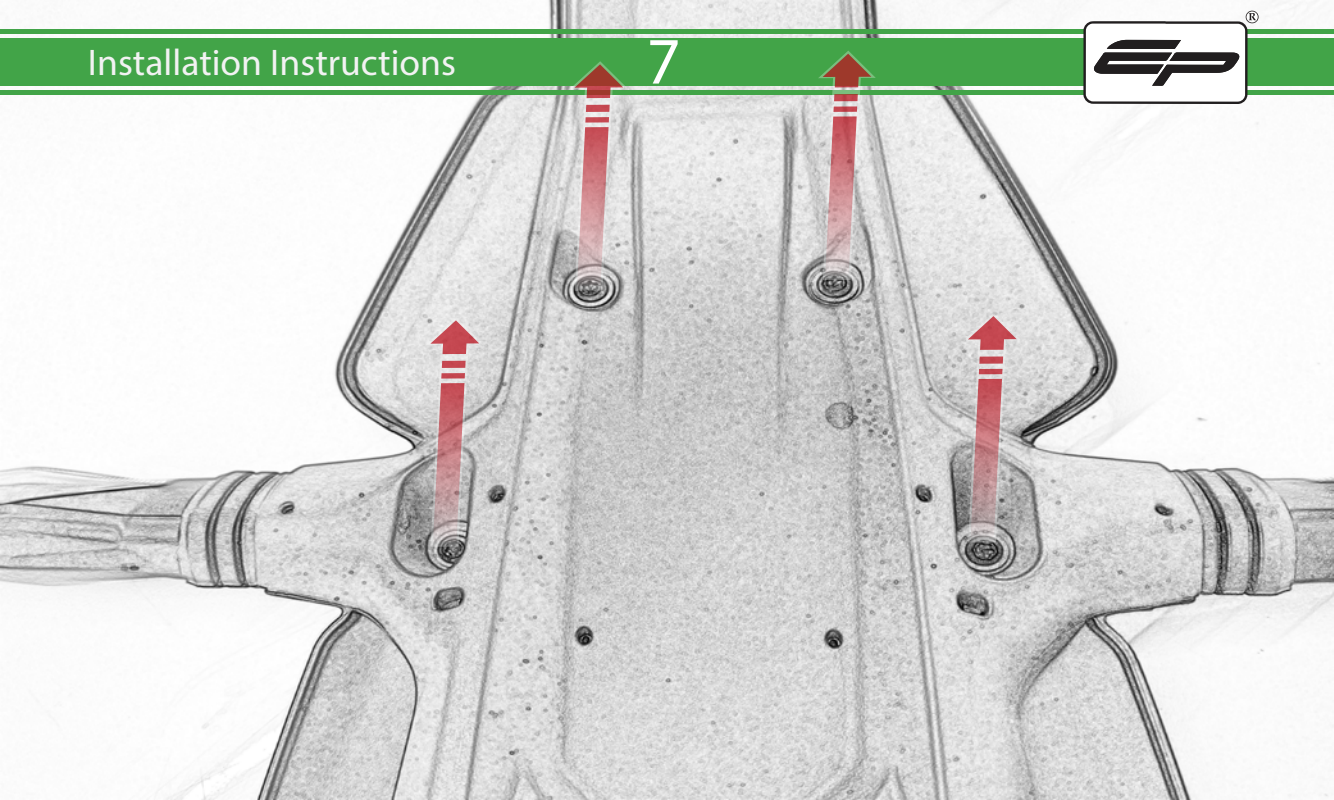


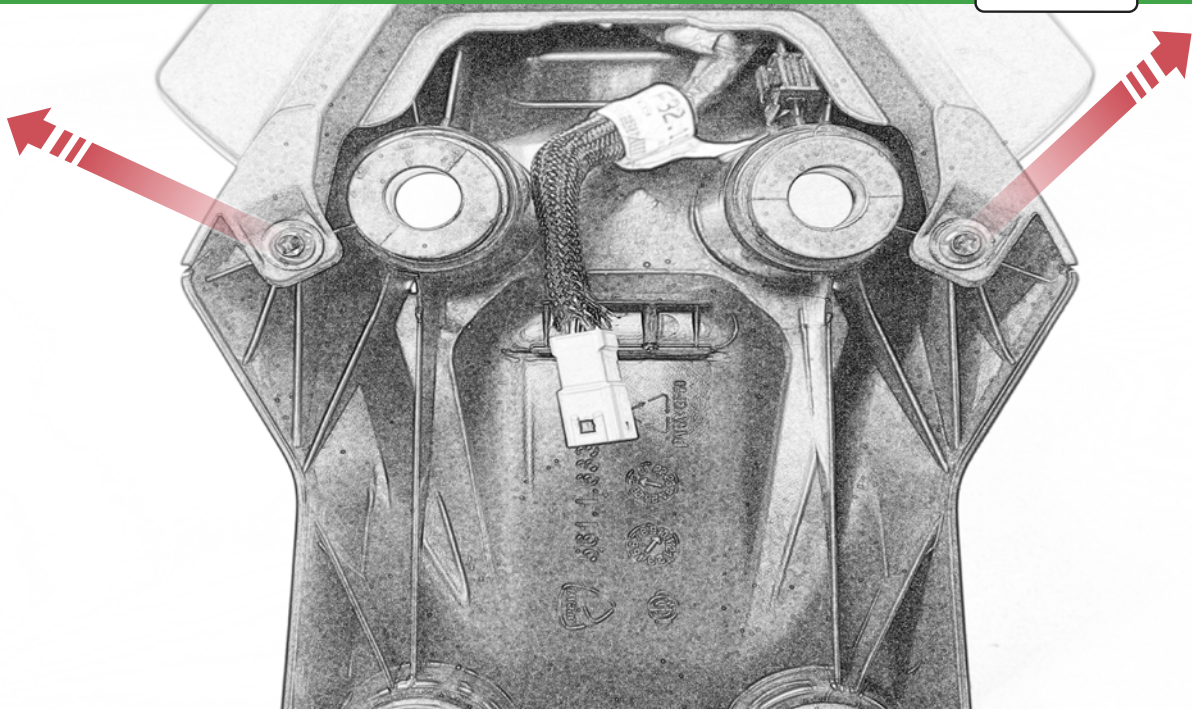


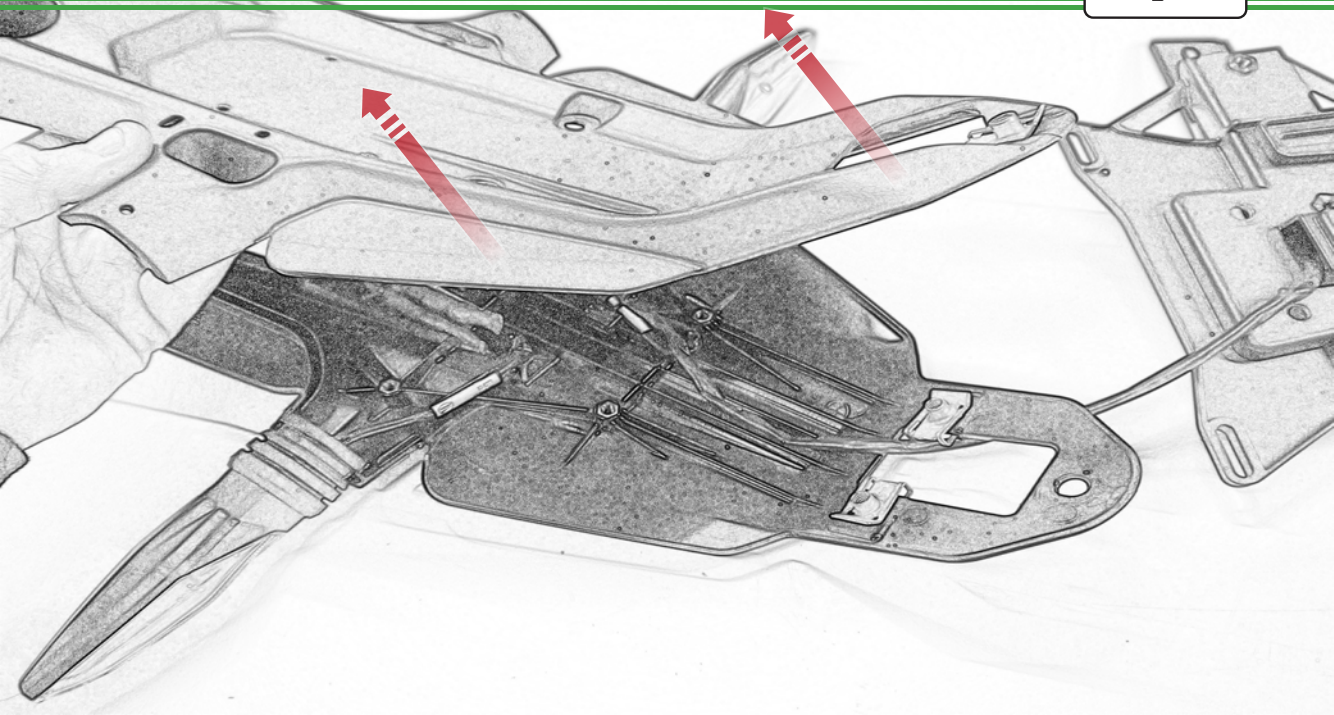


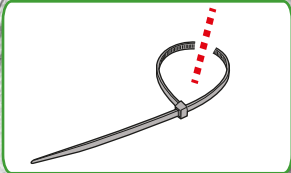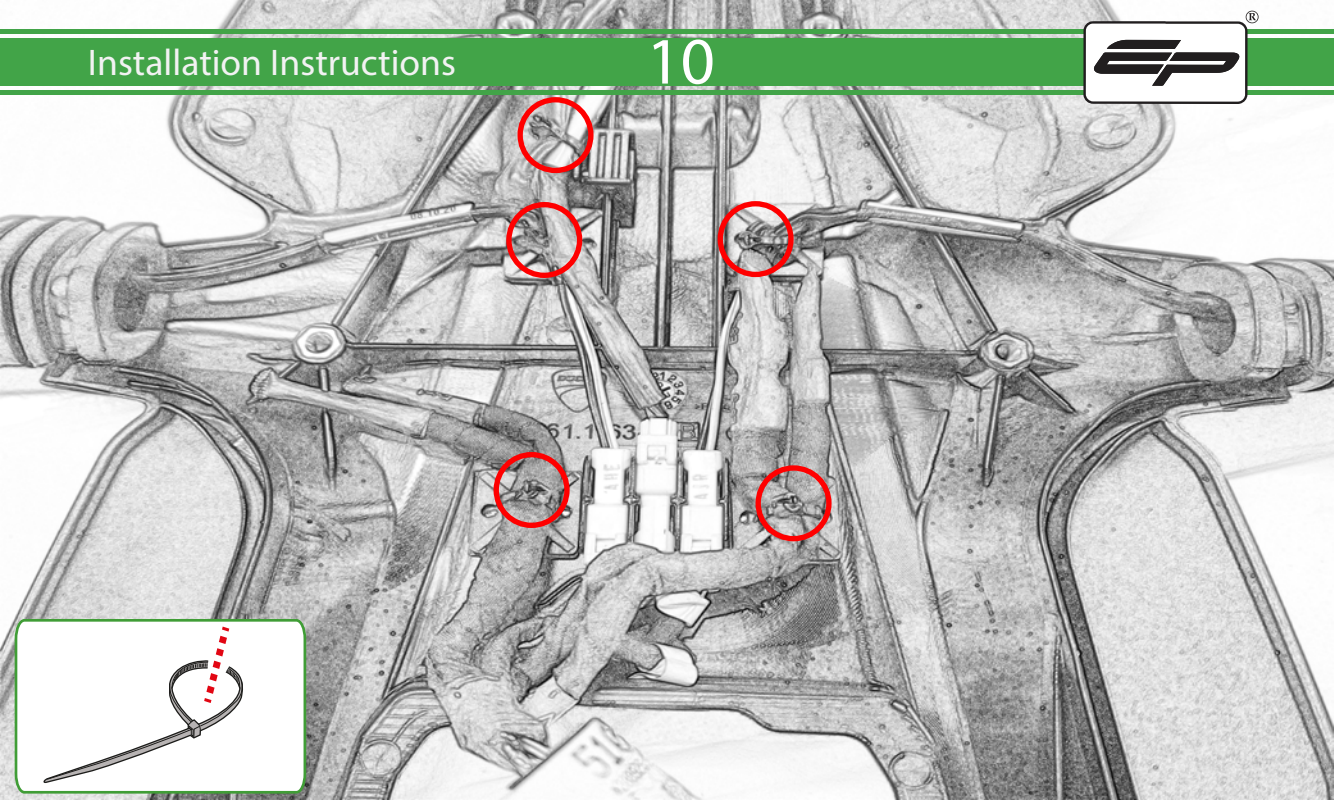


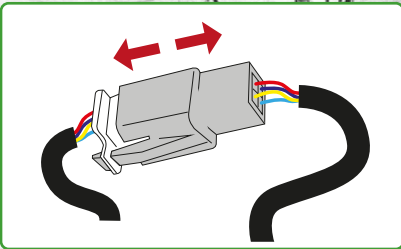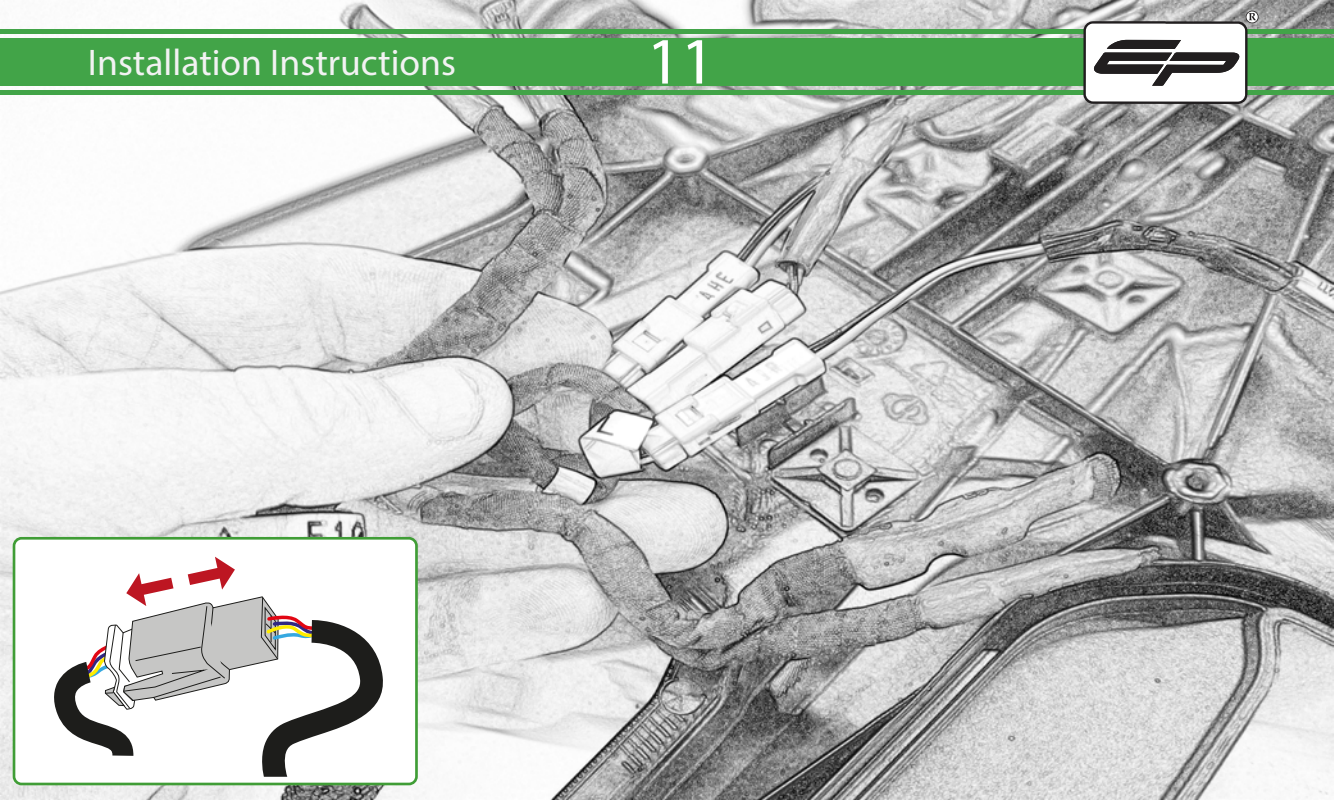

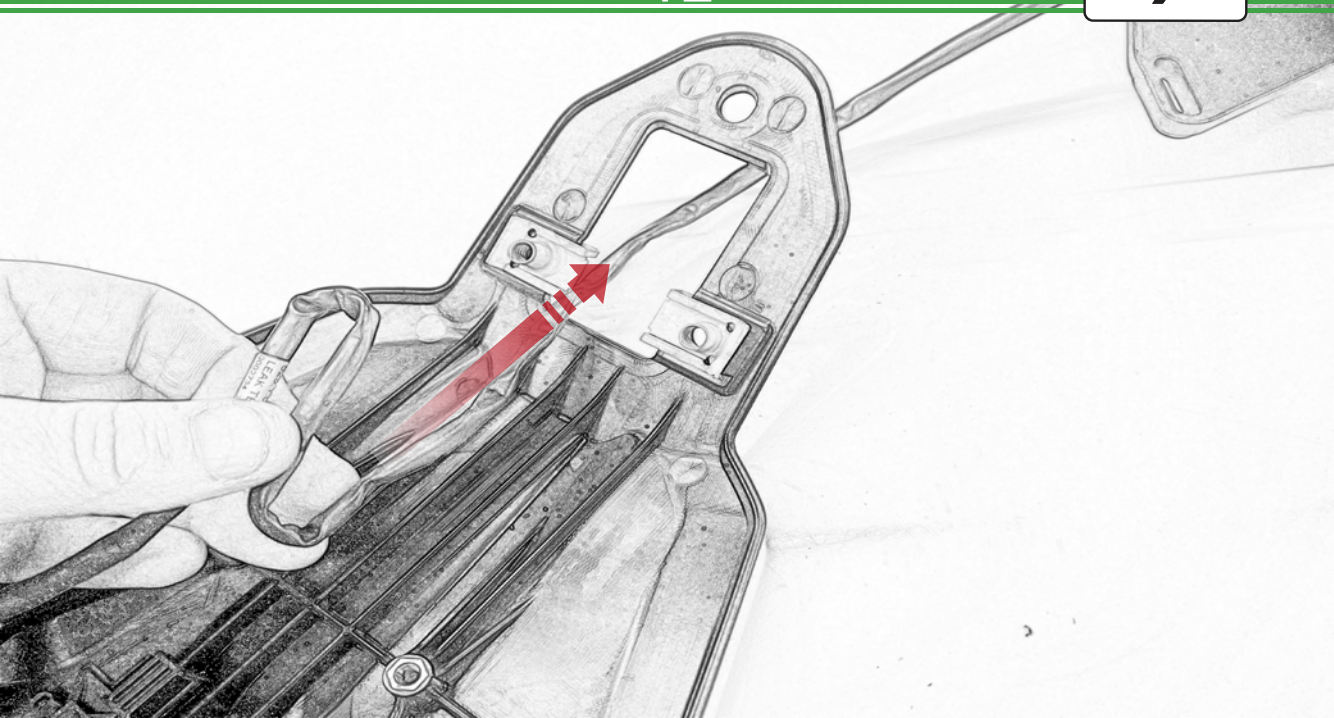


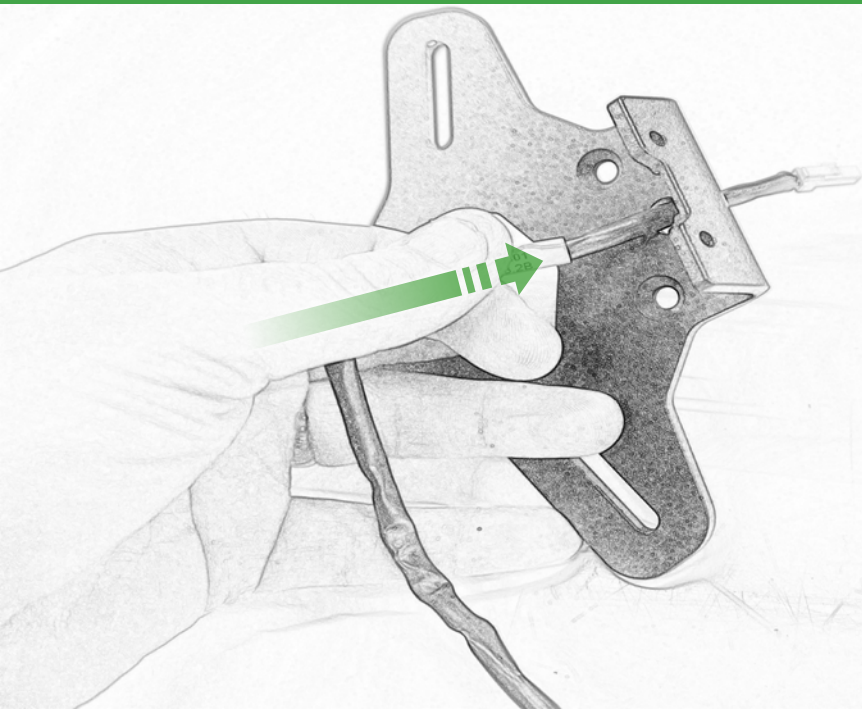

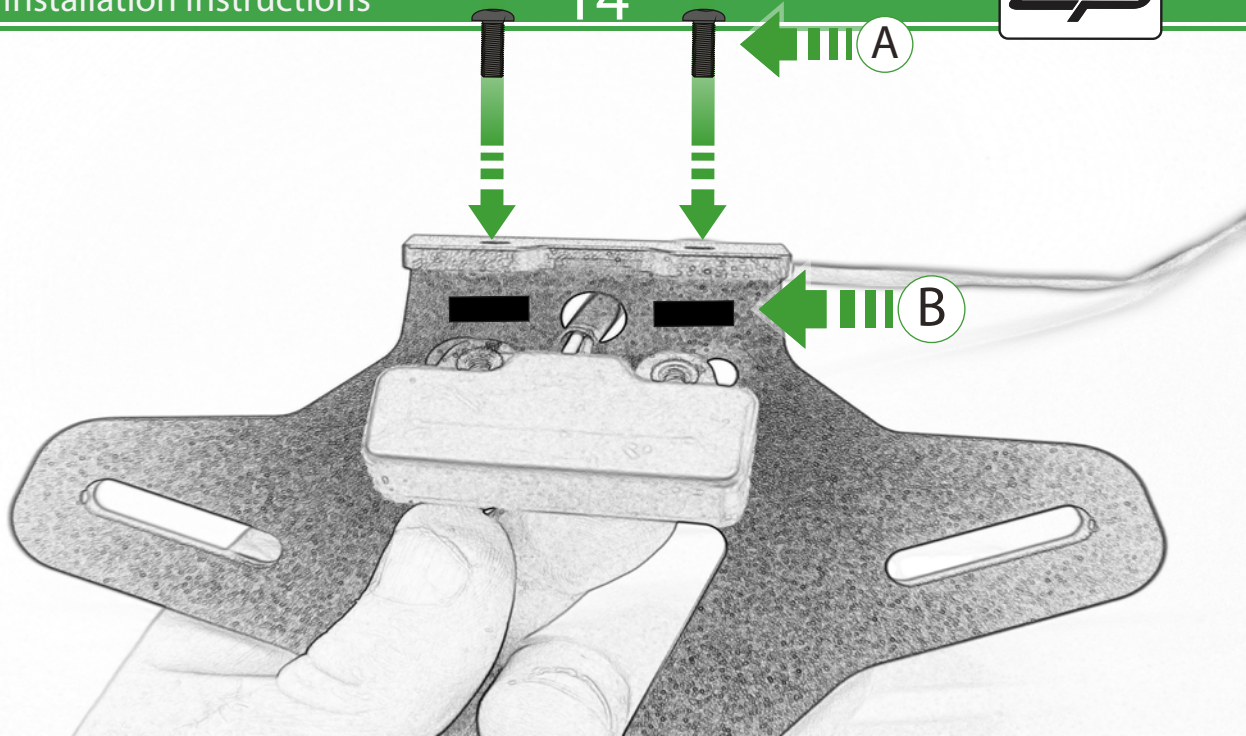

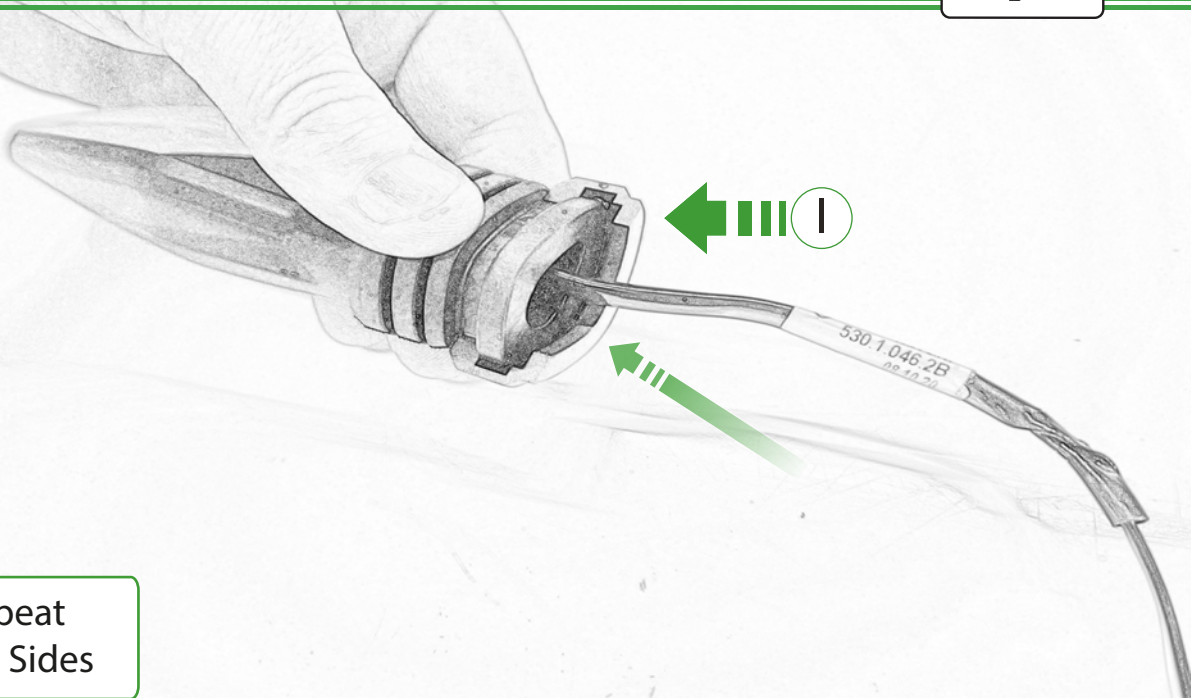


Repeat
Both Sides

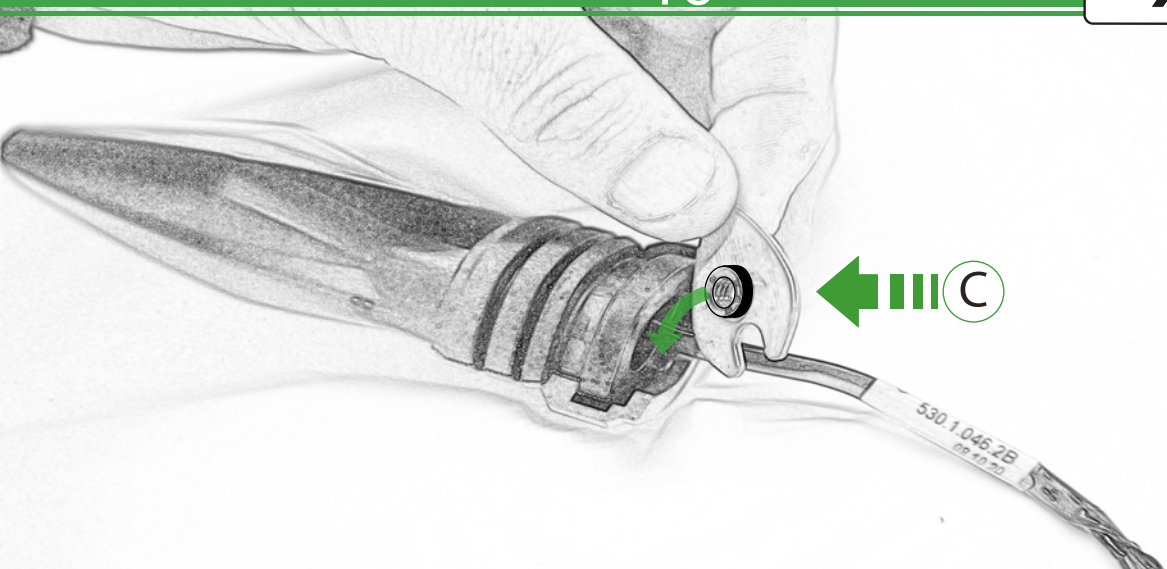

Repeat
Both Sides




Ensure the insert is
facing the indicator
on installation

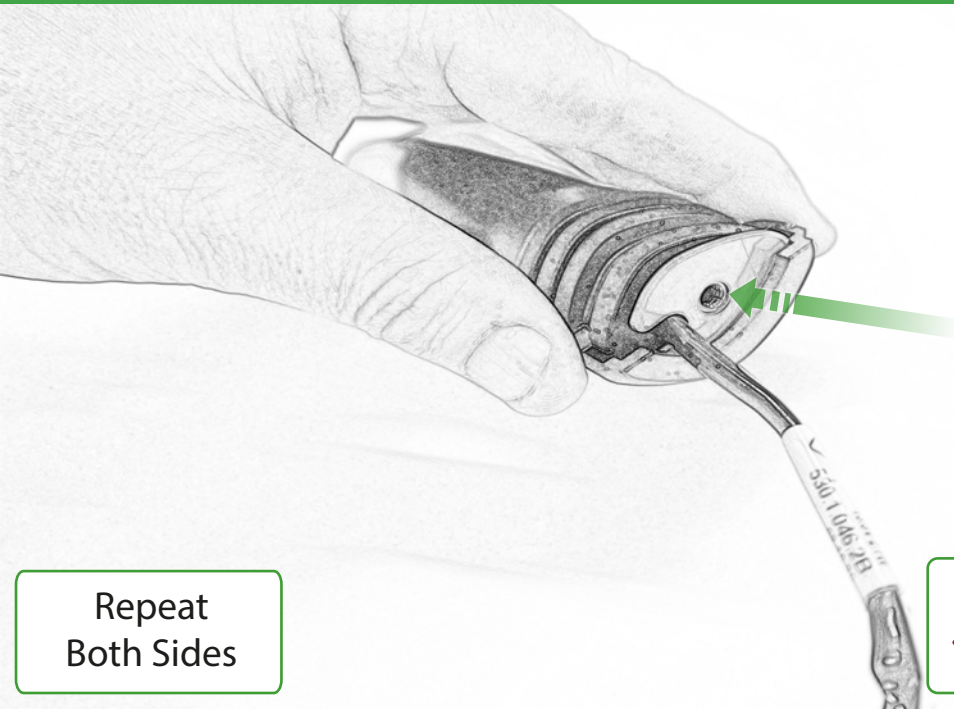


Repeat
Both Sides




Ensure the insert is
facing the indicator
on installation

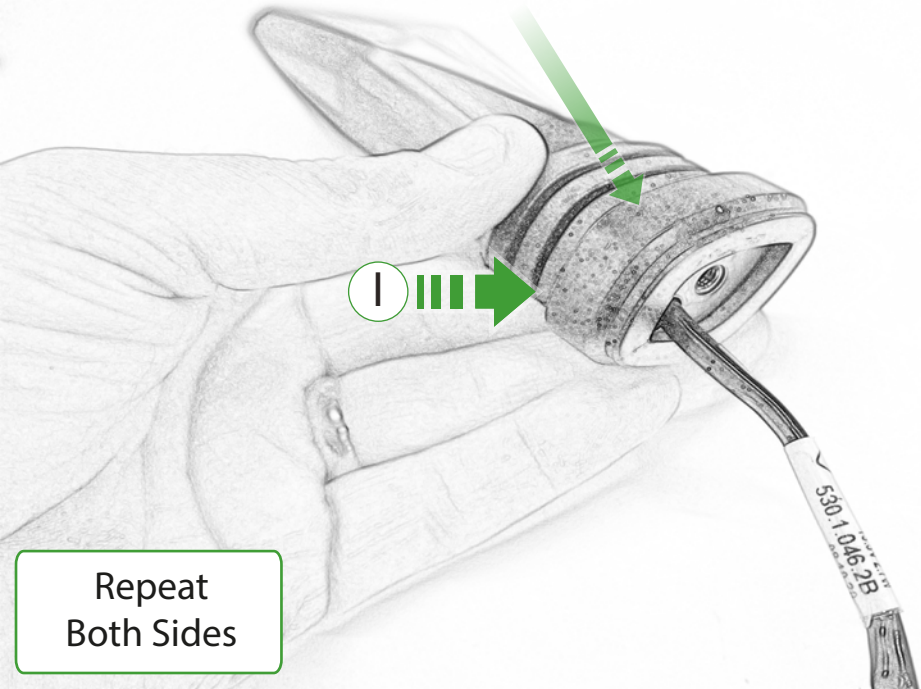

Repeat
Both Sides

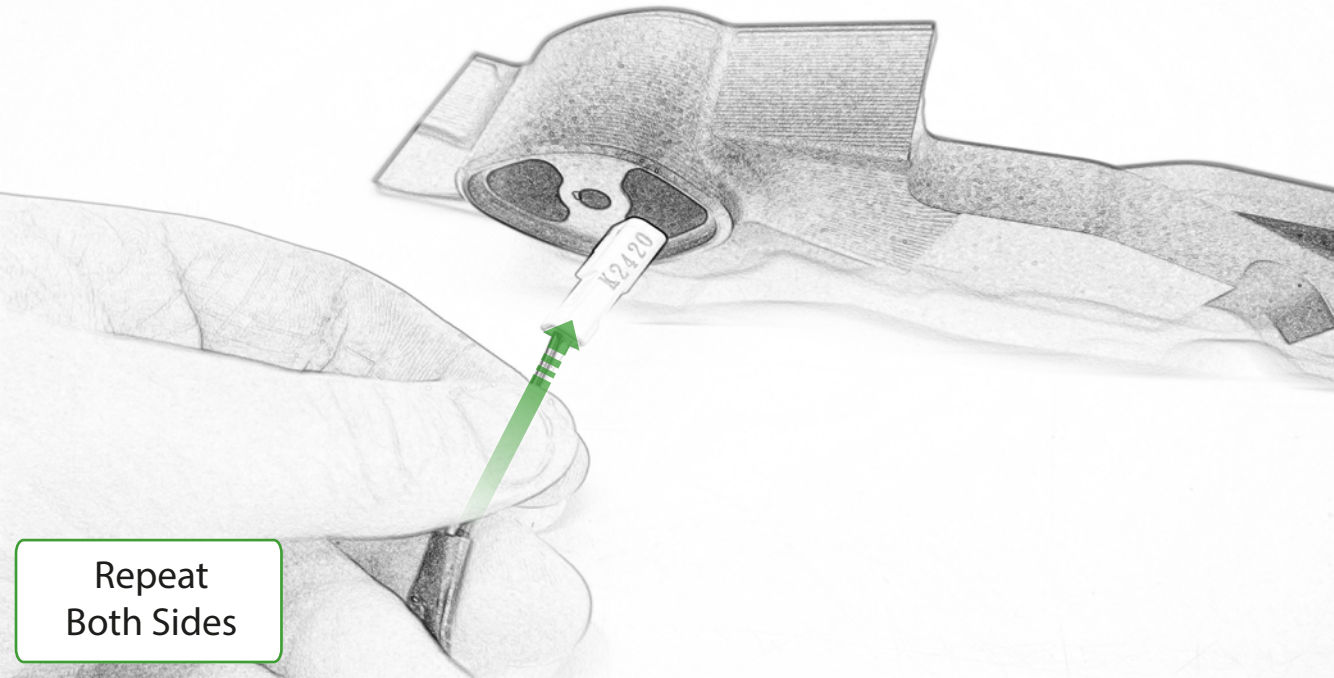

Repeat
Both Sides

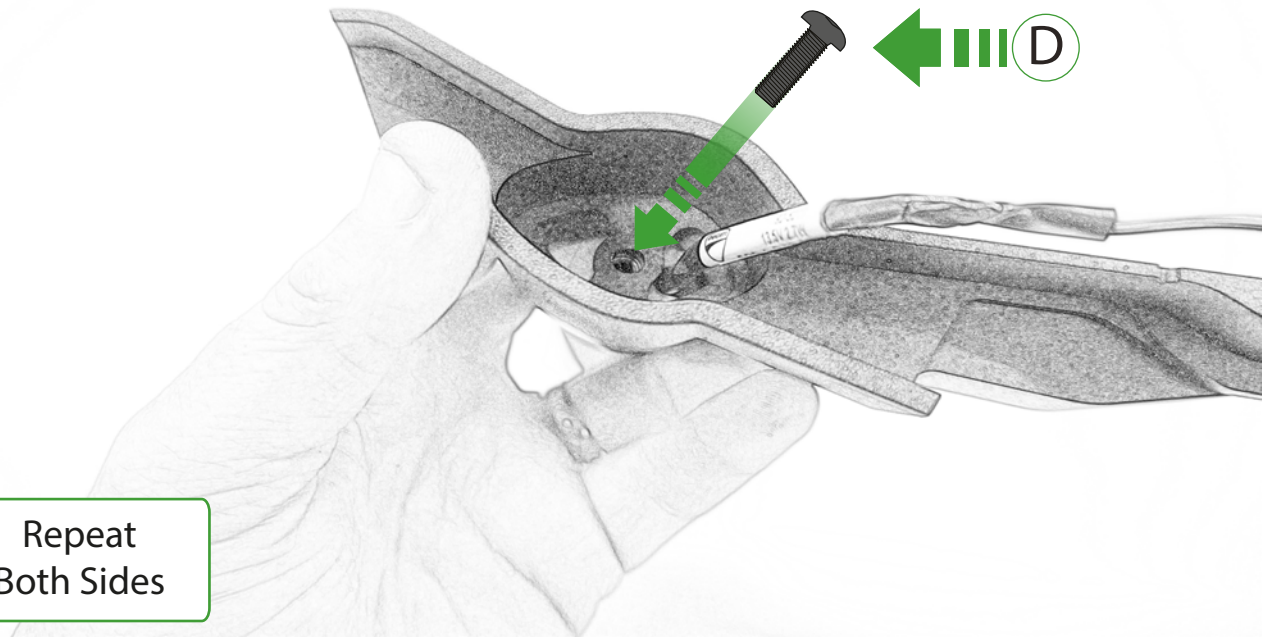

Repeat
Both Sides