



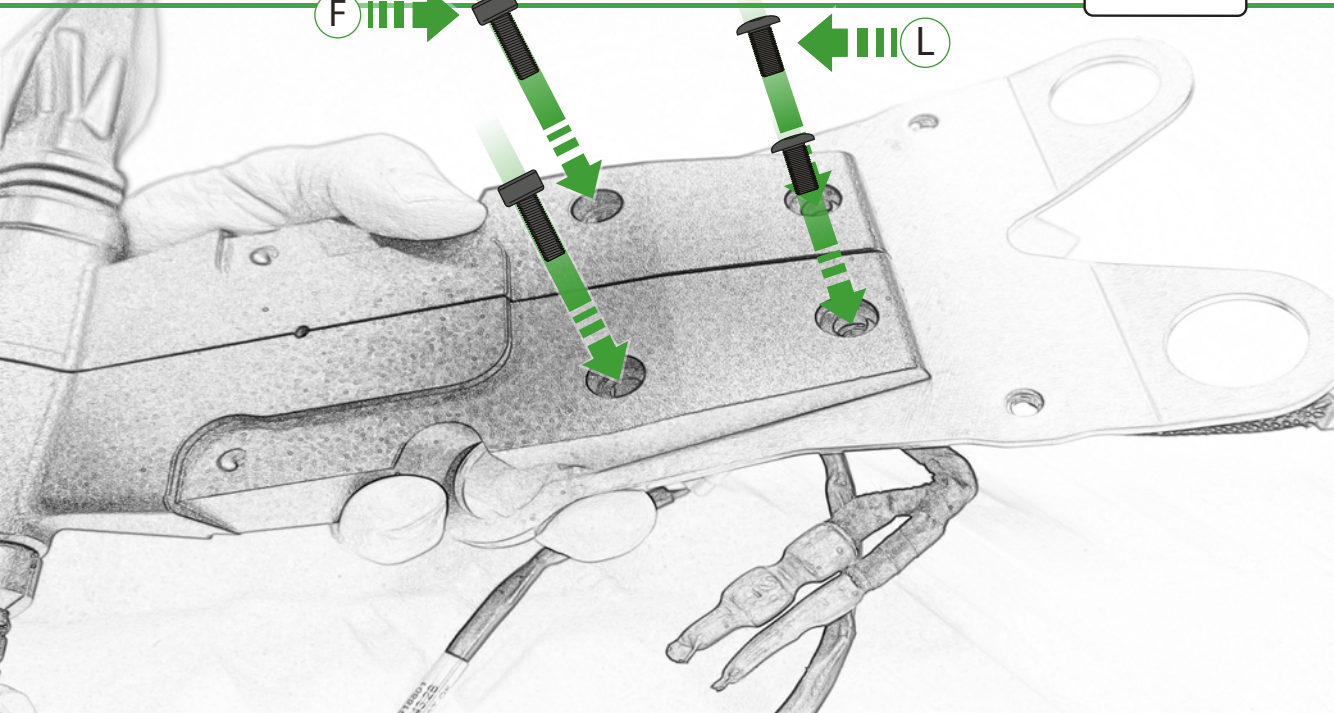



F IIII →



← IIII L

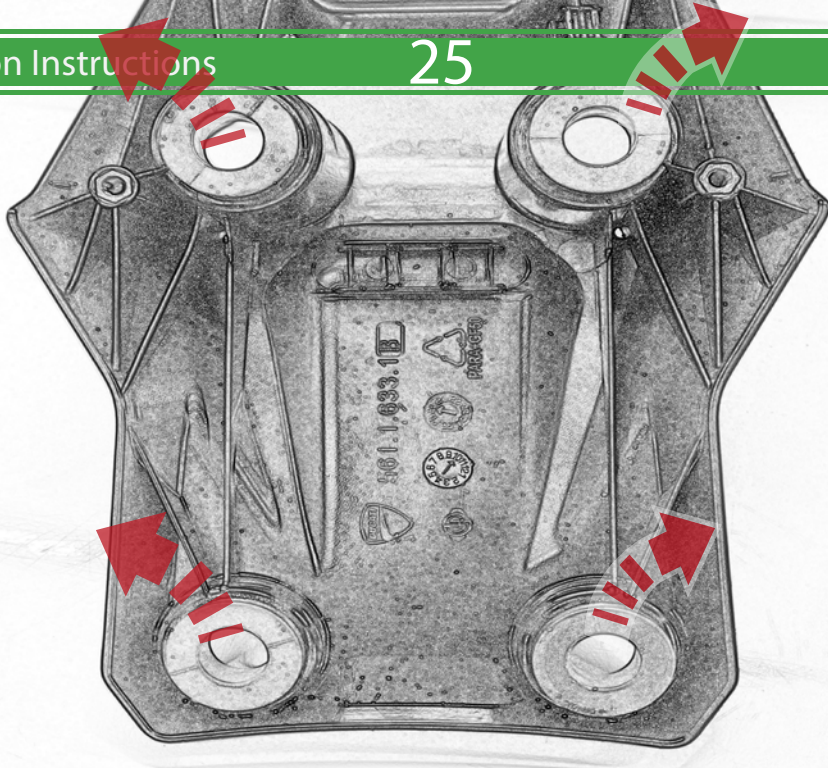




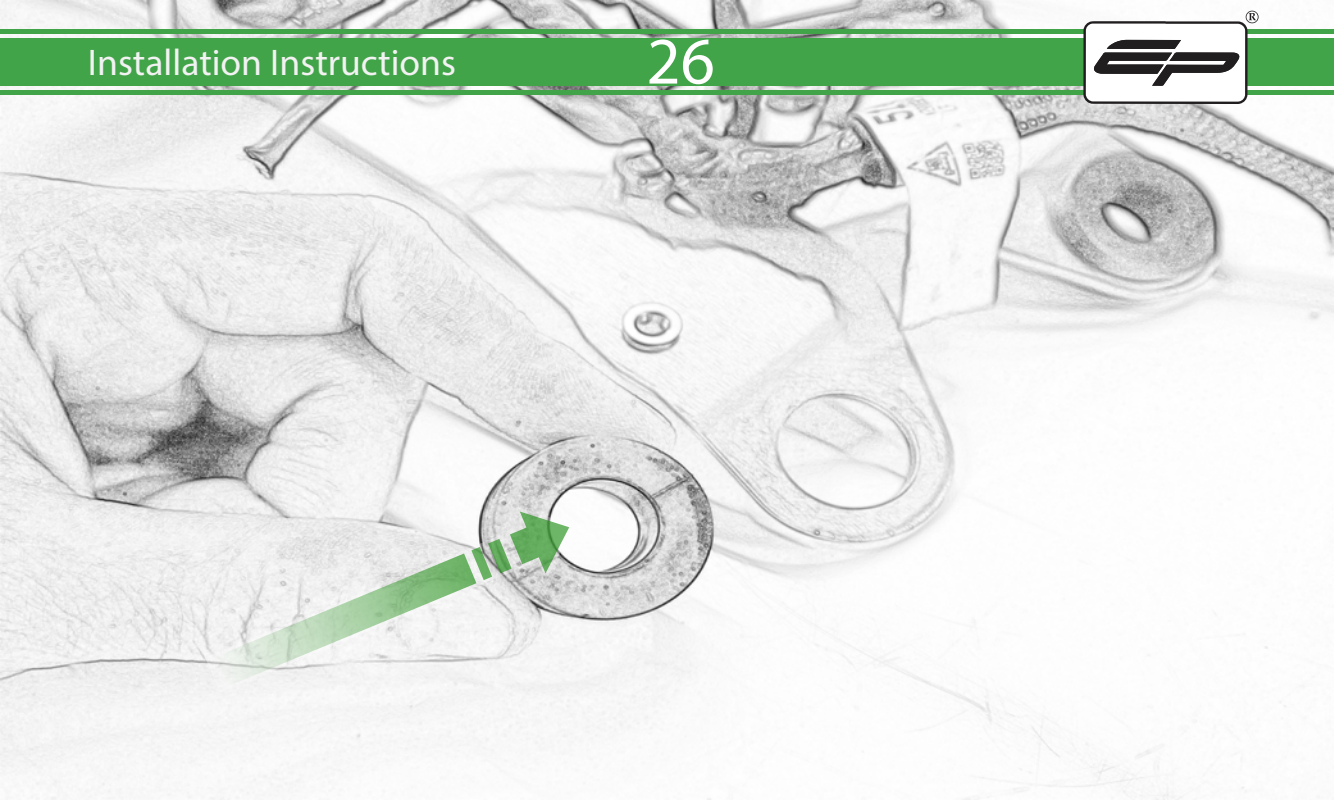

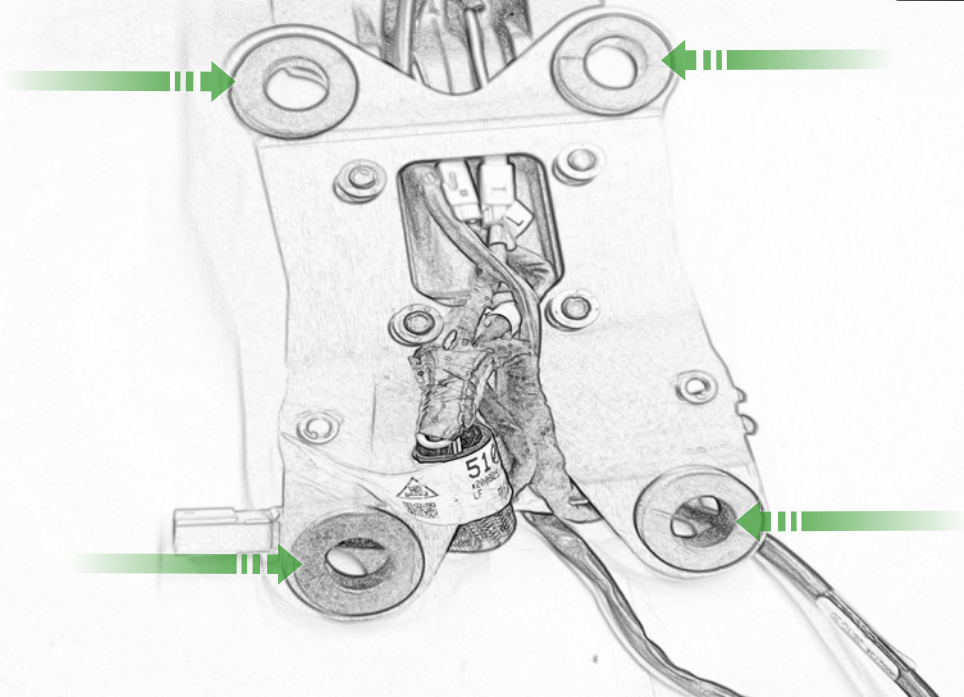


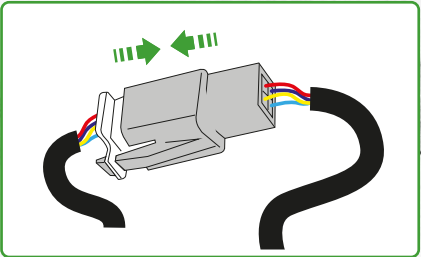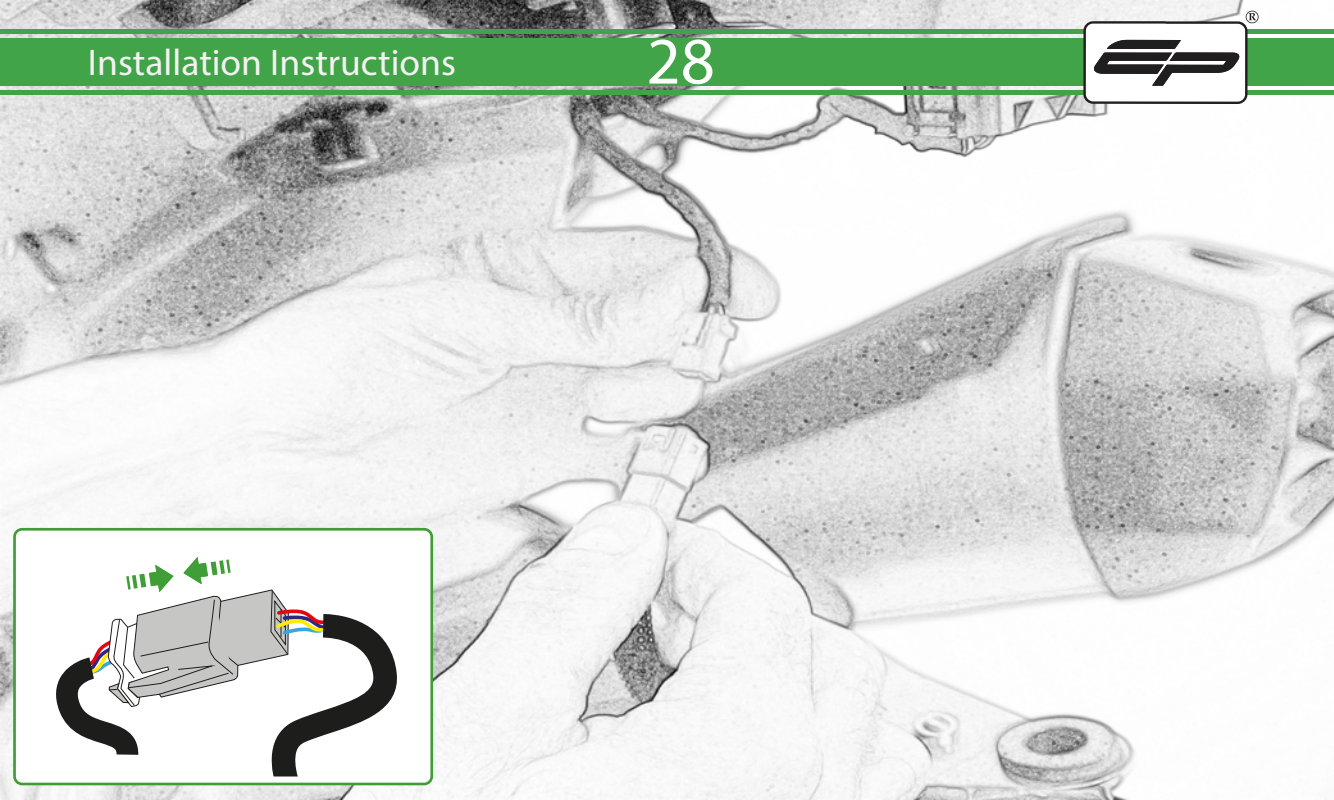


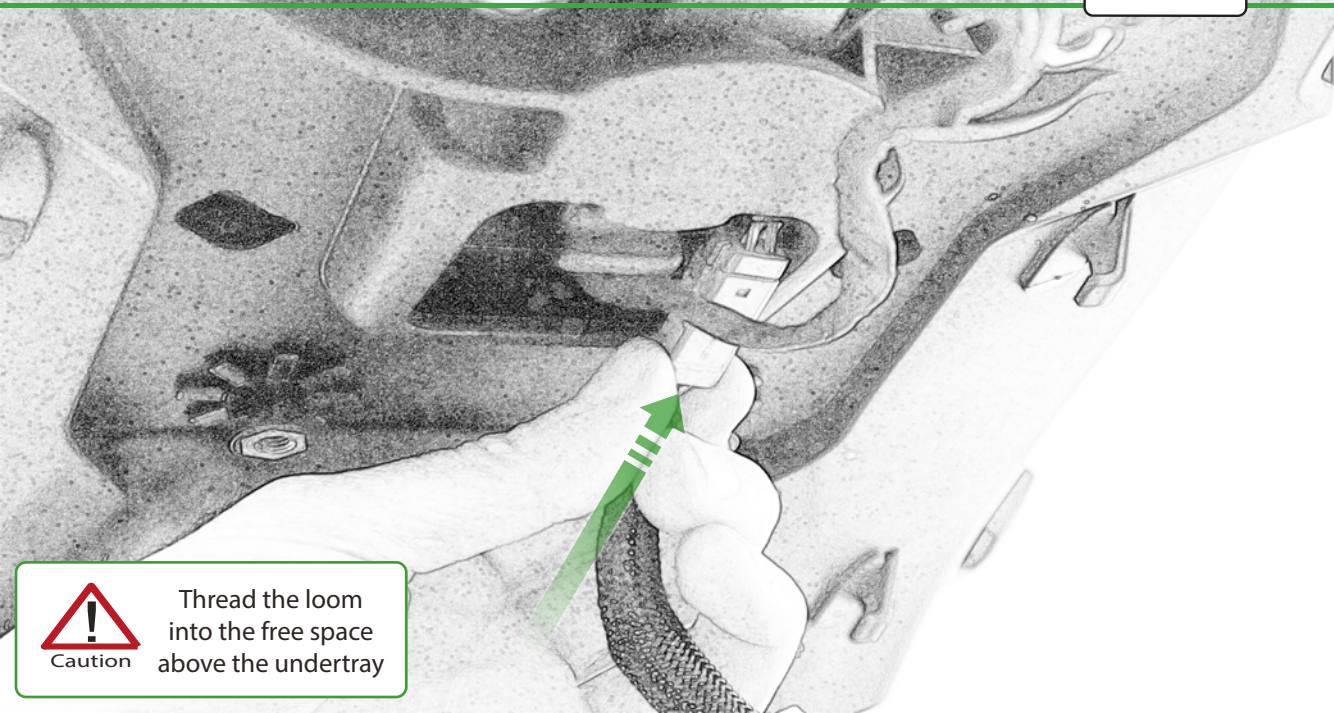



Caution

Thread the loom into the free space above the undertray

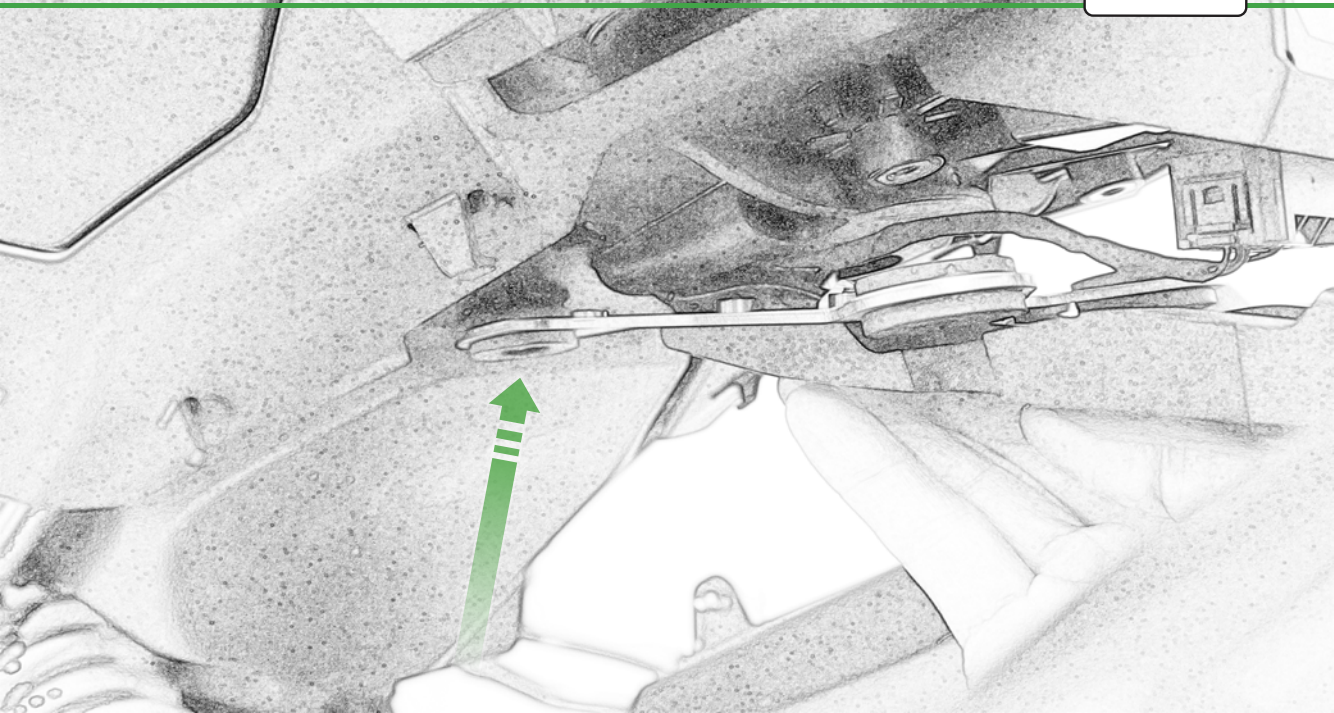

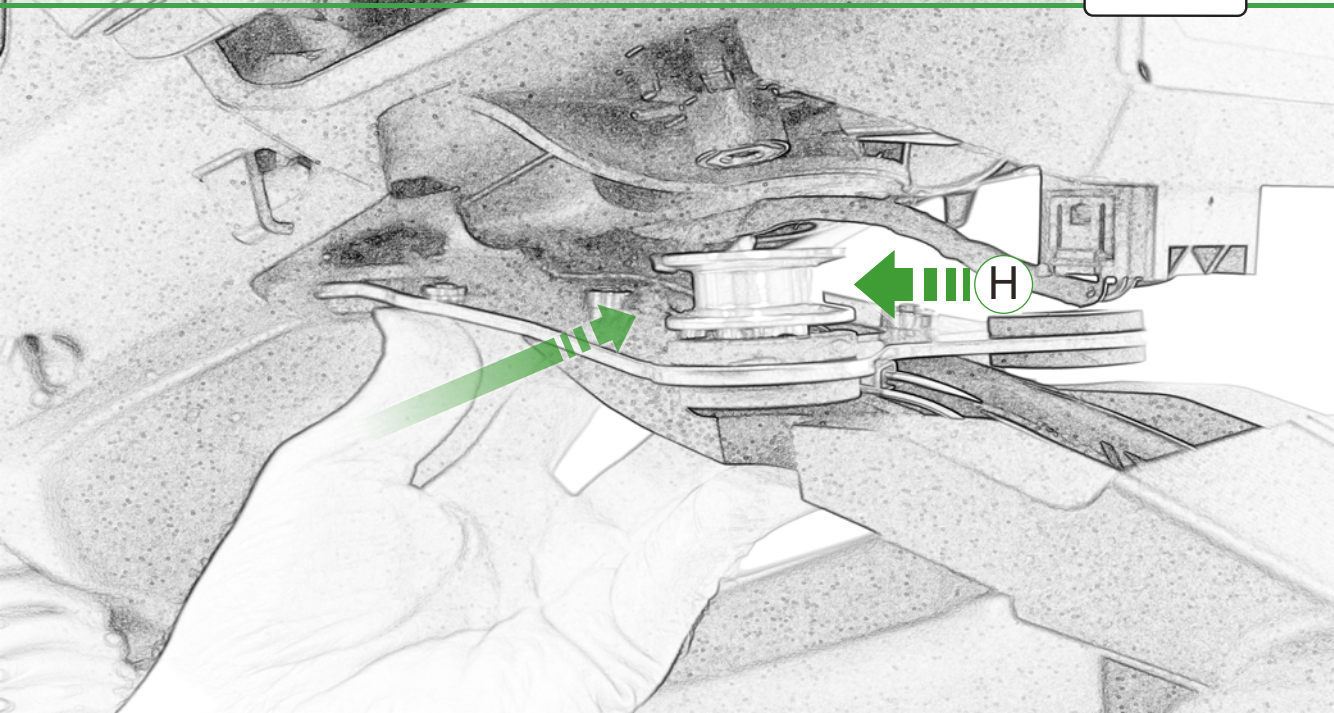

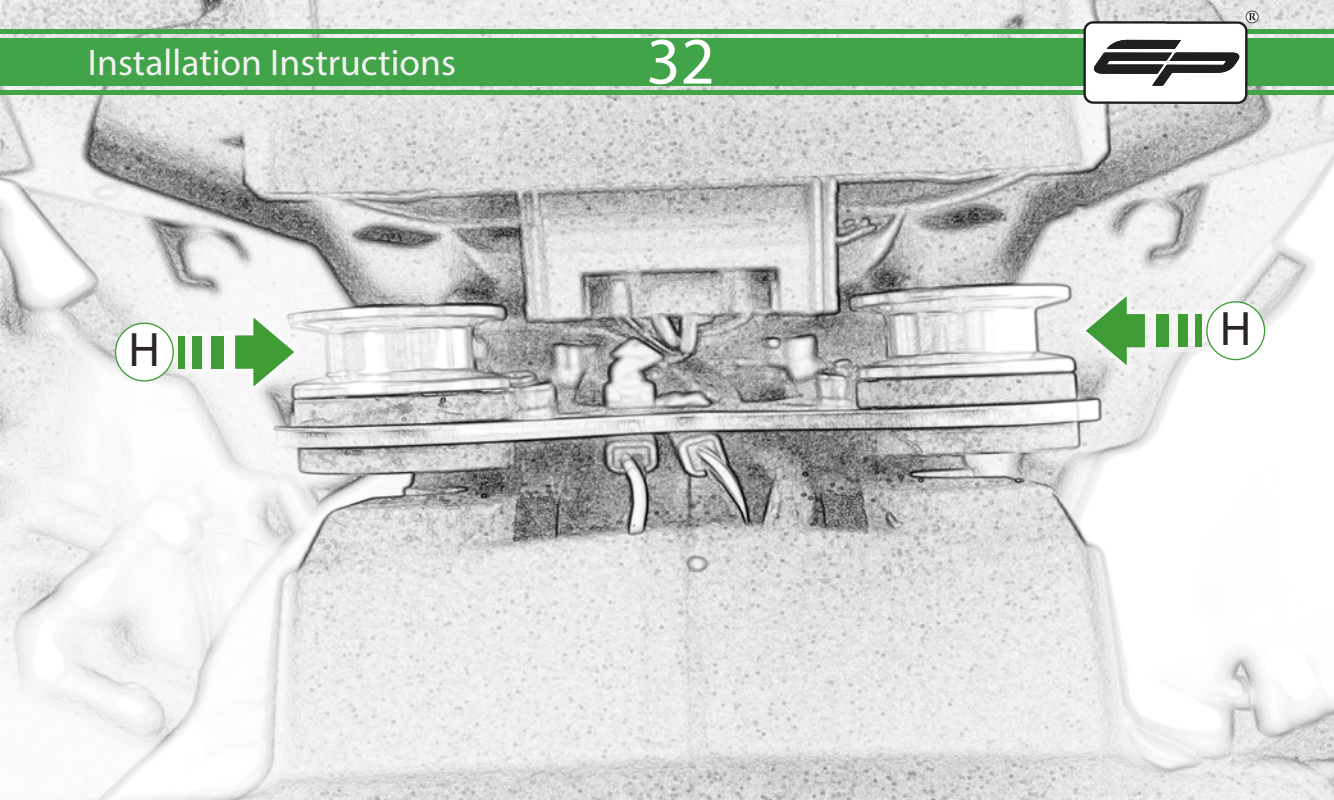

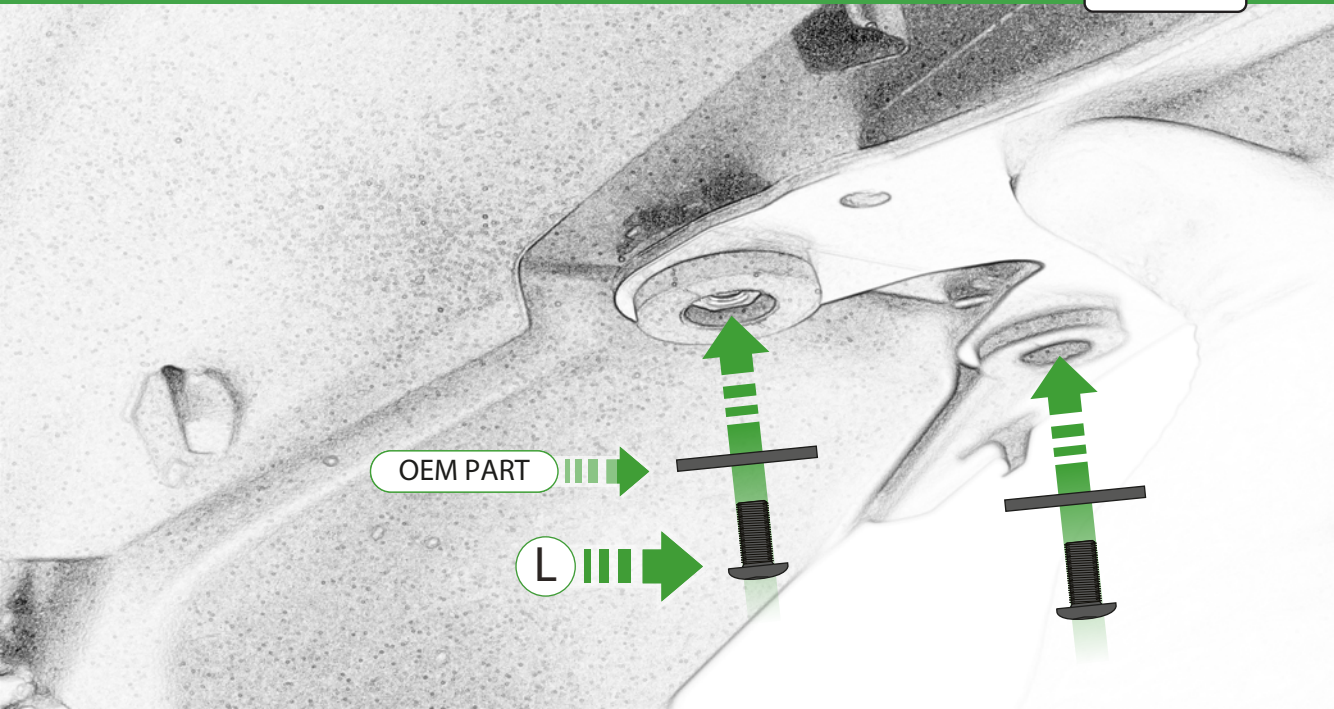

OEM PART

L





OEM PART






G

Repeat Both Sides

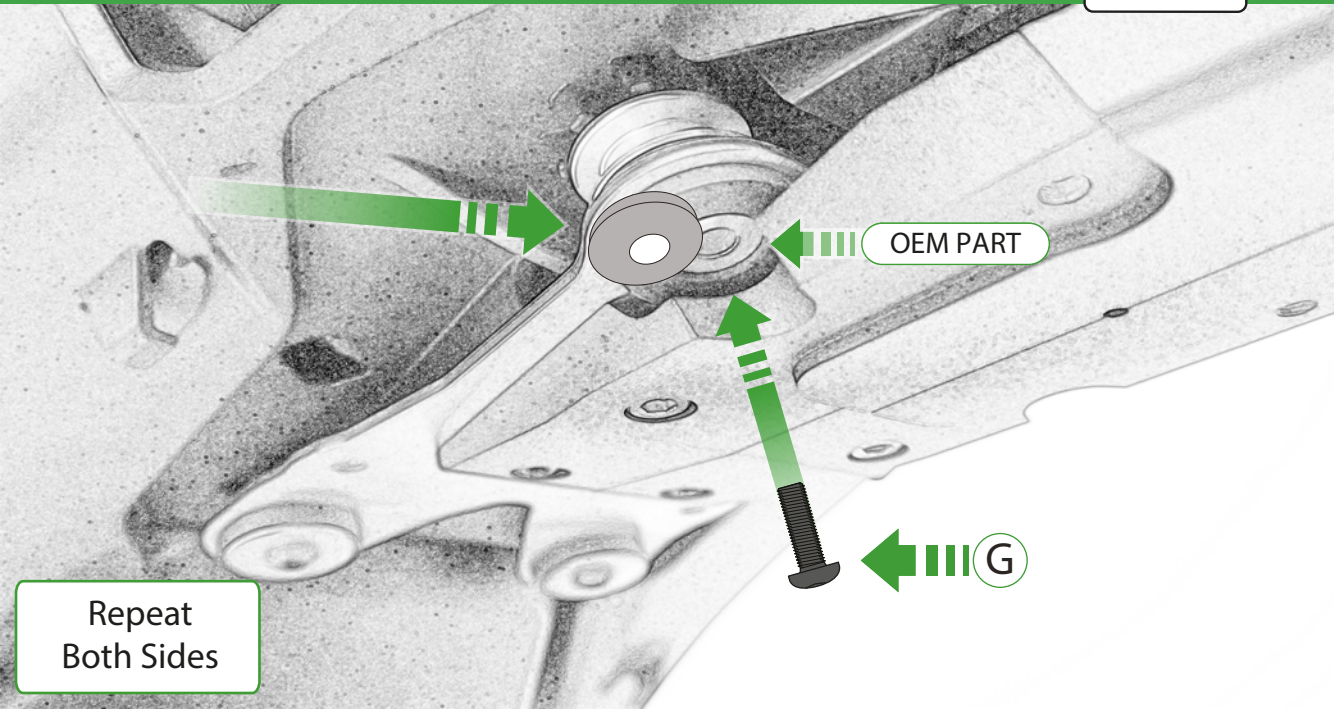

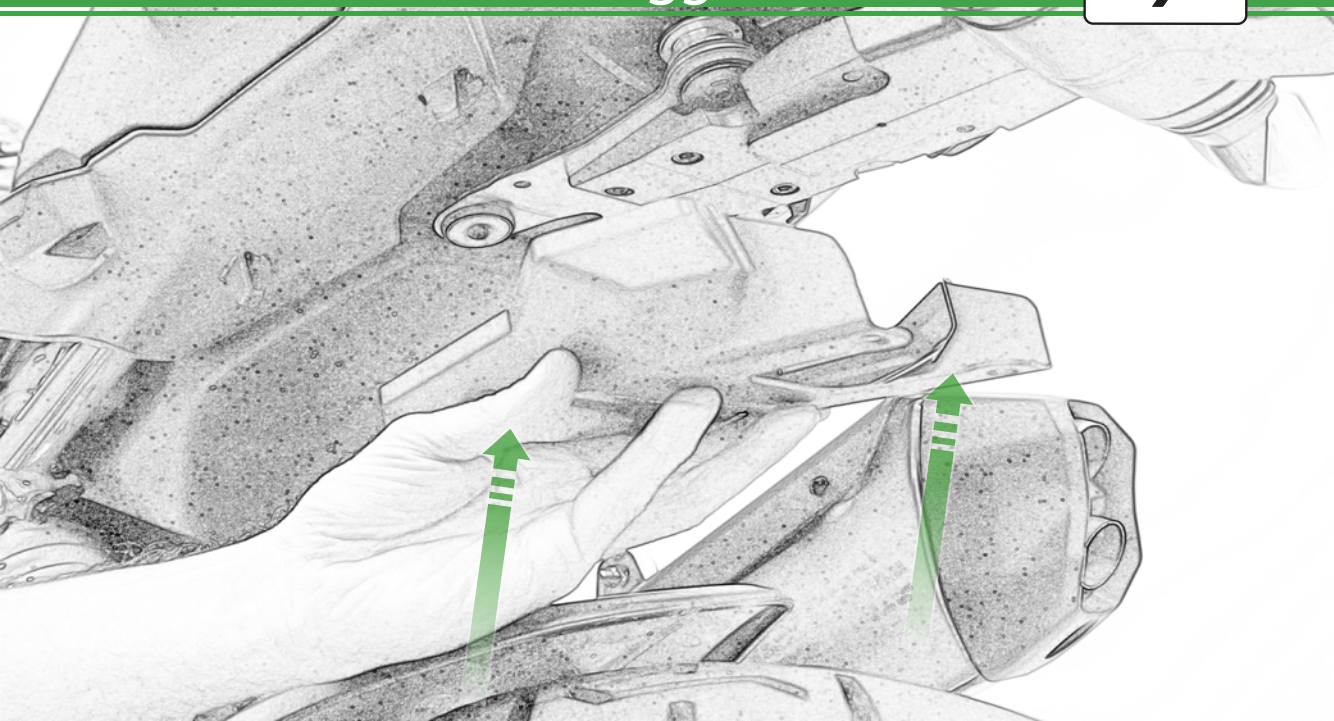

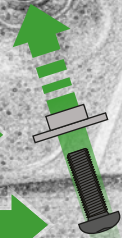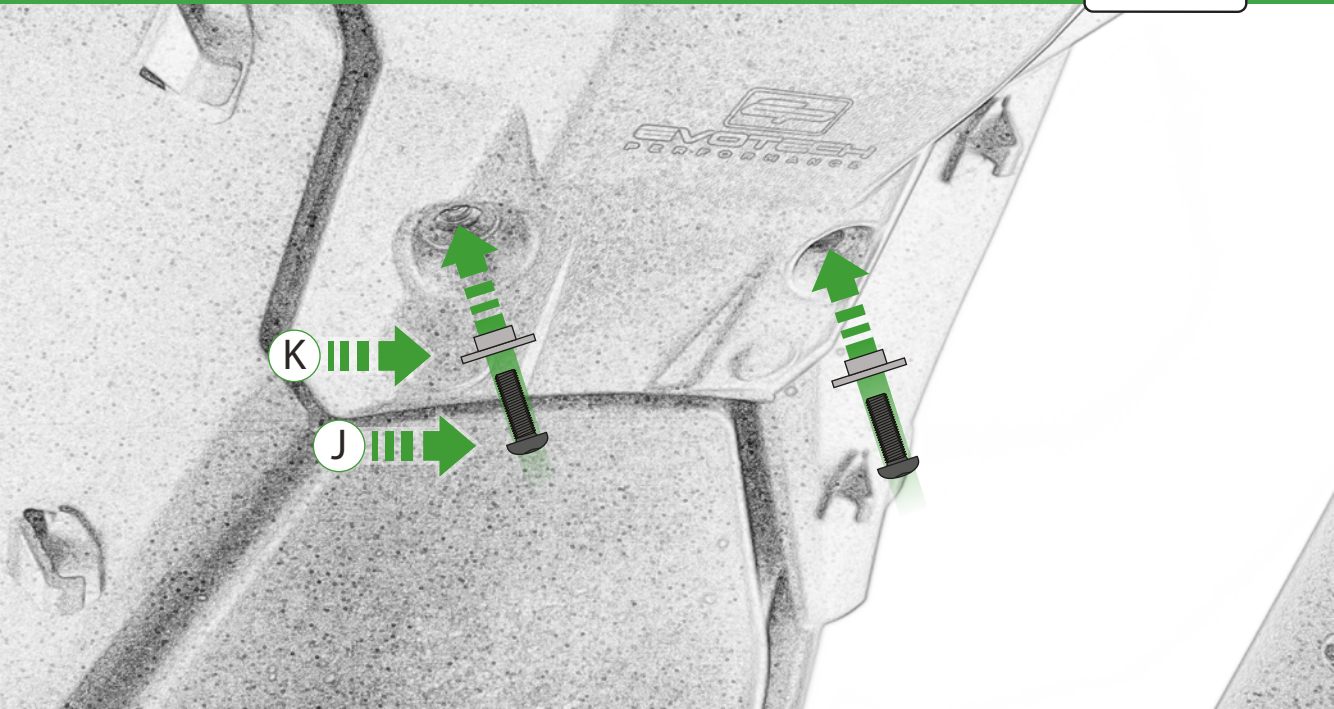

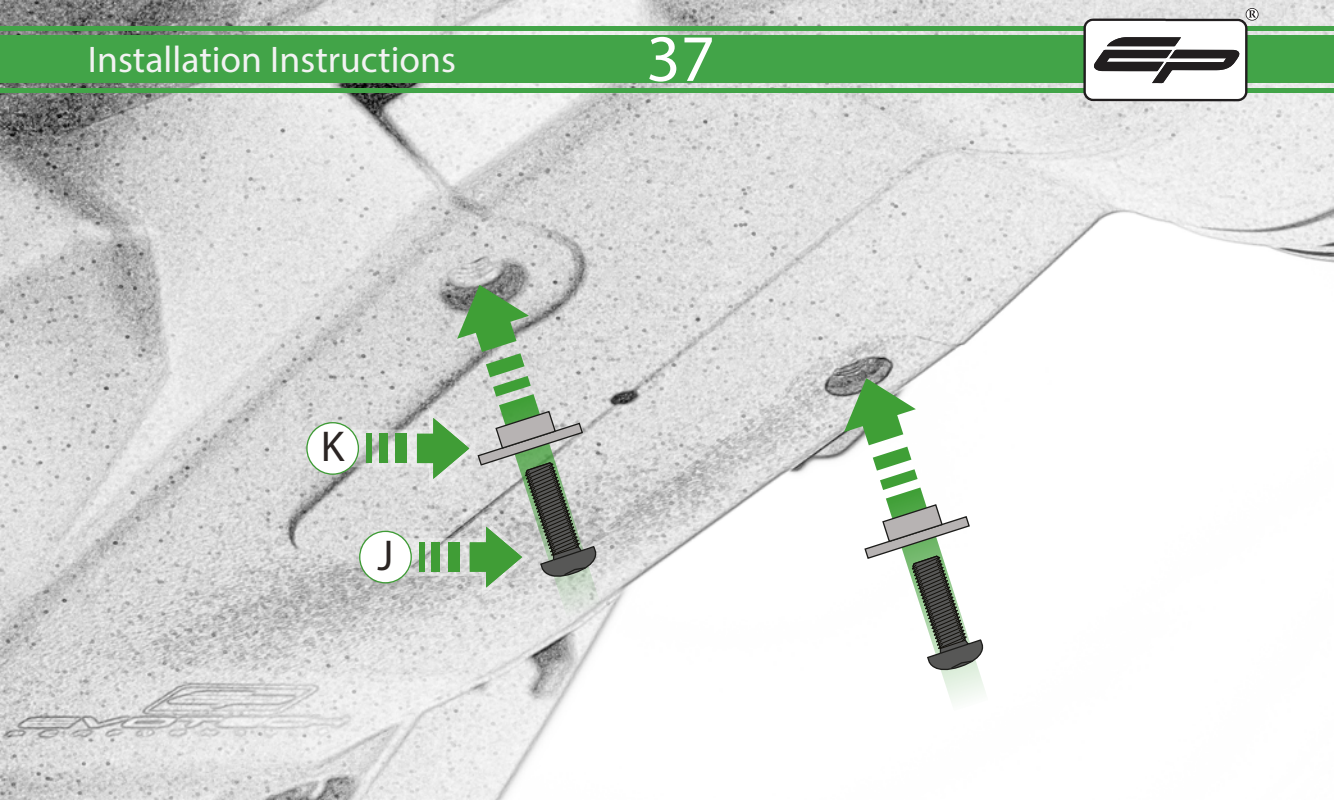


K




J



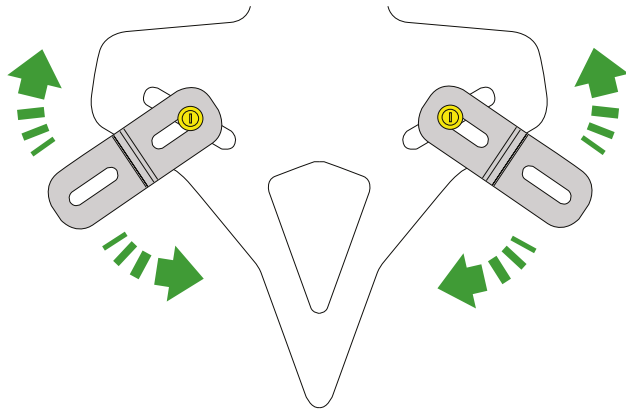

Installation Instructions

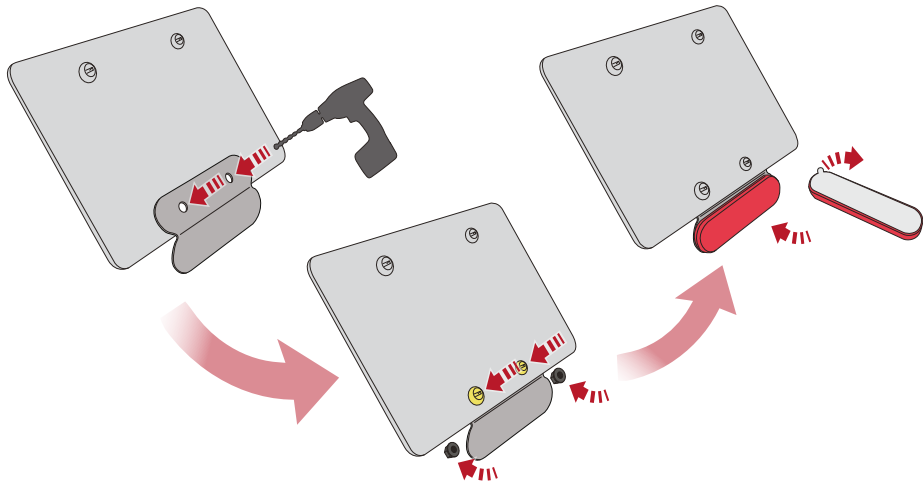



ESSENTIAL CHECKS

After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com