


New Assembly Instructions


A60


For a more enhanced experience we have upgraded the design of the ArcKit 60 sample build by adding a number of new and improved components. Please follow the updated assembly instructions here and go on line for more build ideas.


NEW COMPONENT LIST

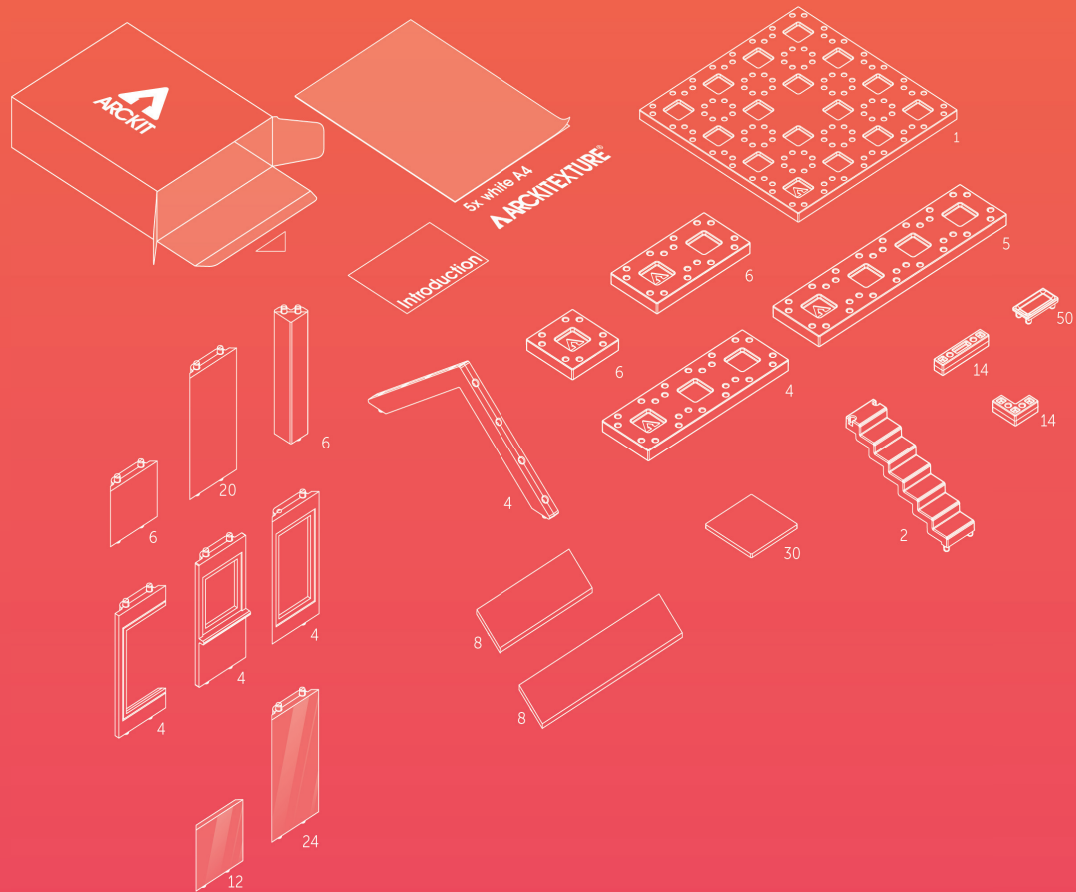

01

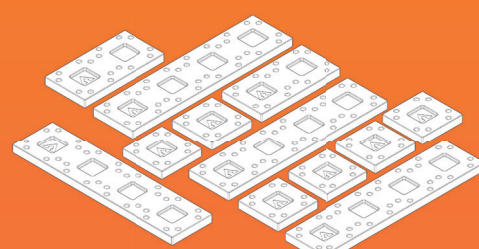
1.1 

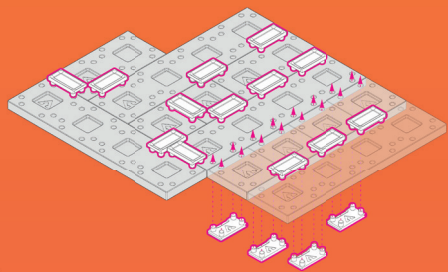
1.2 

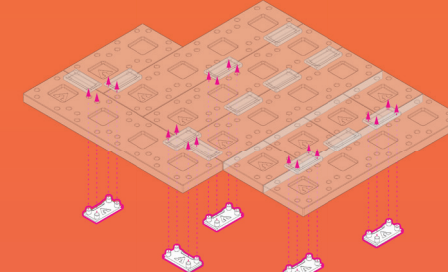1.3 


Feel free to connect extra "Links" under the floor panels and wherever required to ensure greater stability.

02

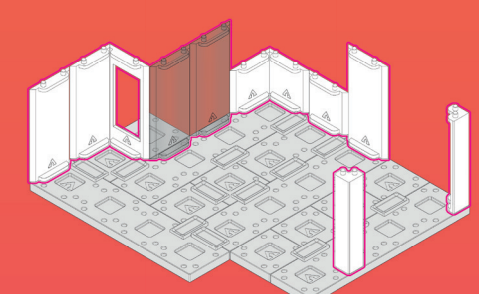2.1 

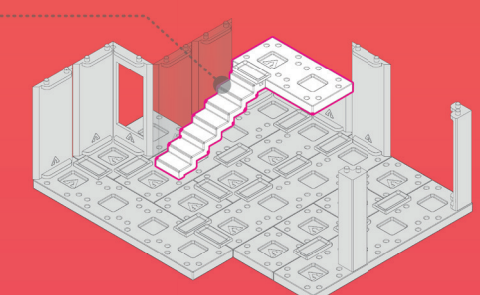
2.2 

03

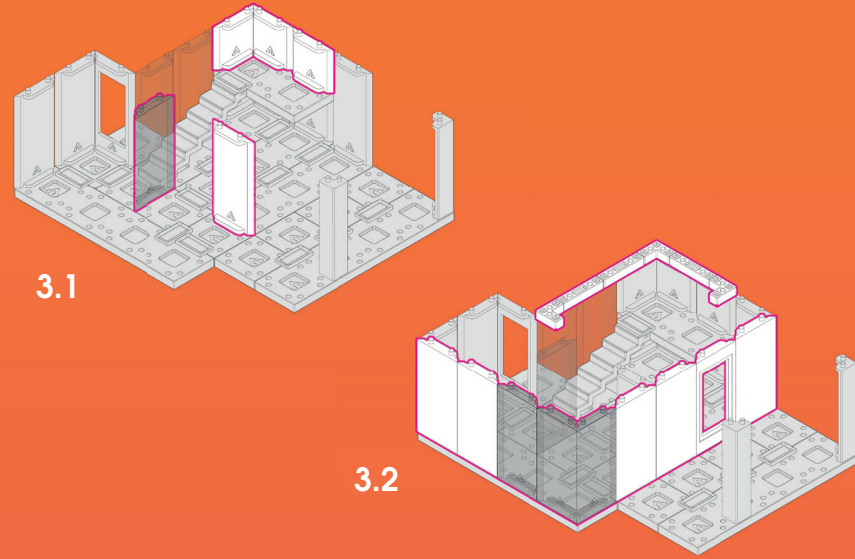


04


Make sure to align walls before loosely applying floor panel on top. Take you time to insert the wall pegs into the correct floor panel holes. Once pegs and holes are aligned, take the model in your hands and squeeze around the perimeter to fully secure the floors and the walls.

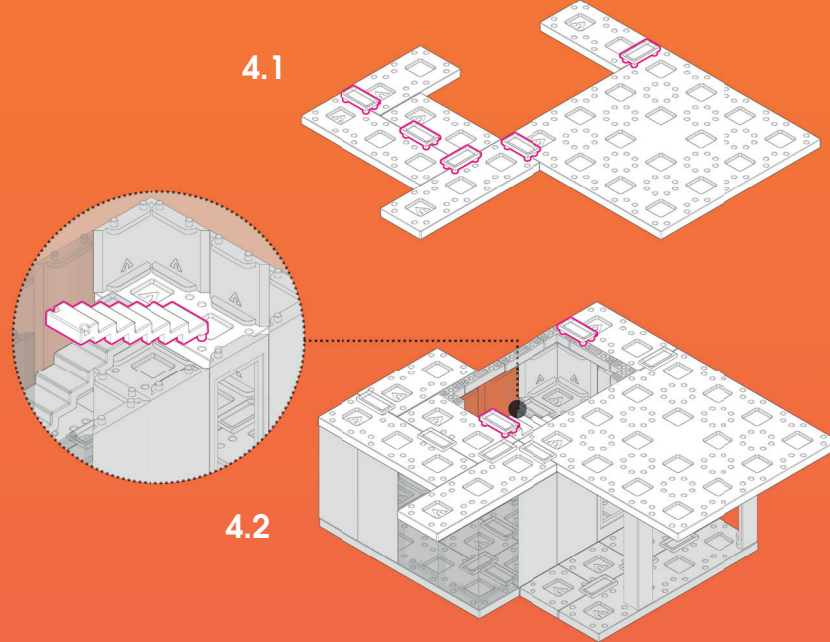


05

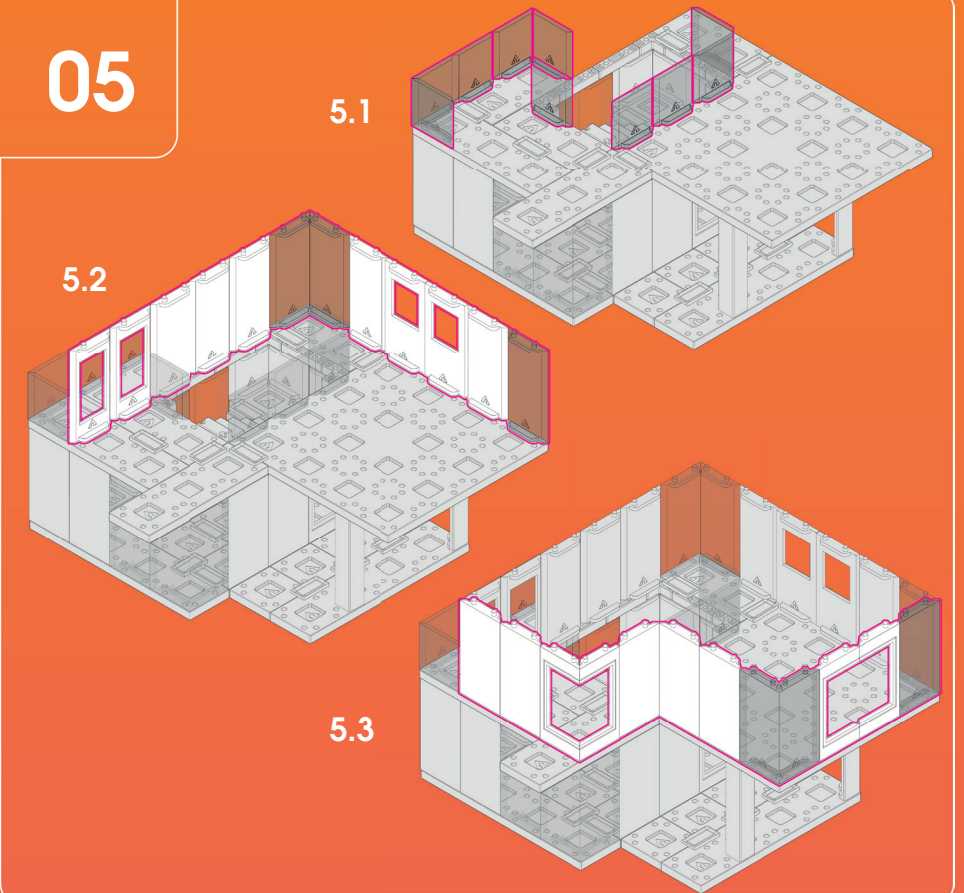


06

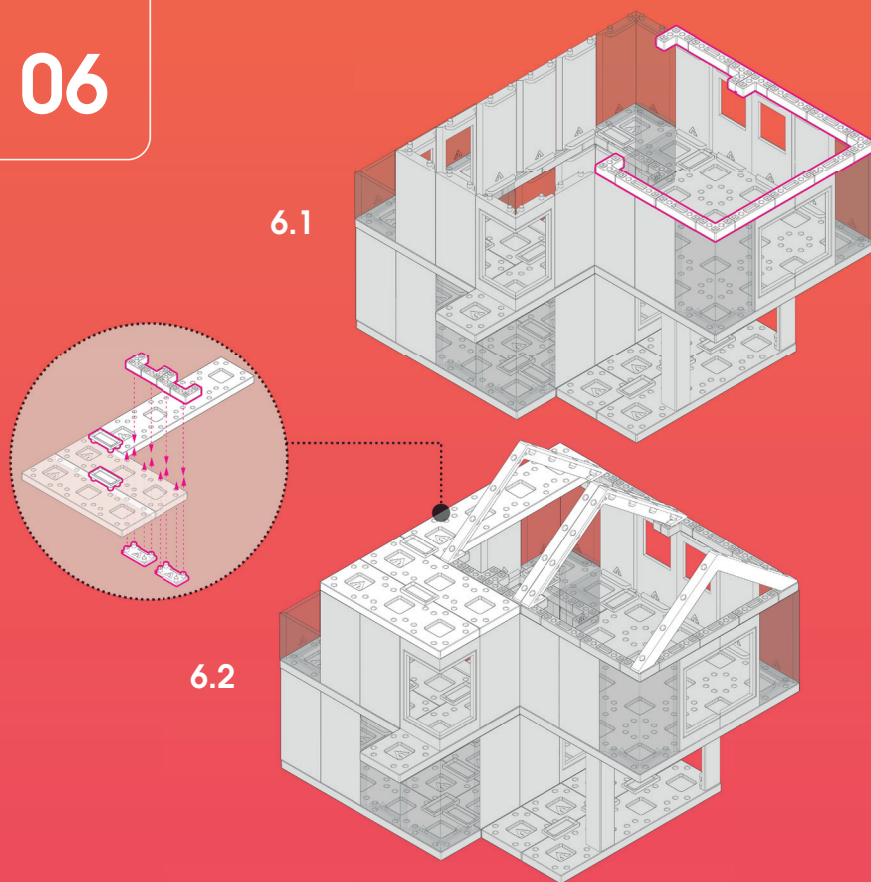

07

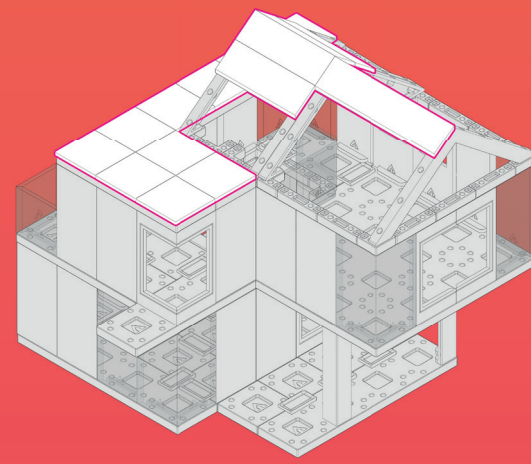

08

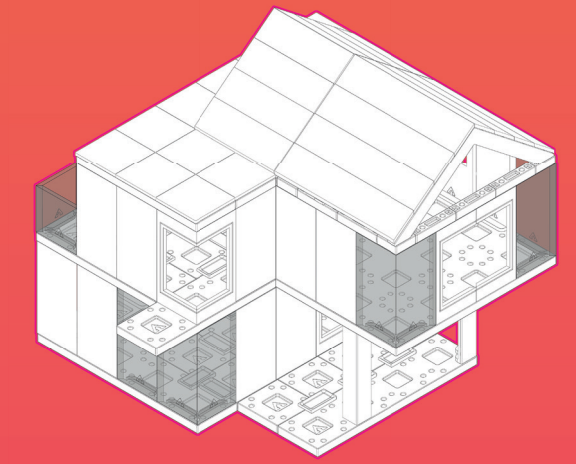

Share your amazing builds with the world and make sure to hashtag **#arckitlovers** in your posts. You can also send your pictures to info@arckit.com and we might even publish what you have built on our online gallery.

Now, what will you build next?