



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)


Ducati Monster 950 / 939 Tail Tidy


Installation Instructions




## Kit Contents PRN015548


- (A) 2 x Indicator Plate
- (B) 2 x Upper Indicator Clamps
- (C) 2 x Lower Indicator Clamps
- (D) 2 x M5 x 10mm Countersunk Screw
- (E) 2 x M5 Nyloc Nut
- (F) 2 x M4 x 8mm Caphead
- (G) 2 x Spacer
- (H) 4 x M5 x 12mm Black

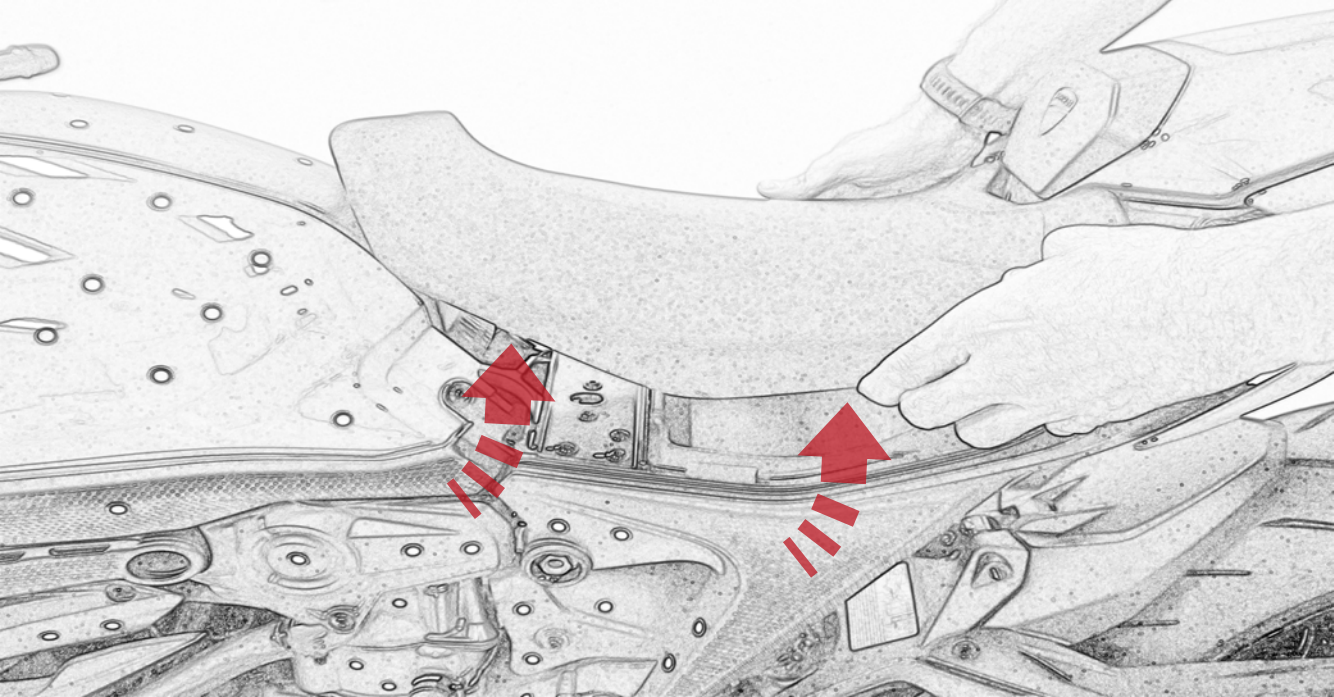

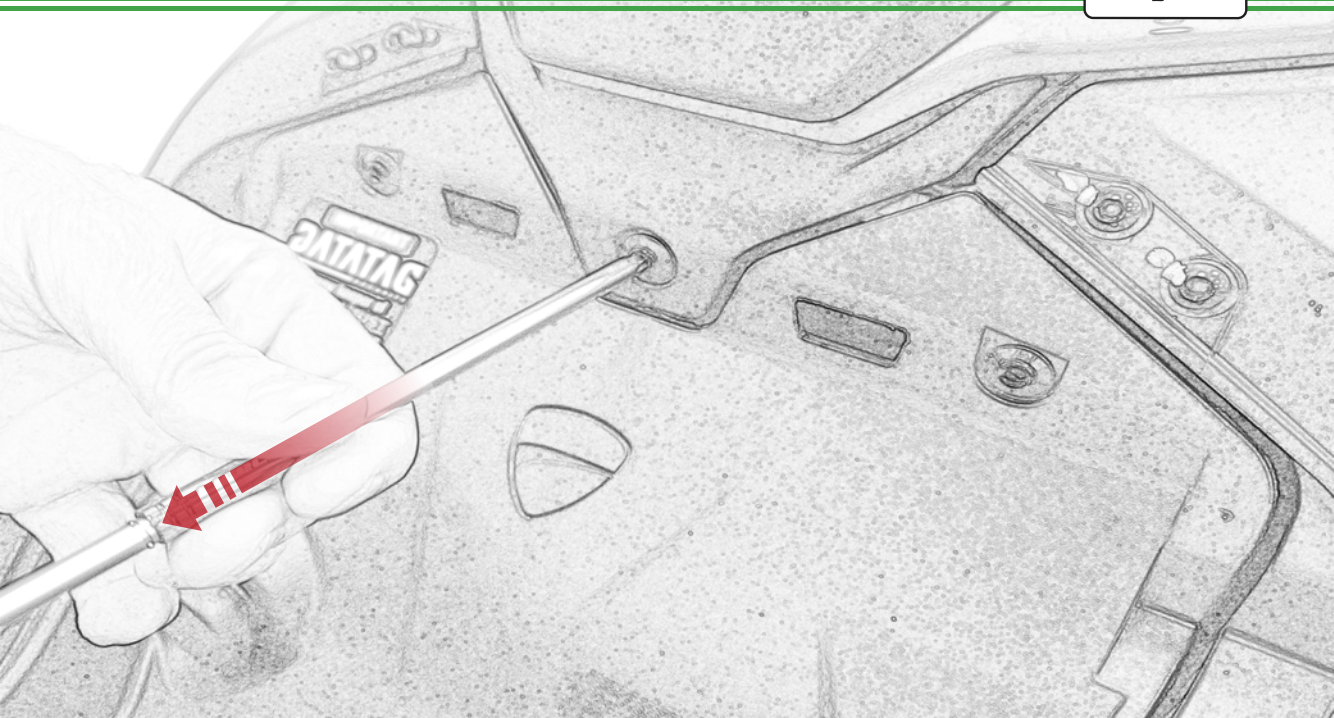




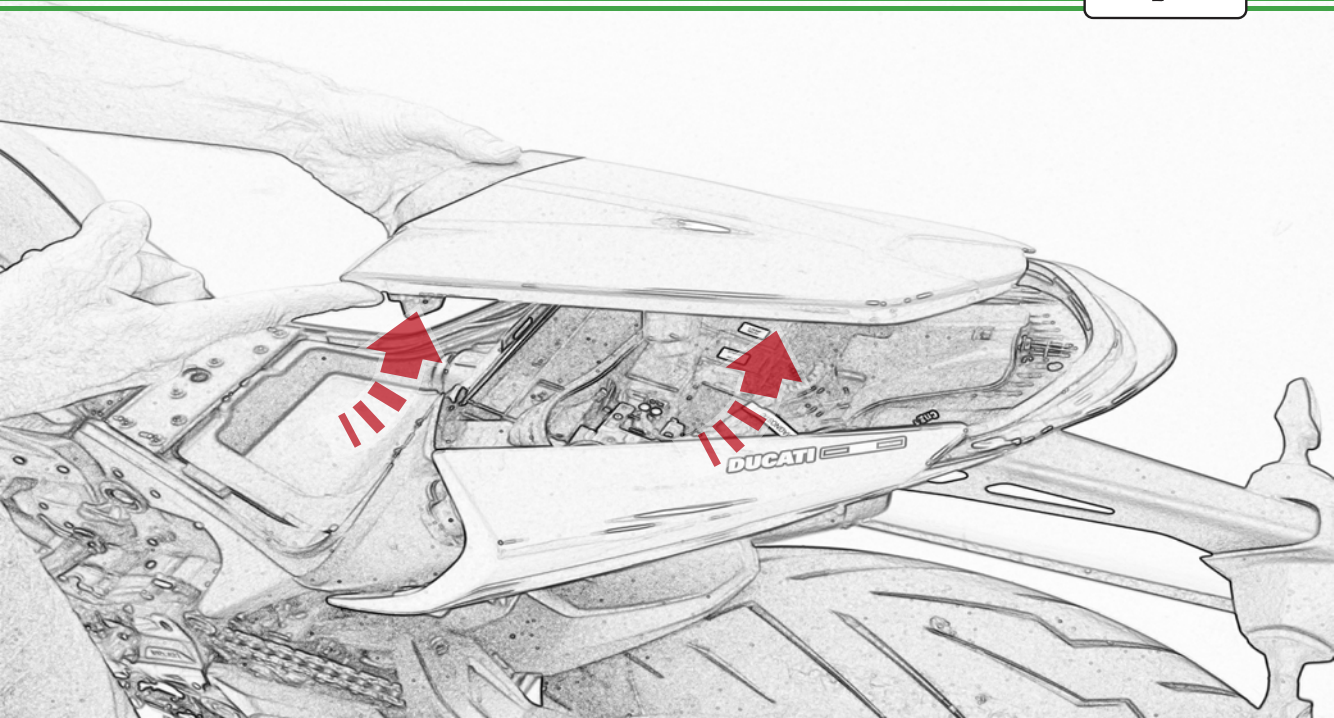



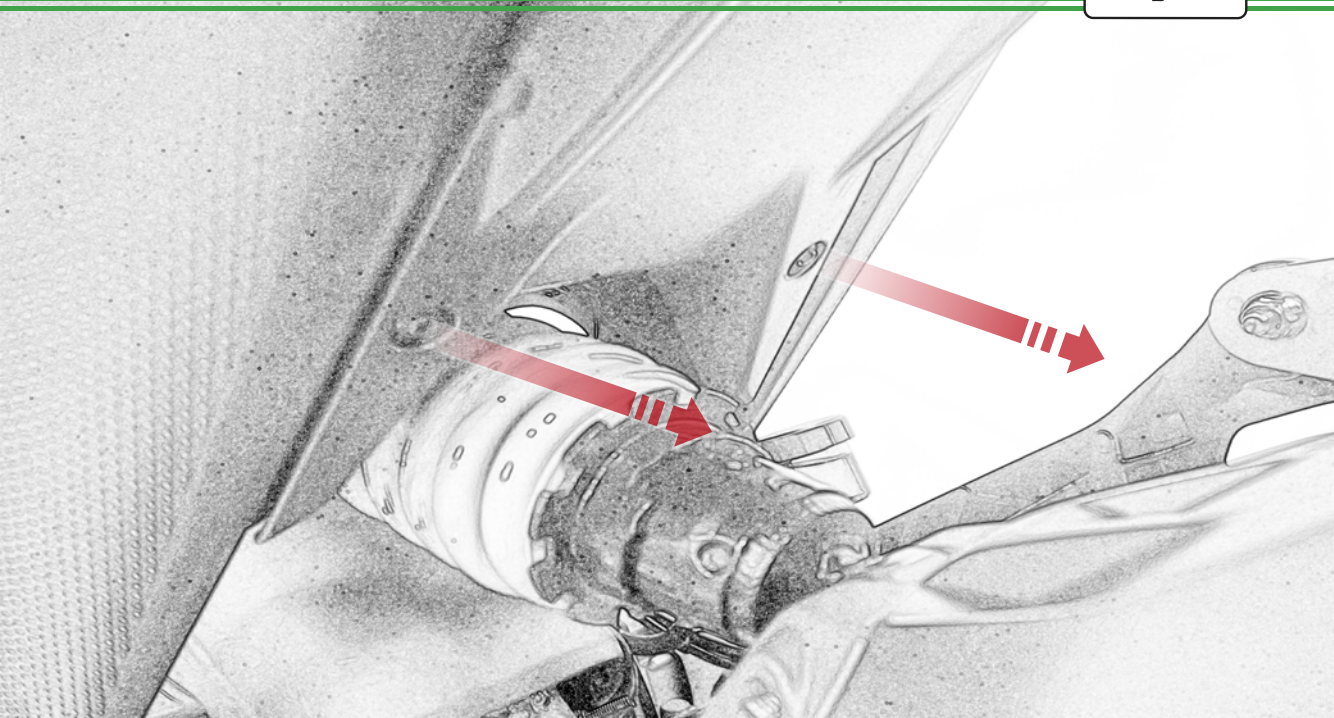





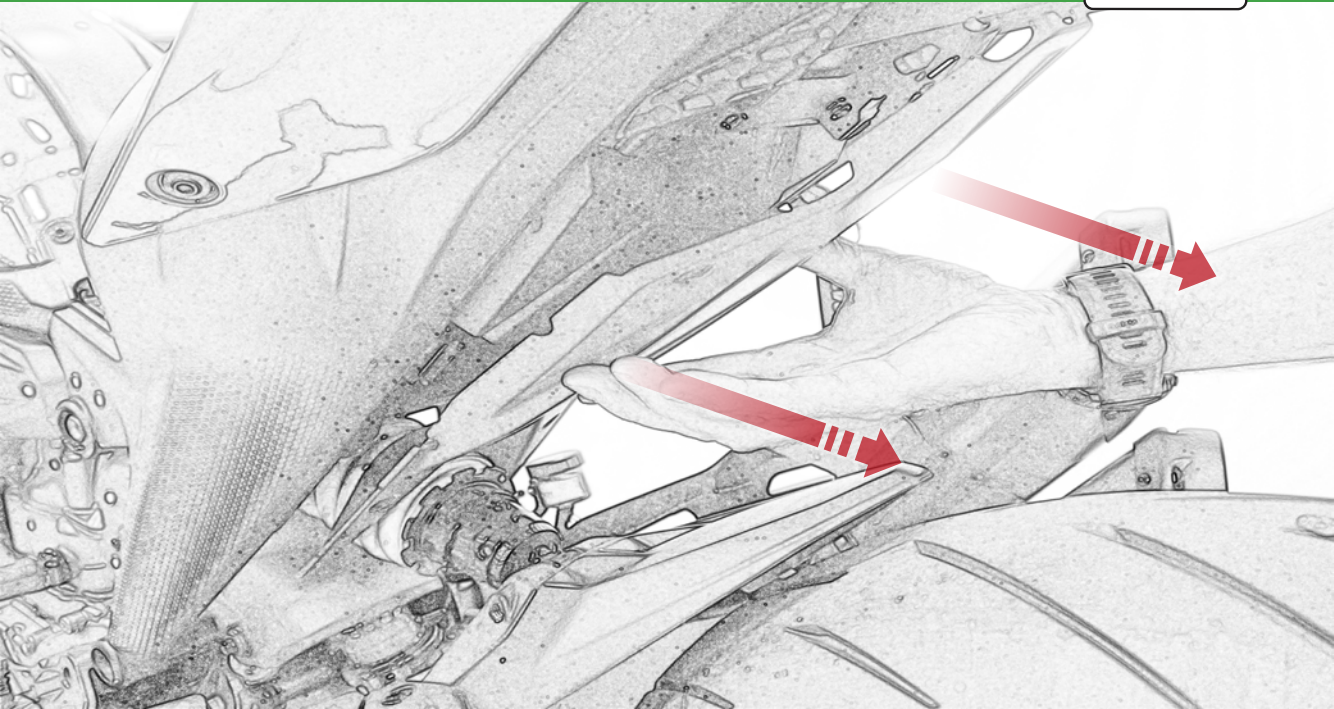




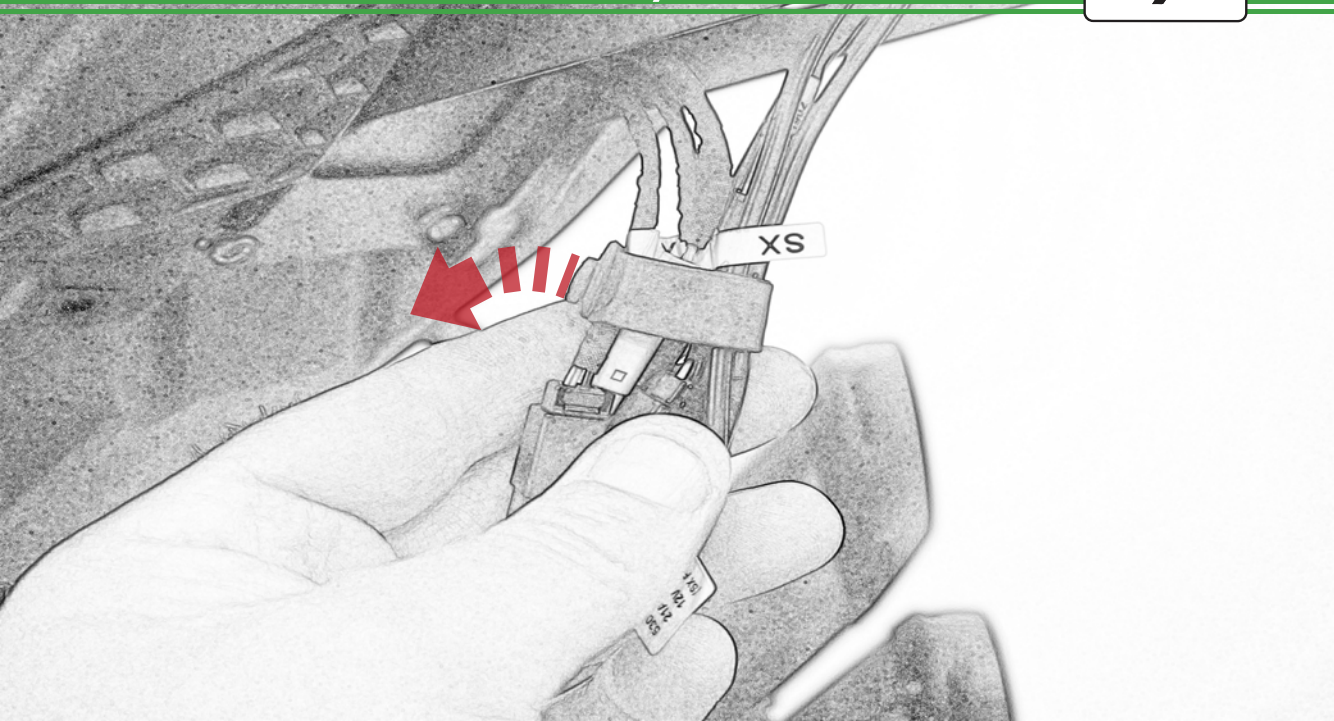


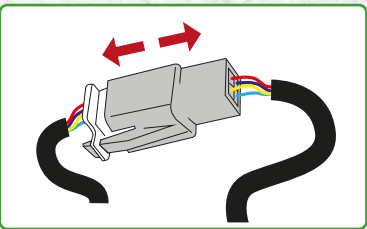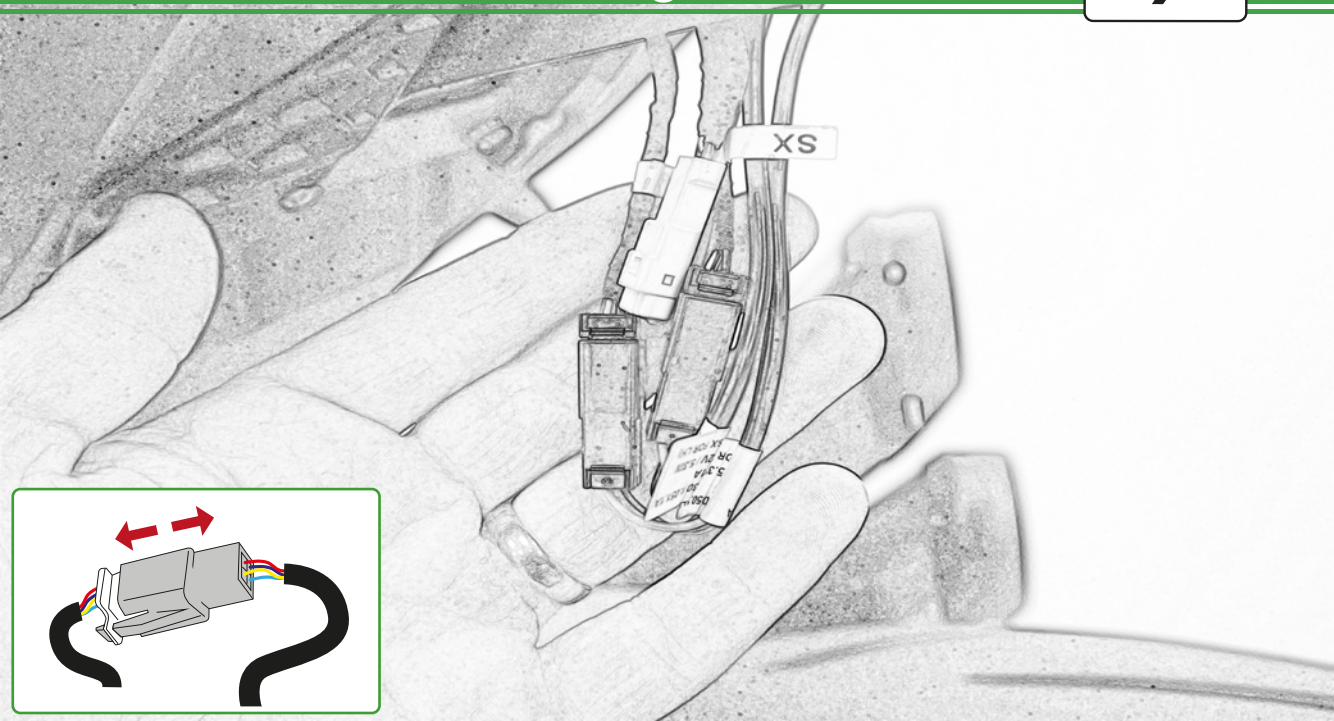



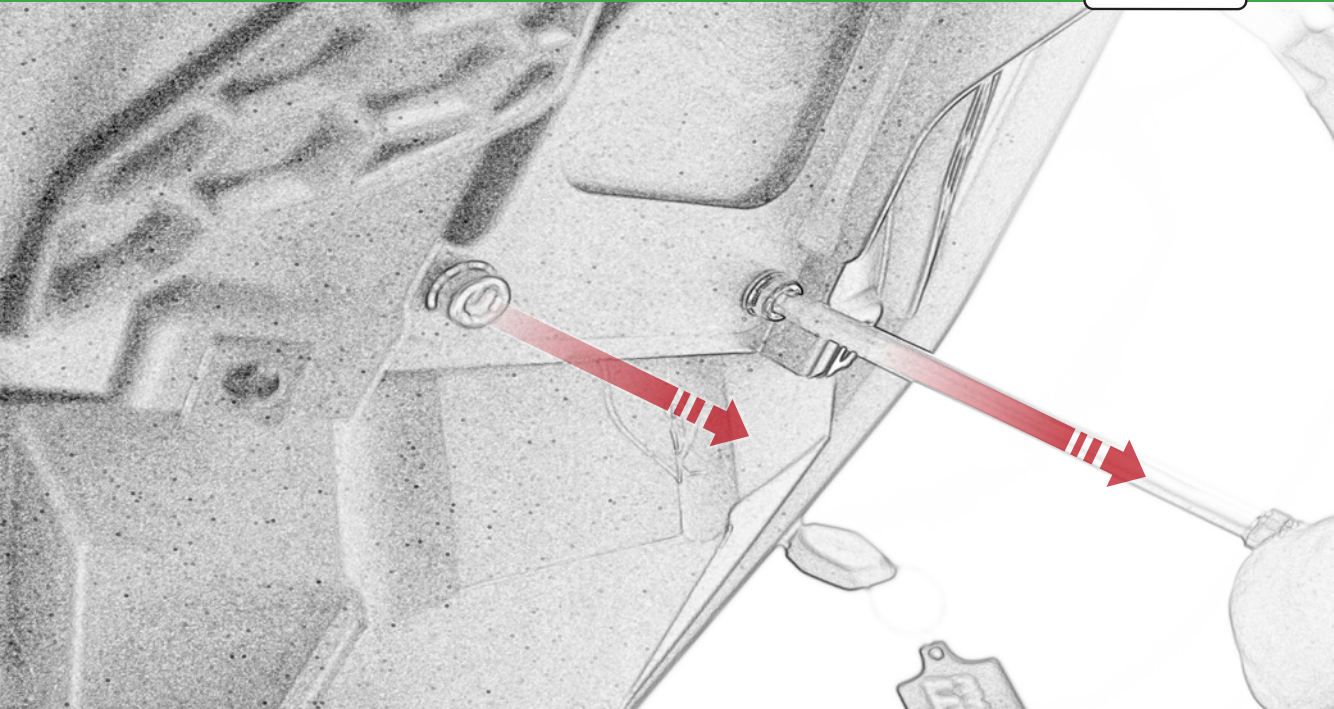






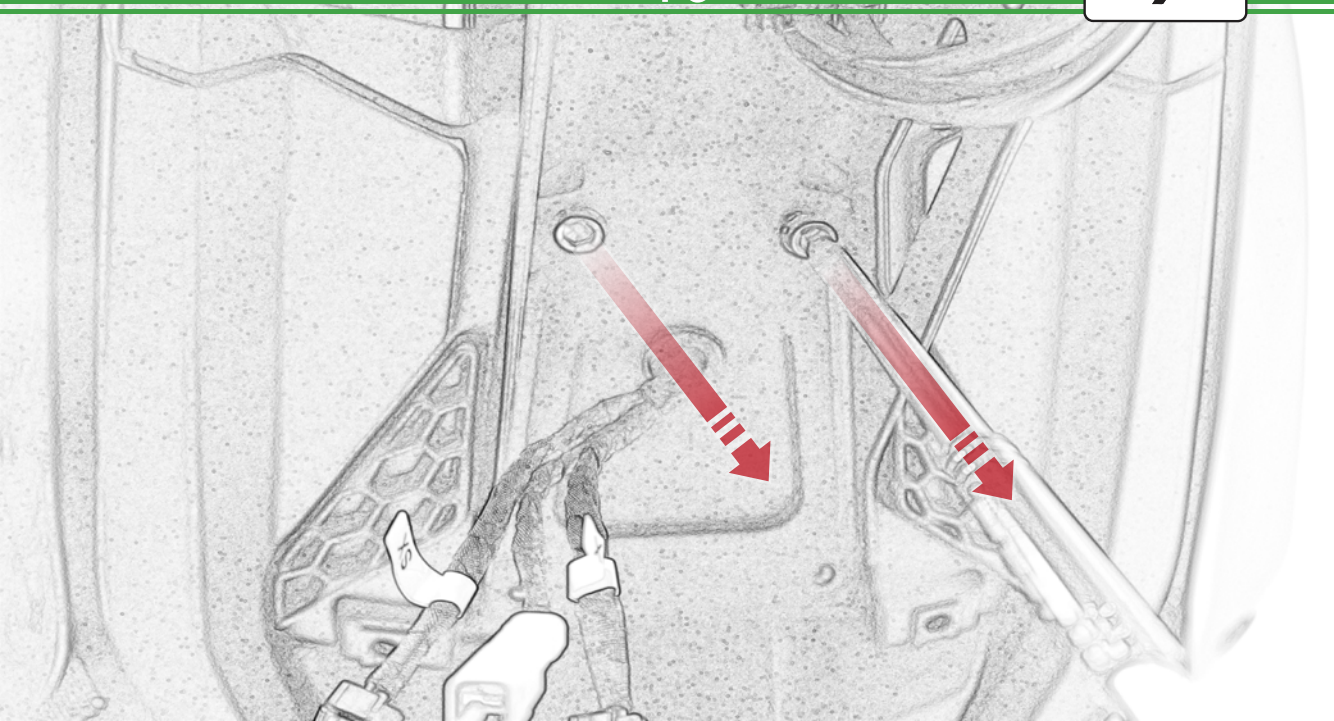

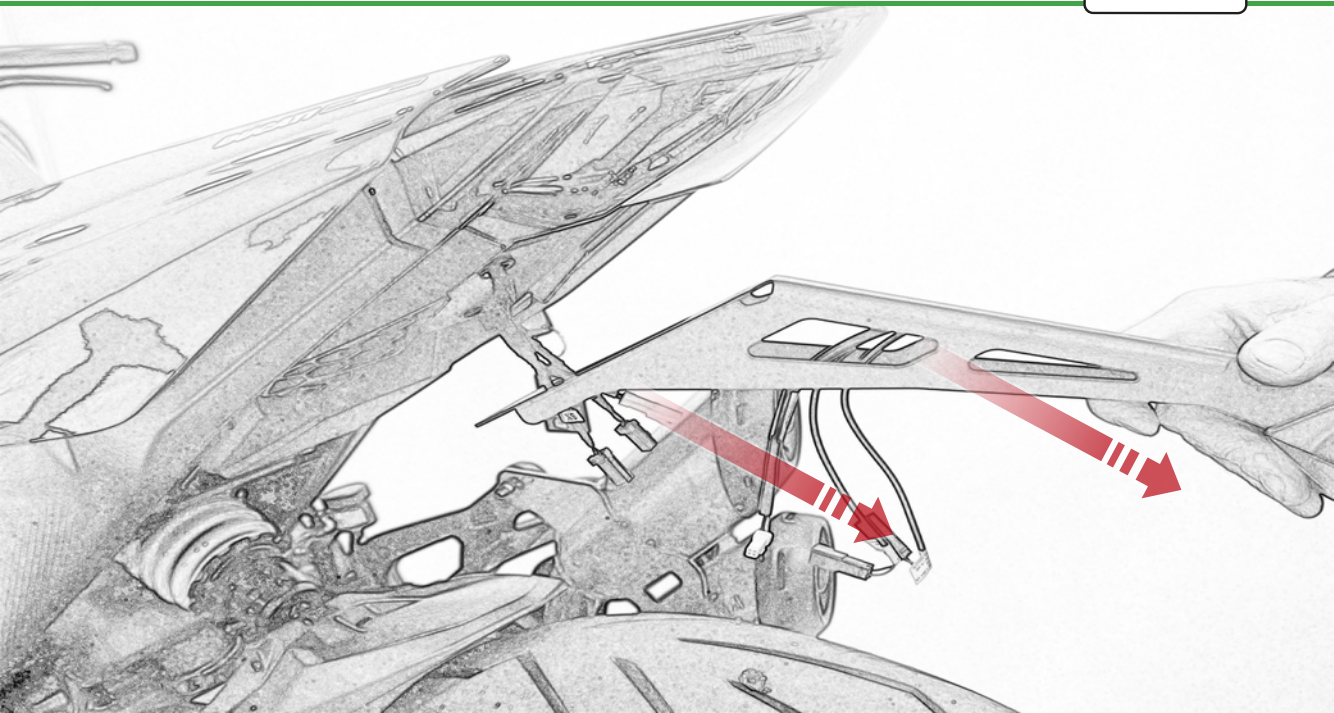


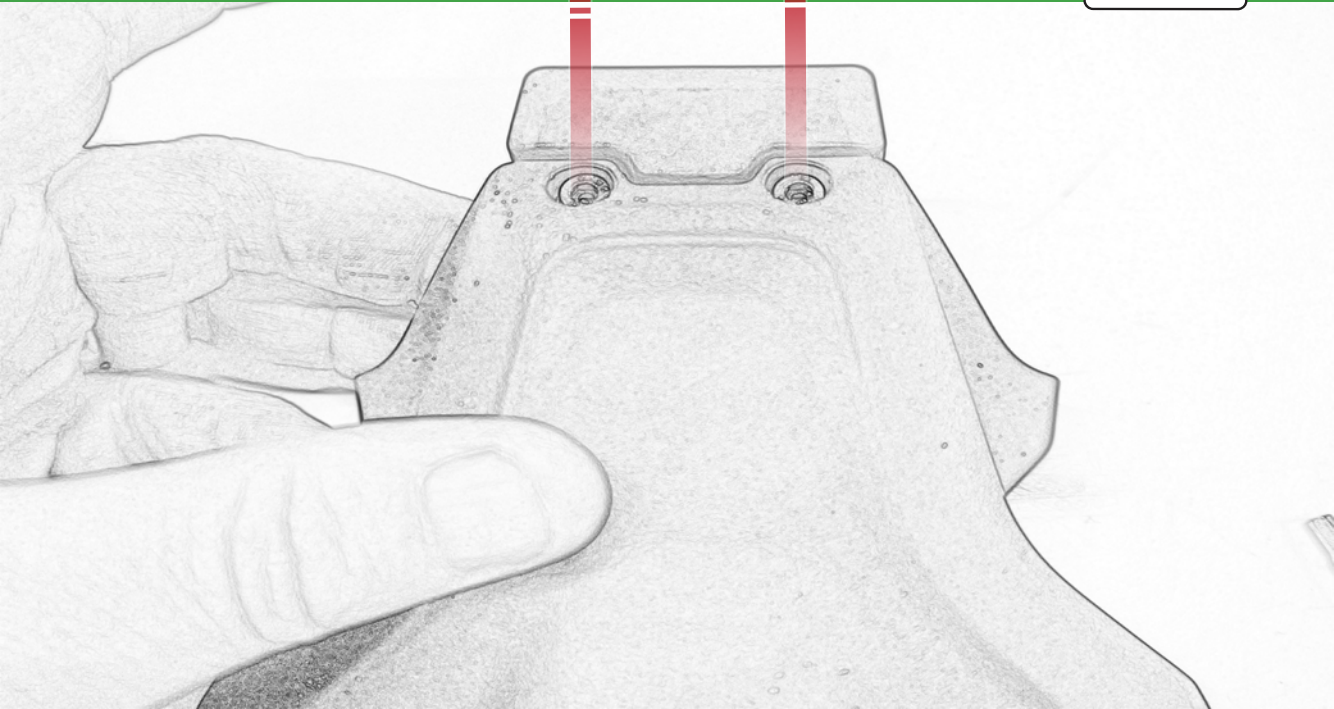


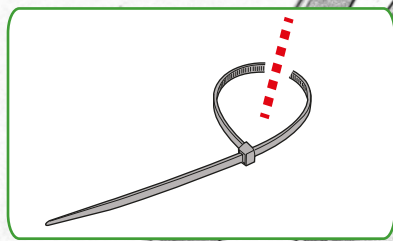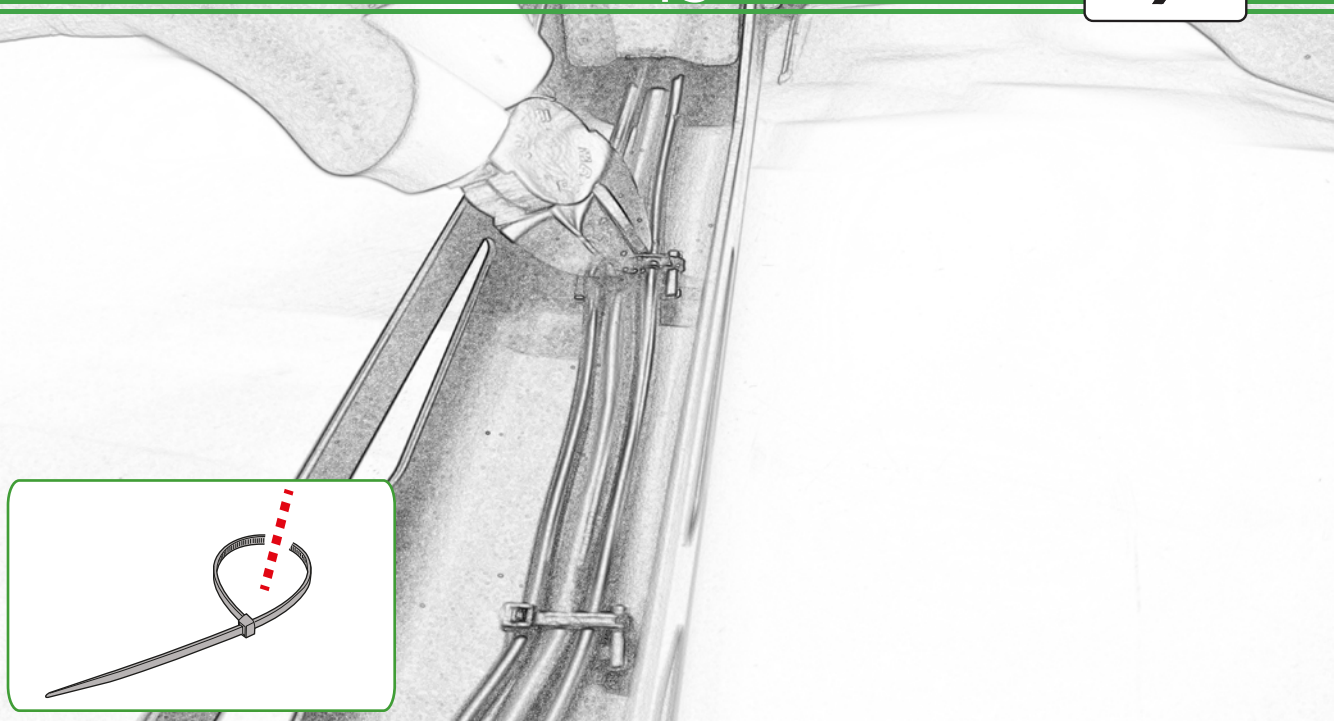

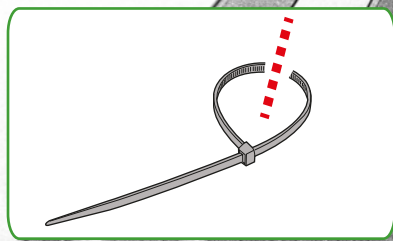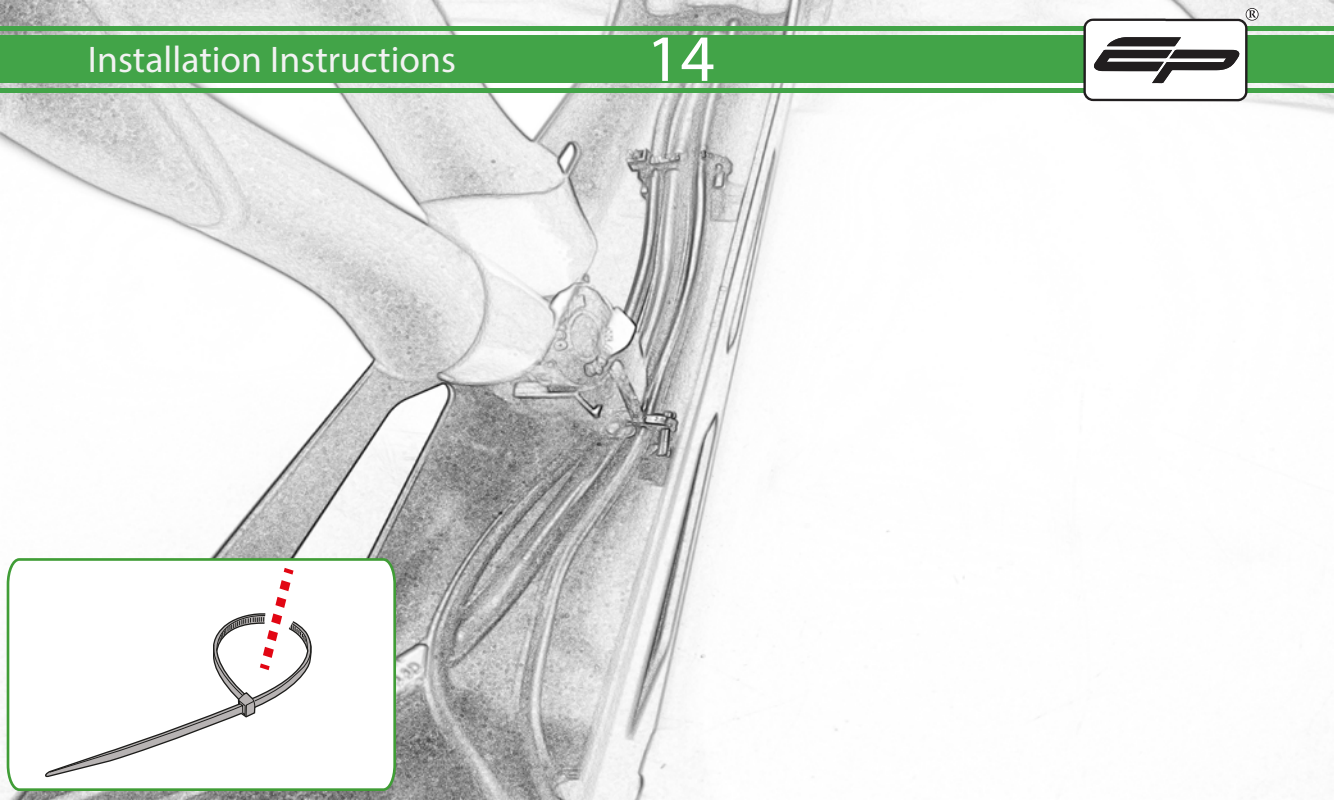






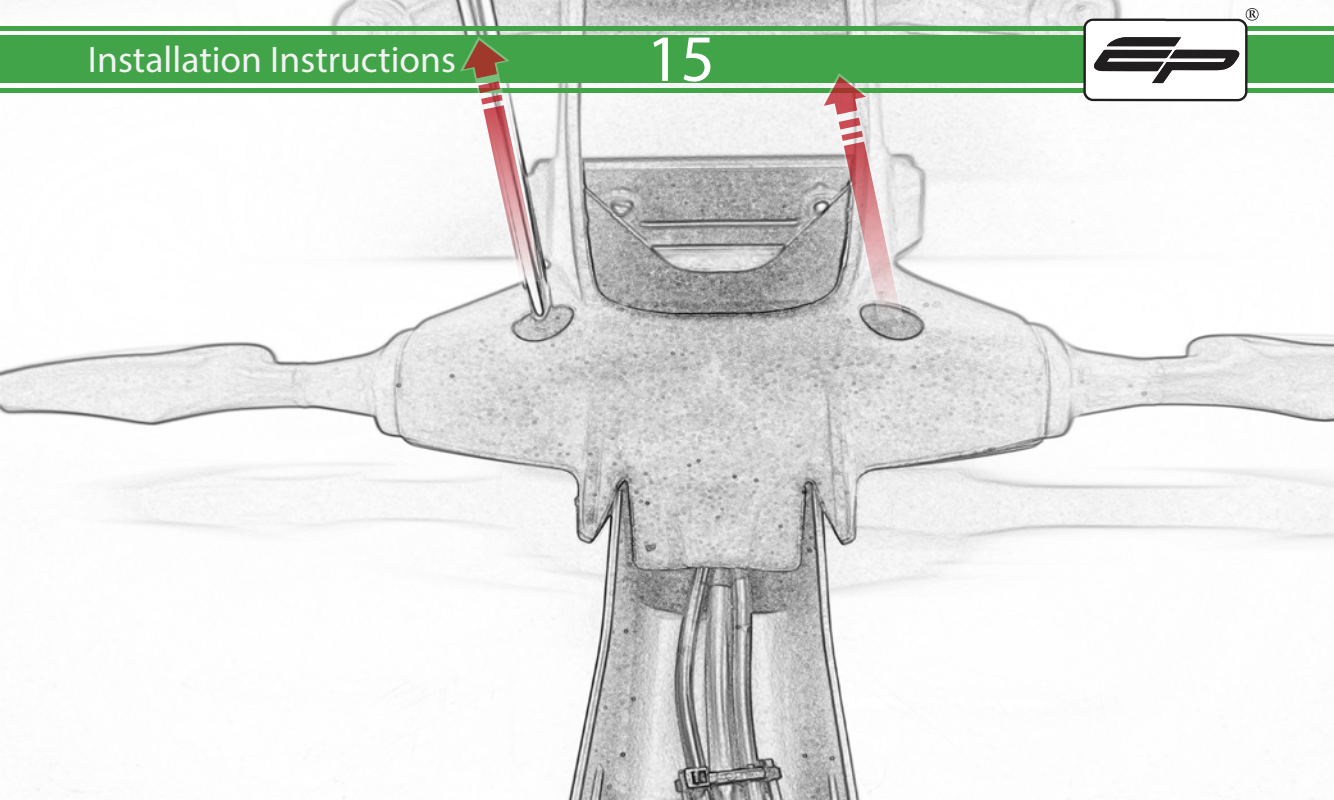


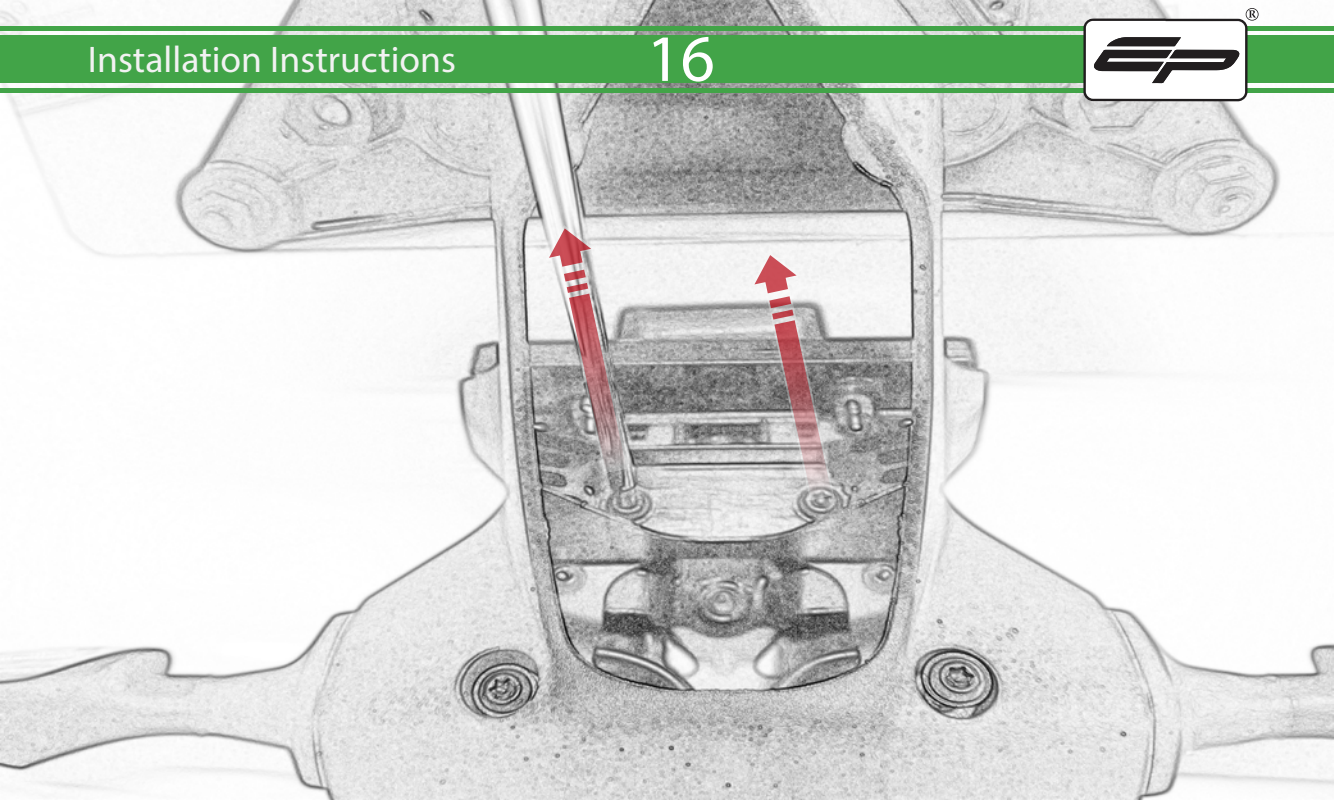





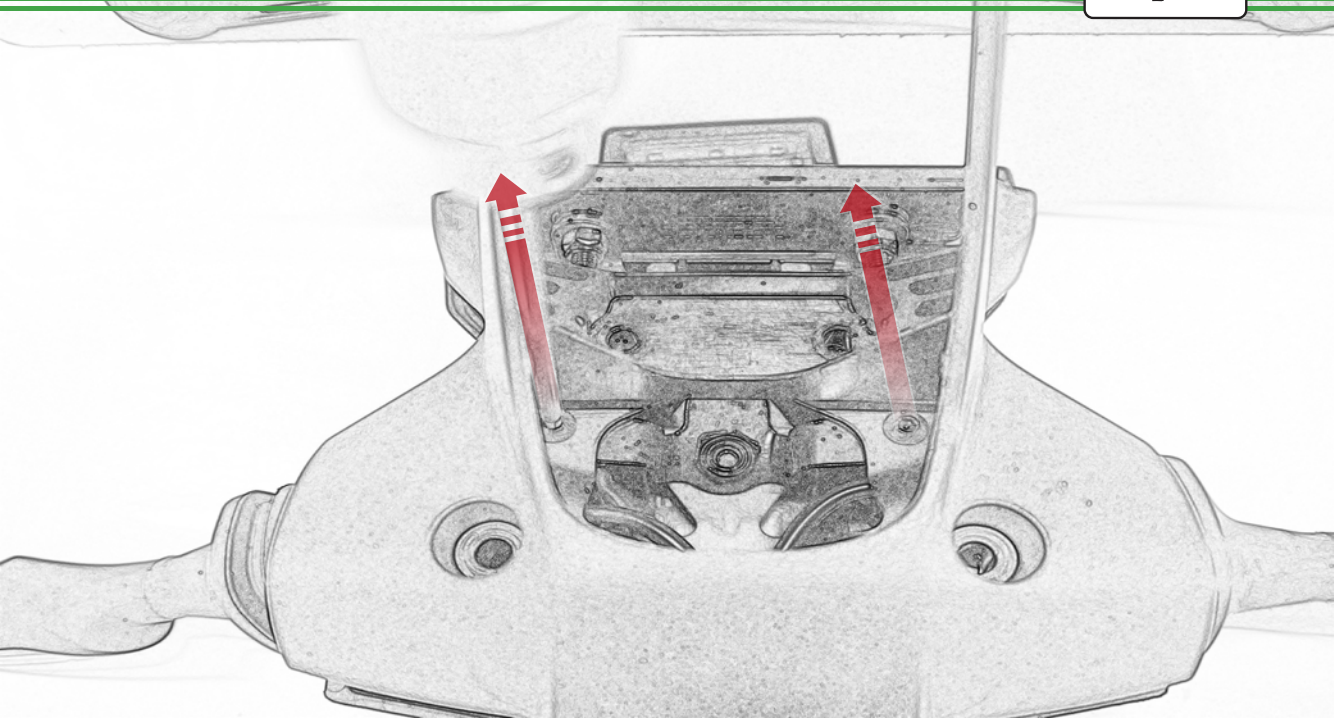

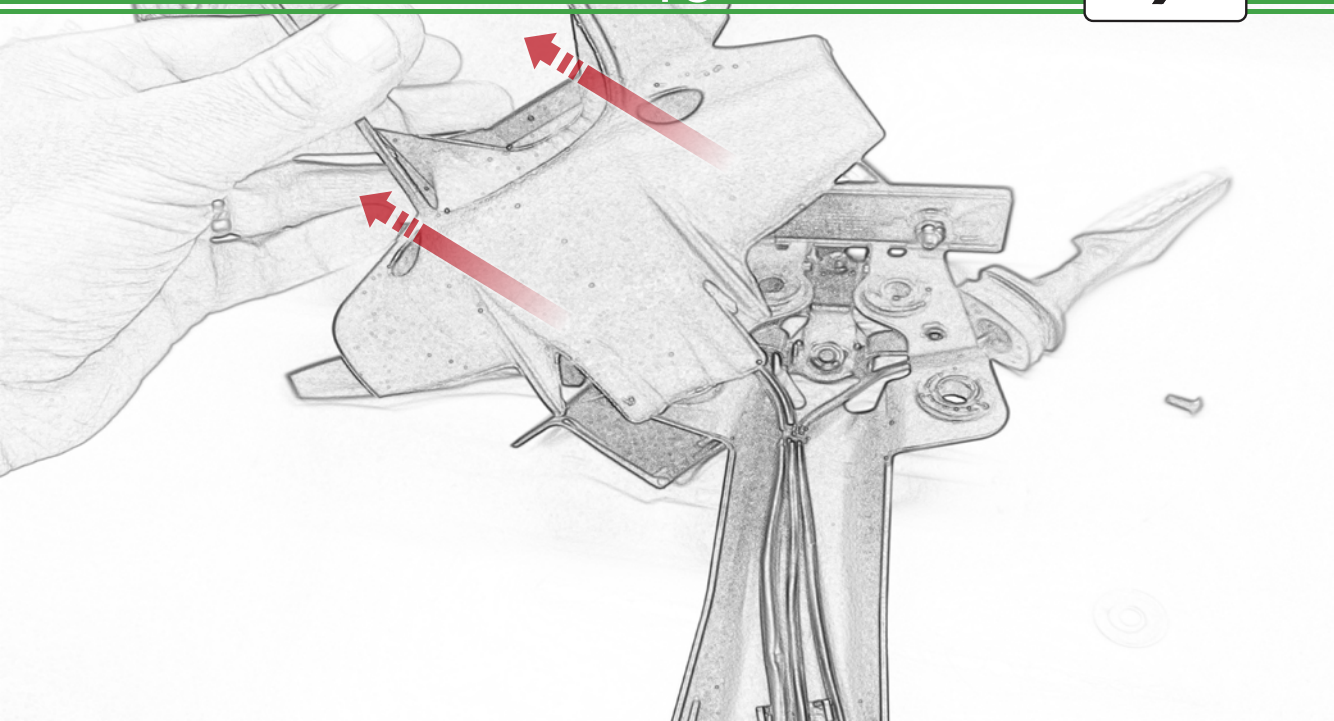


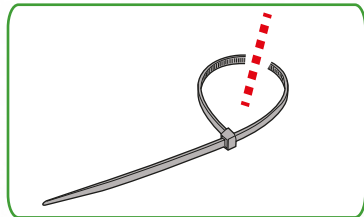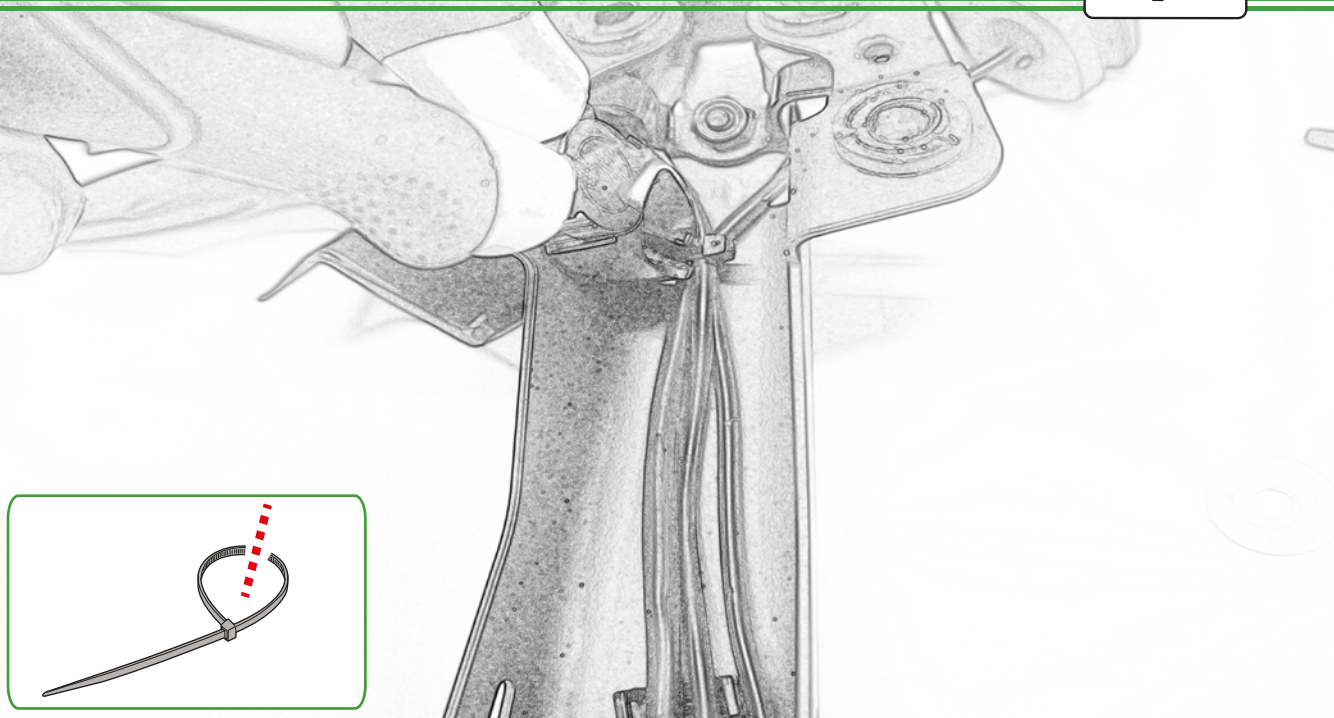

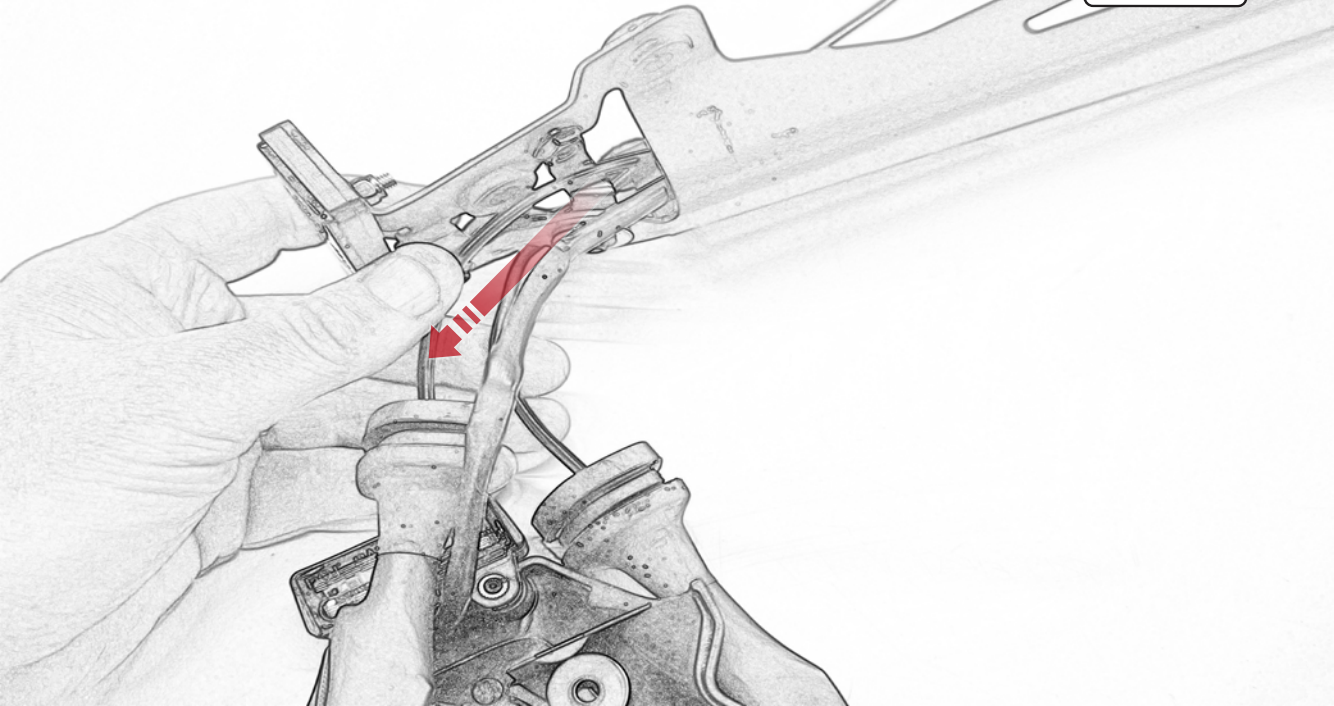

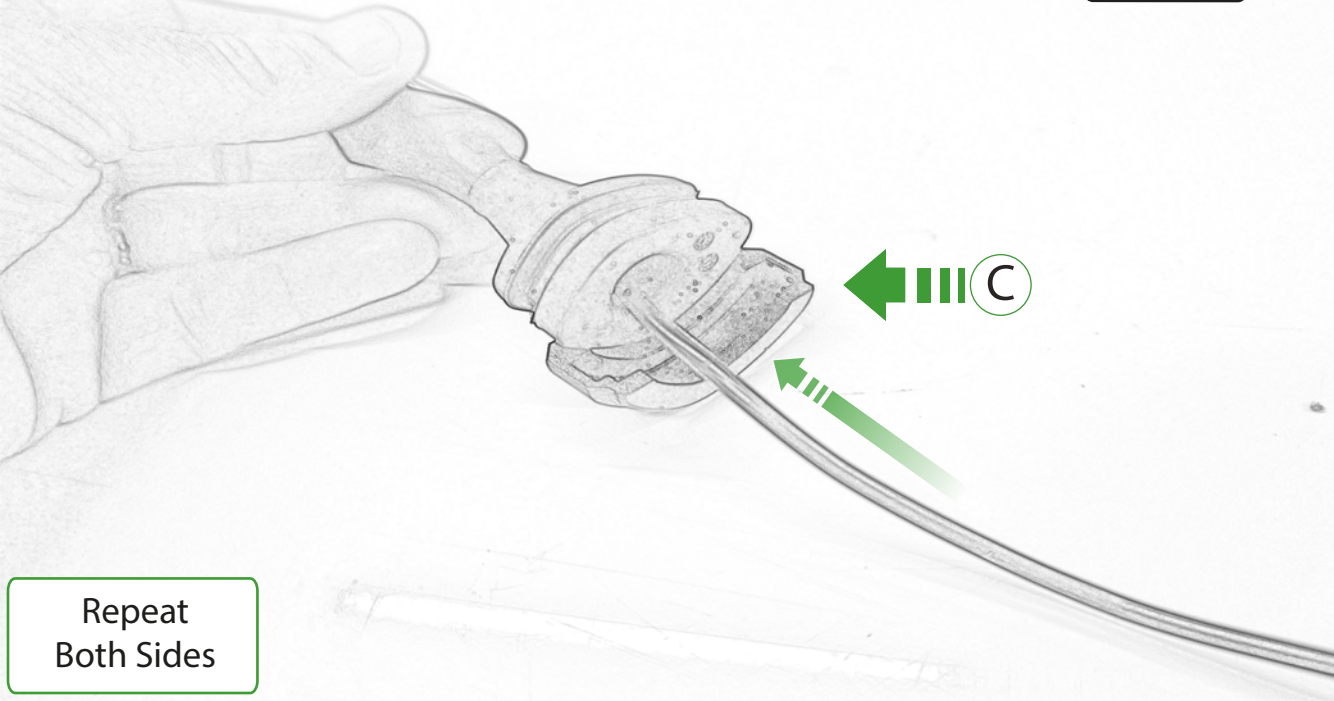

Repeat  
Both Sides

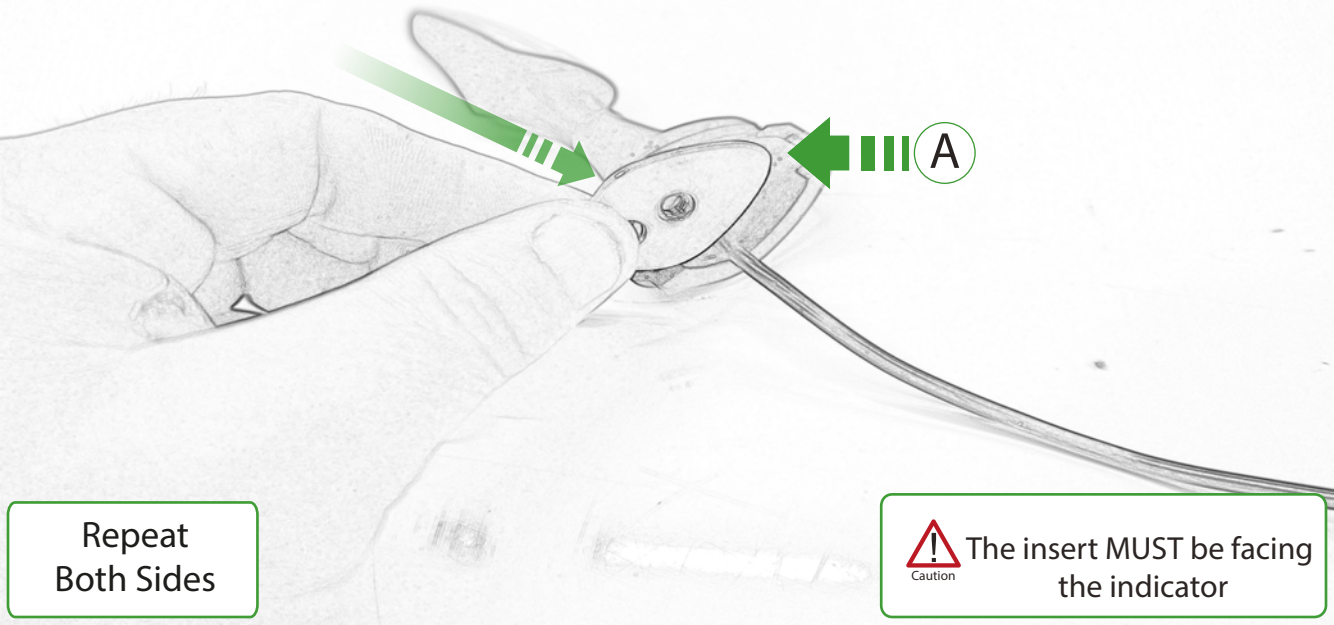


Repeat  
Both Sides



The insert **MUST** be facing  
the indicator



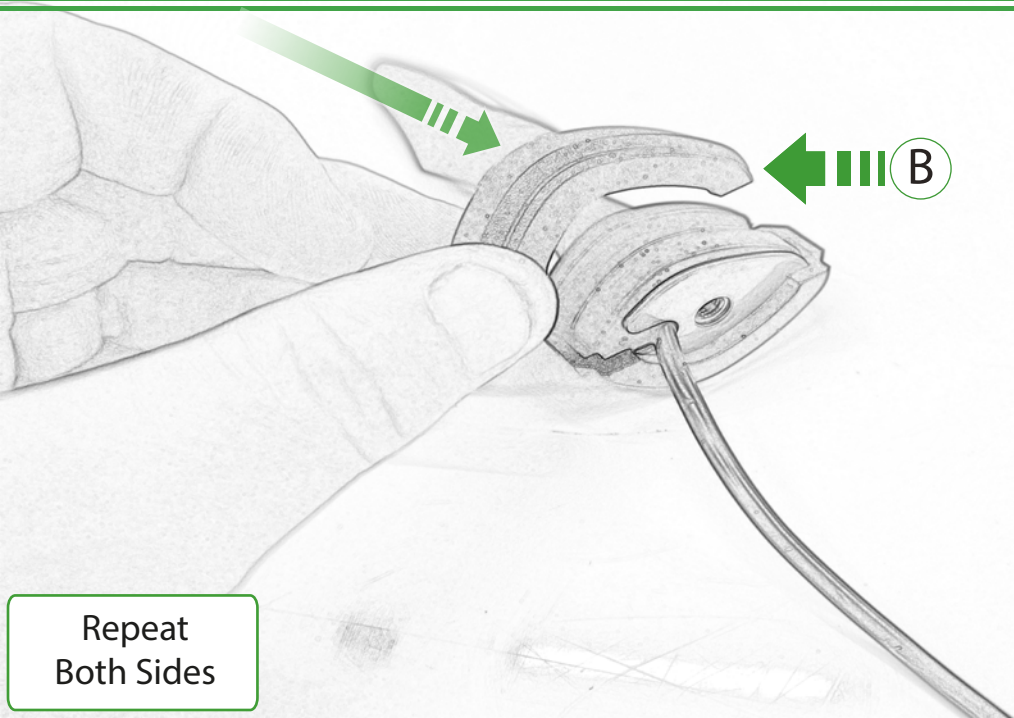


Repeat  
Both Sides





Repeat  
Both Sides

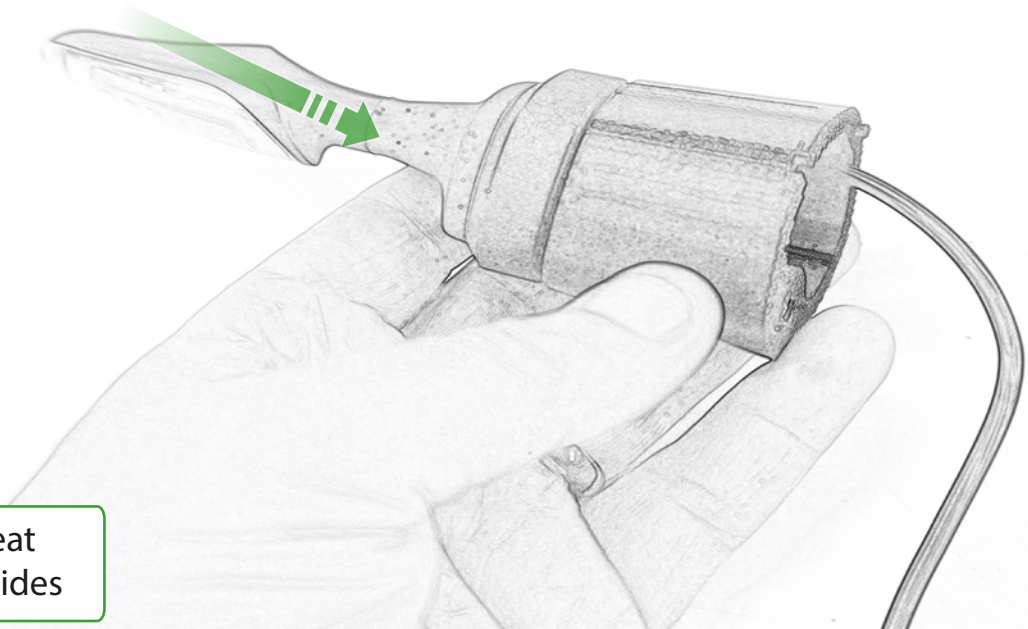

Repeat  
Both Sides