

**EVOTECH**®  
P E R F O R M A N C E


[www.evotech-performance.com](http://www.evotech-performance.com)


Ducati Streetfighter V4 / Panigale V4  
Tail Tidy Instructions





## Kit Contents PRN014957



- (A) 1 x Reflector Kit
- (B) 1 x Support Arm
- (C) 1 x Connector Type 10
- (D) 1 x EP Number Plate Light
- (E) 1 x M4 x 10 Button Head Bolt
- (F) 1 x M5 x 8 Button Head Bolt
- (G) 2 x M4 Nuts
- (H) 2 x Indicator Adaptors
- (I) 2 x M6 x 12 Button Head Bolt
- (J) 2 x M5 x 16 Button Head Bolt
- (K) 2 x M5 x 70 Button Head Bolts (Double Stem Version)
- (L) 2 x M5 x 40 Button Head Bolts (Single Stem Version)
- (M) 2 x M5 x 12 Button Head Bolt
- (N) 4 x Indicator Stems
- (O) 4 x Indicator Clamps


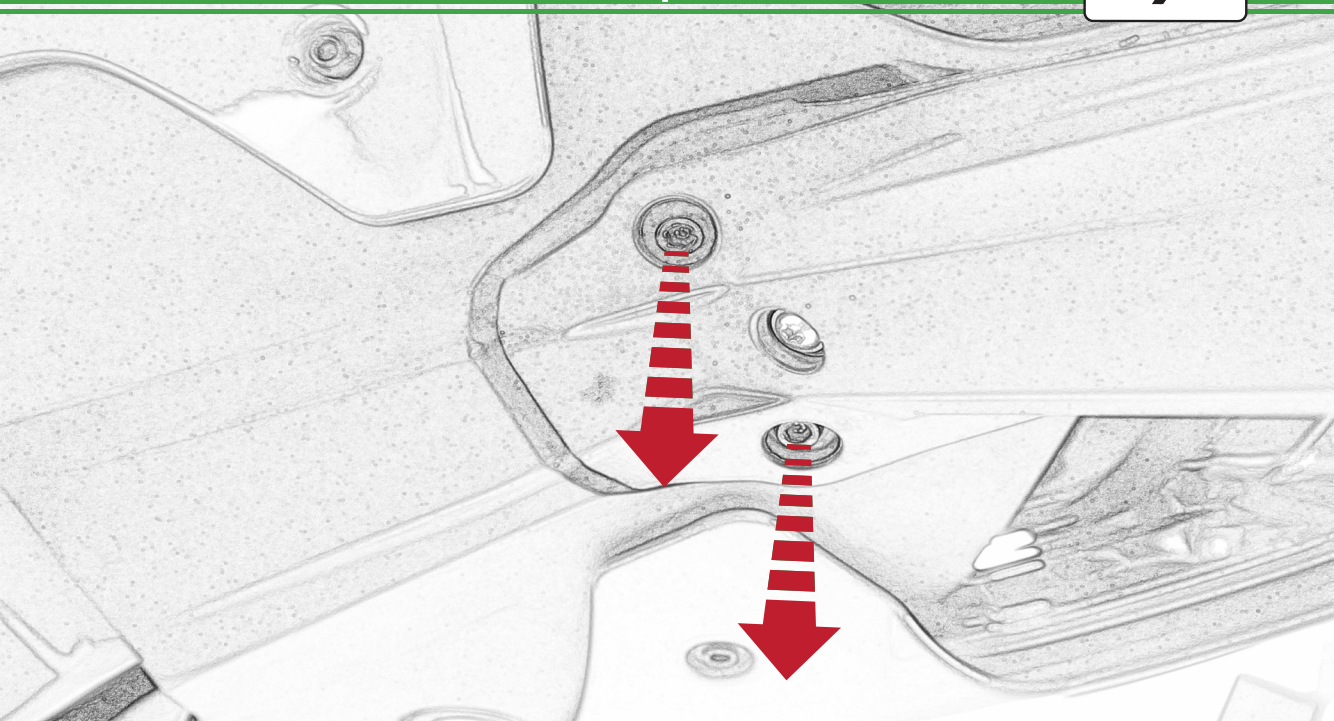


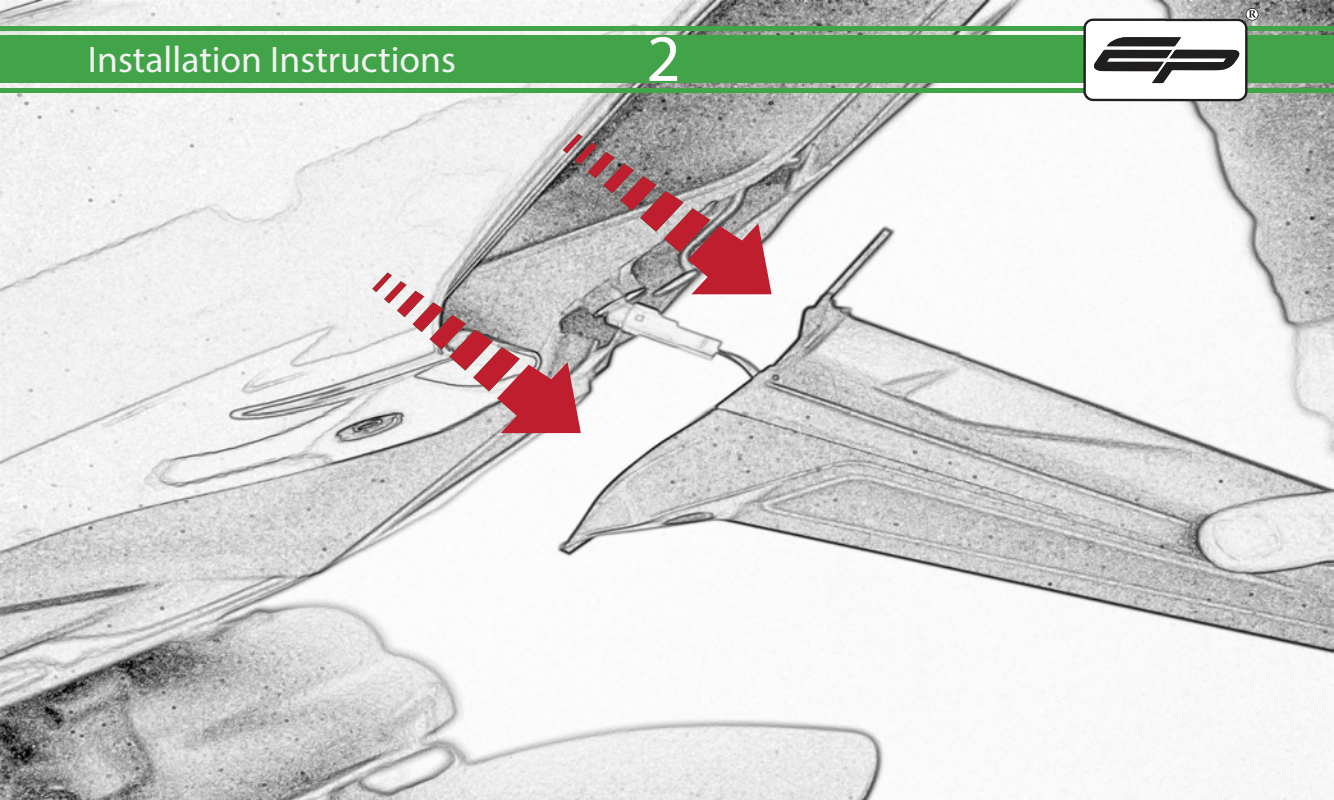

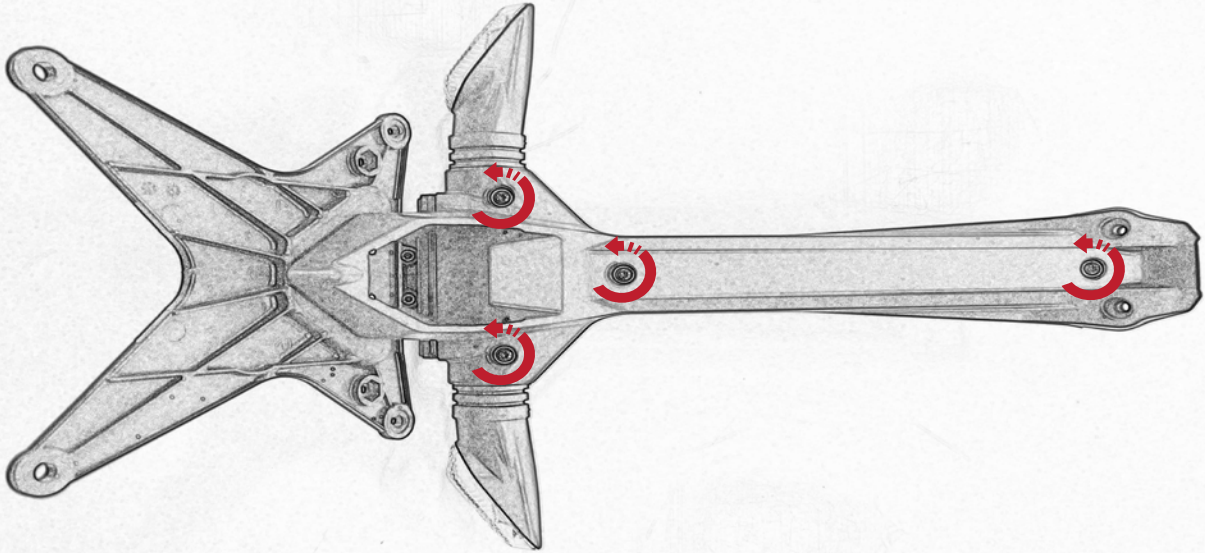


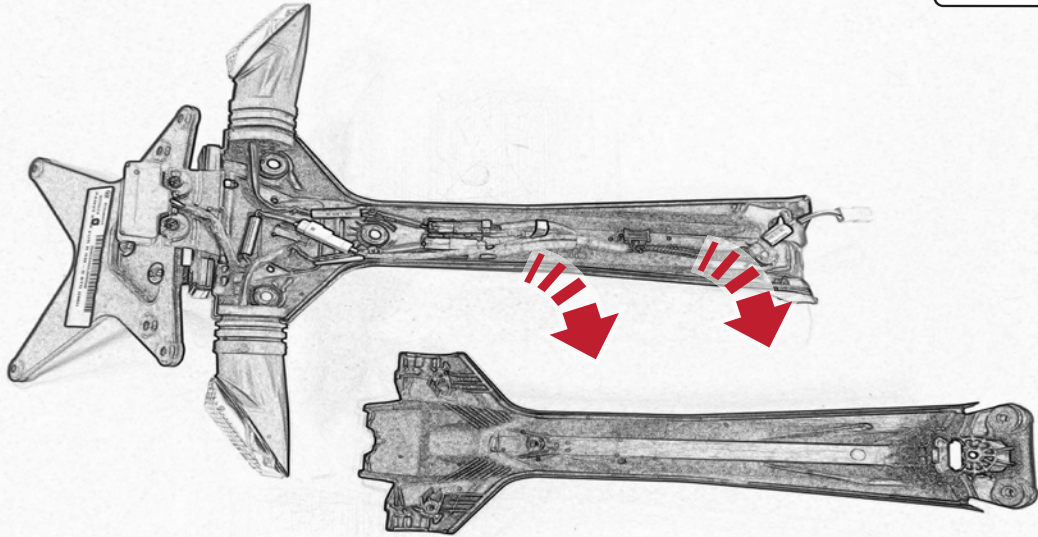


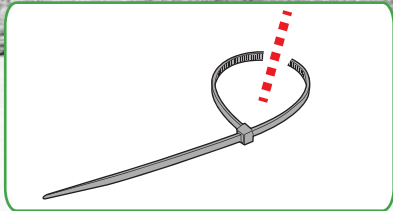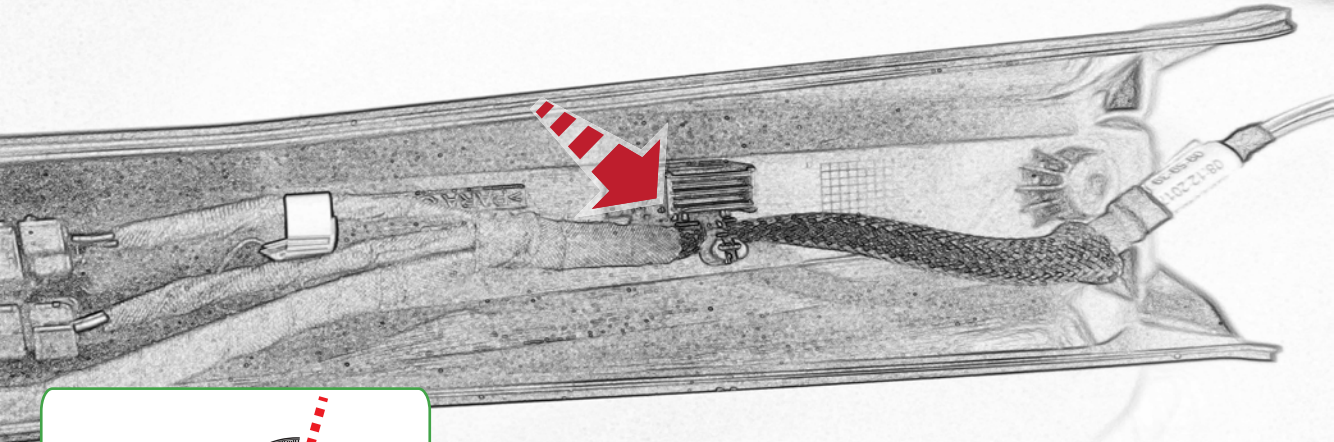

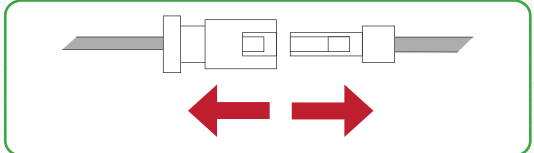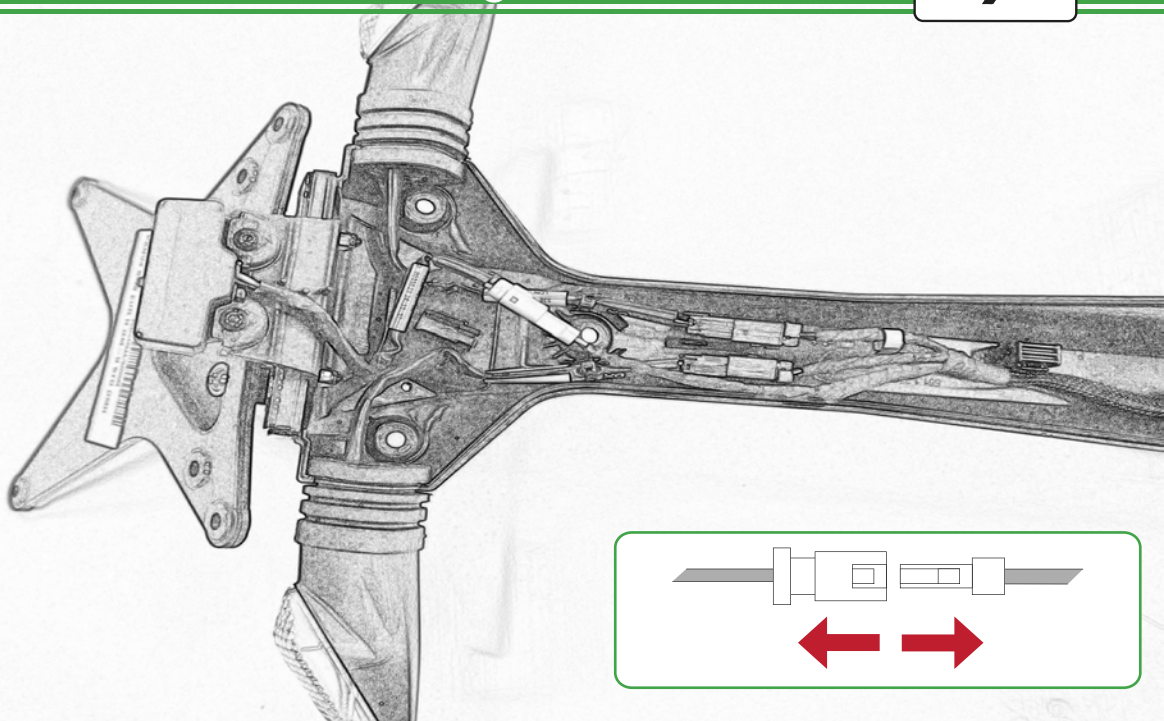



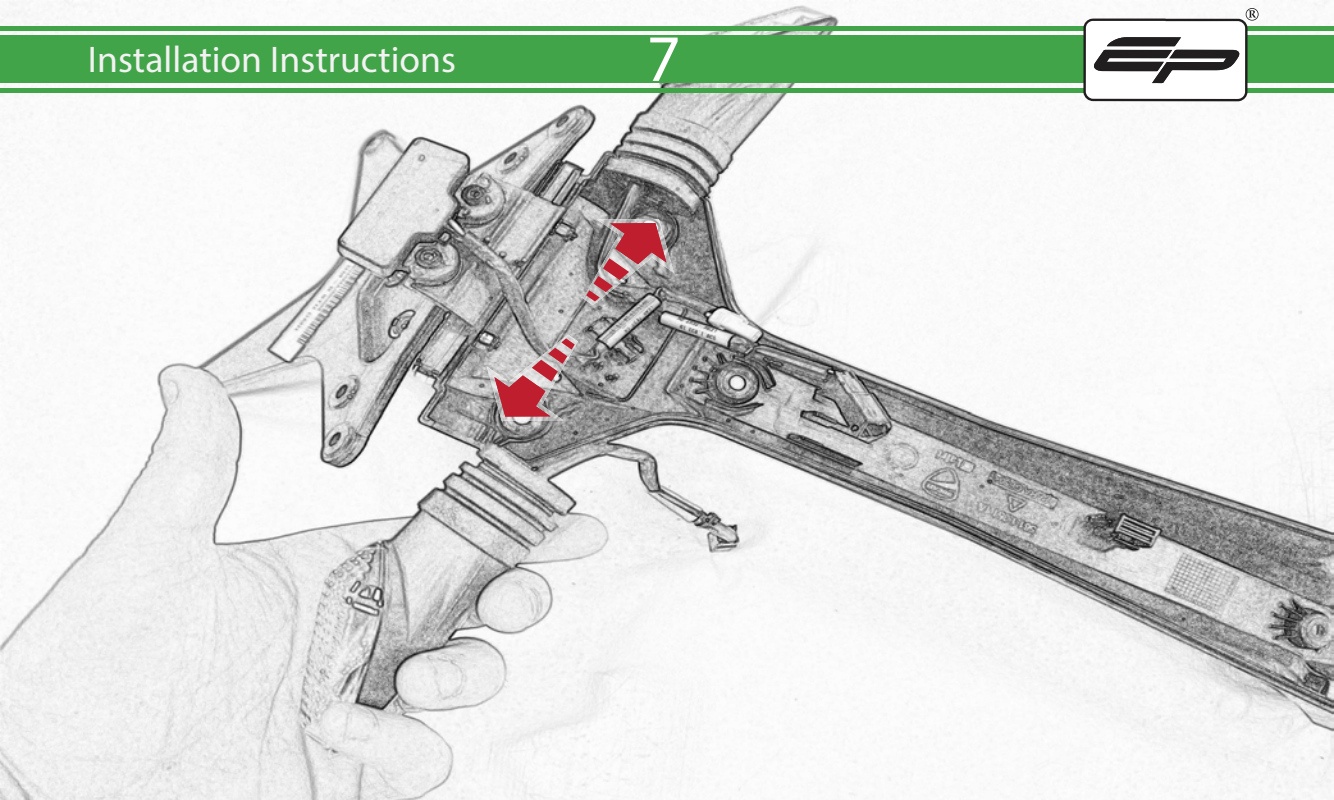

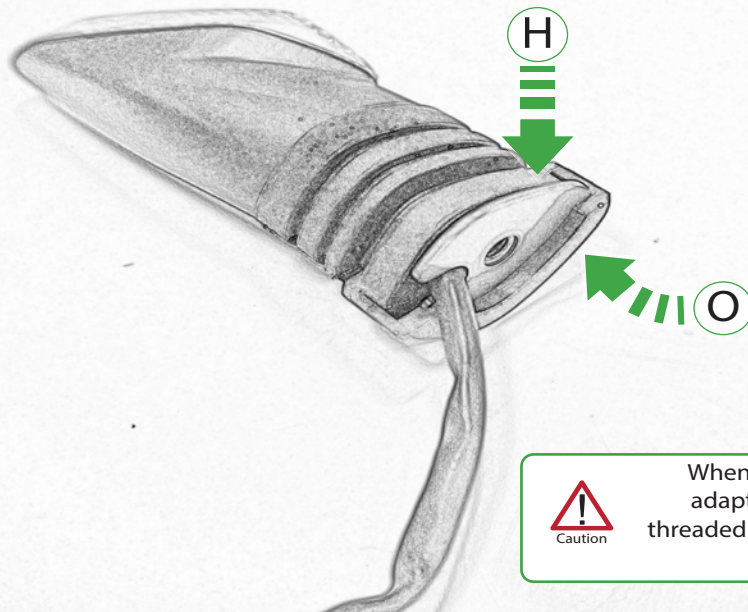


Repeat  
Both Sides




Caution


When fitting the indicator  
adaptor plate ensure the  
threaded insert is facing towards  
the indicator

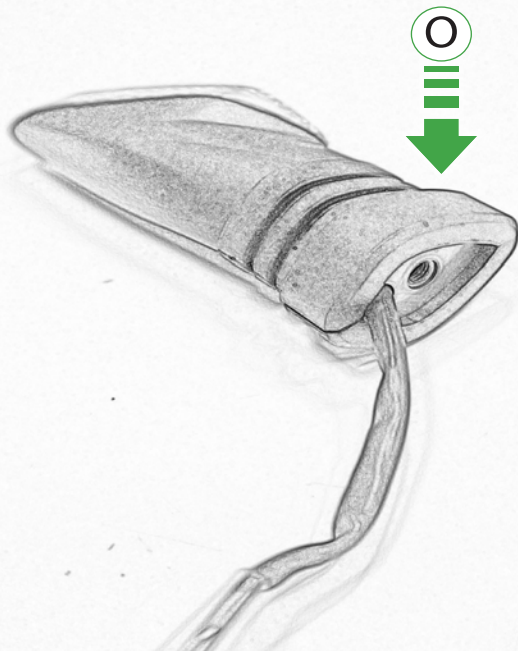

Repeat  
Both Sides

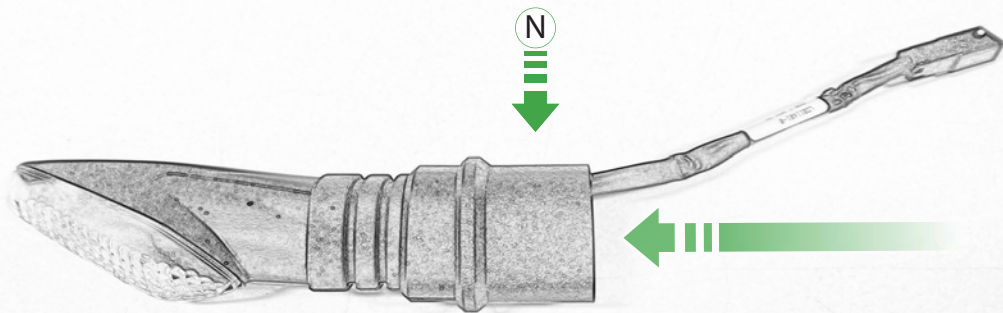


Repeat  
Both Sides

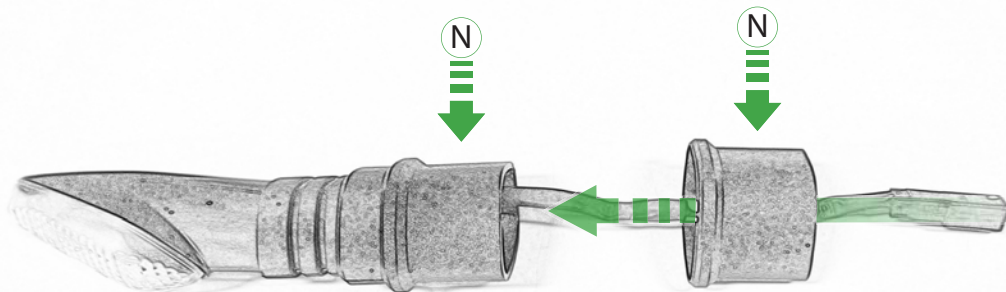


Repeat  
Both Sides




Second stem only required  
for large numberplates

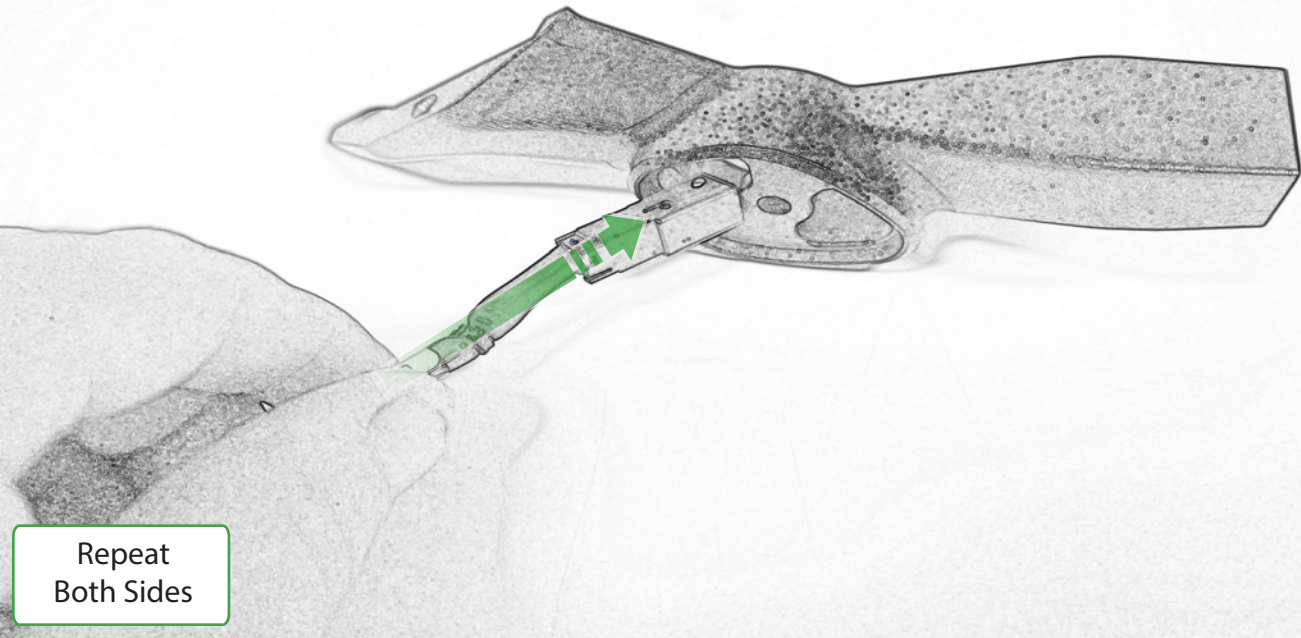


Repeat  
Both Sides

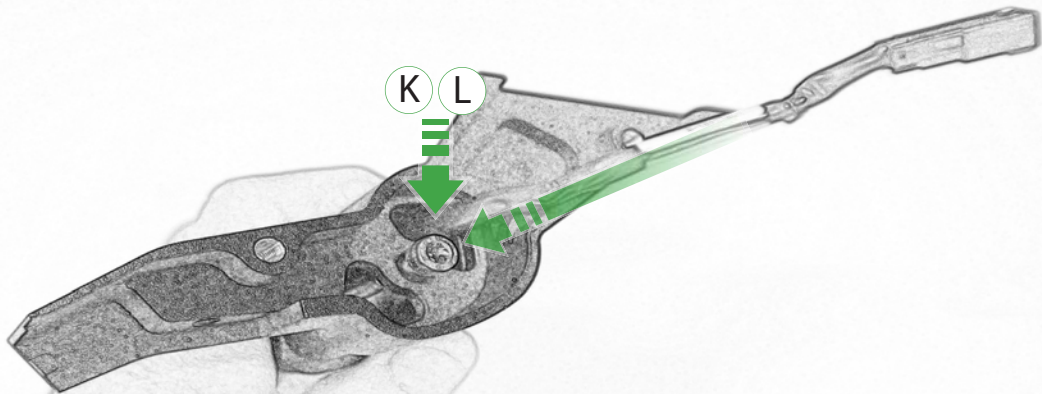



Repeat  
Both Sides

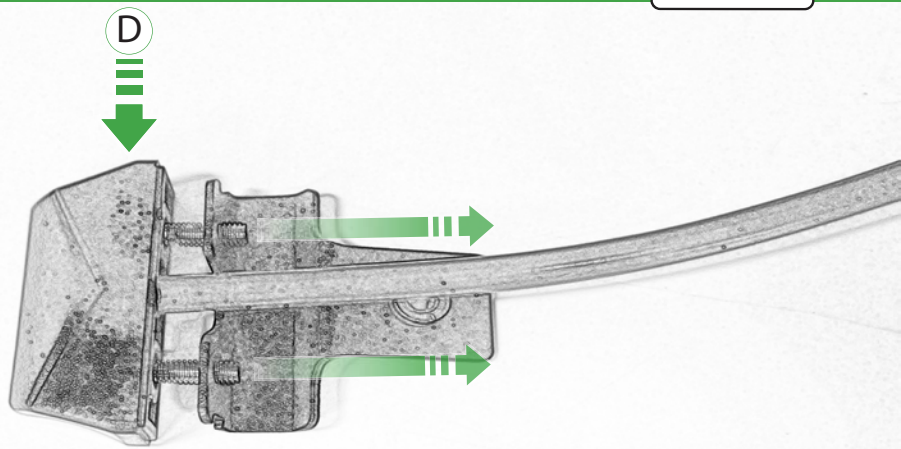



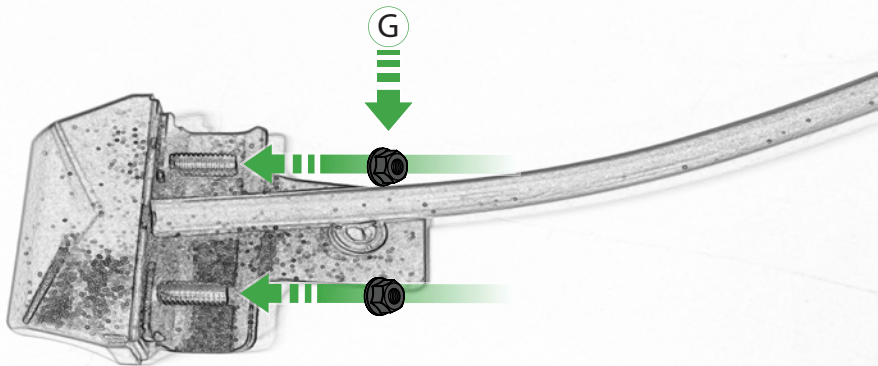

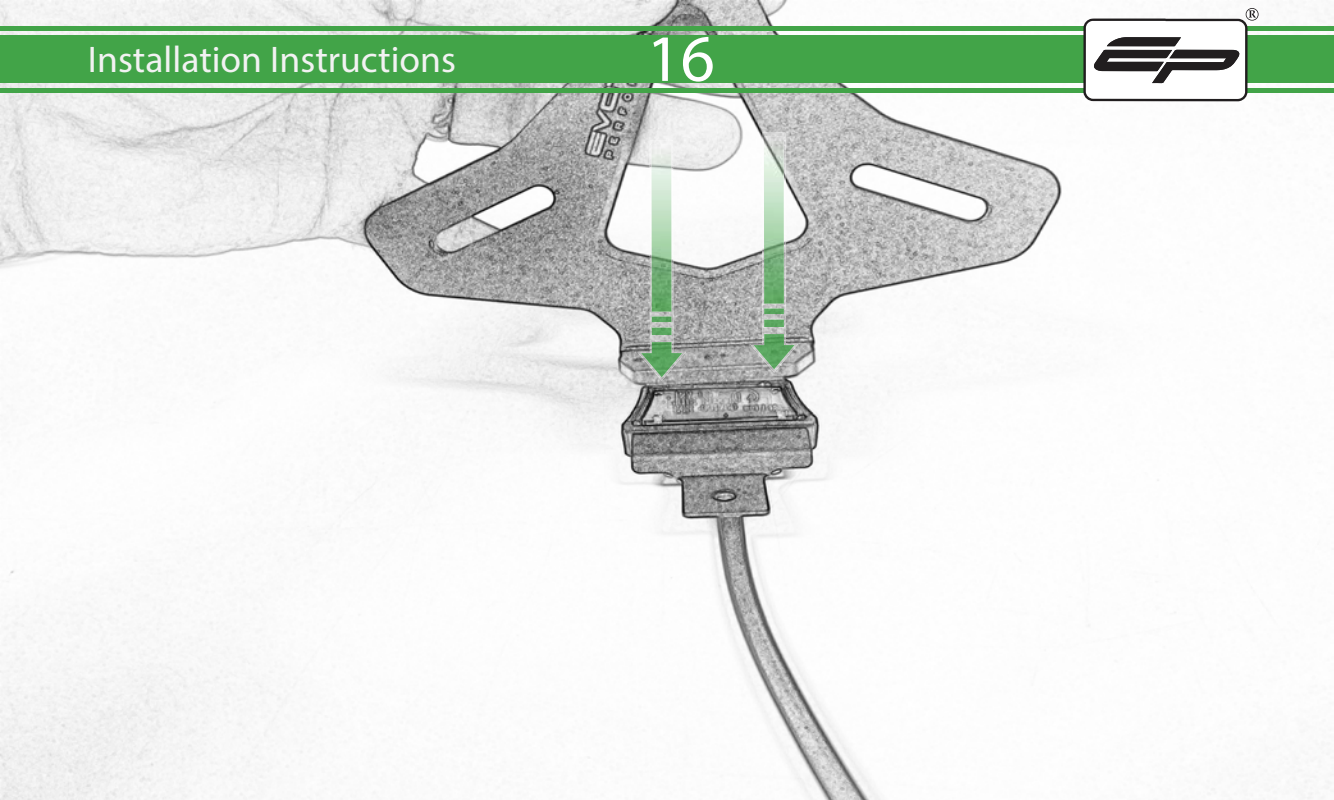

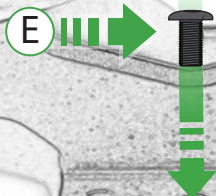

Do Not Fully Tighten

