



EVOTECH®
P E R F O R M A N C E


BMW S 1000 R / RR
Tail Tidy


Installation Instructions



Kit Contents PRN014343

- (A) 1 x Rubber Bung
- (B) 1 x Retro Light
- (C) 1 x Loom Connector
- (D) 1 x Mounting Bracket (Sub AA / BB)
- (E) 2 x M4 Flange Nuts
- (F) 2 x Indicator Spacers
- (G) 2 x M6 x 16 Black Button Head Bolts
- (H) 2 x M5 x 16 Caphead
- (I) 2 x M5 x 16 Black Button Head Bolts
- (J) 3 x M5 x 10 Black Button Head Bolts

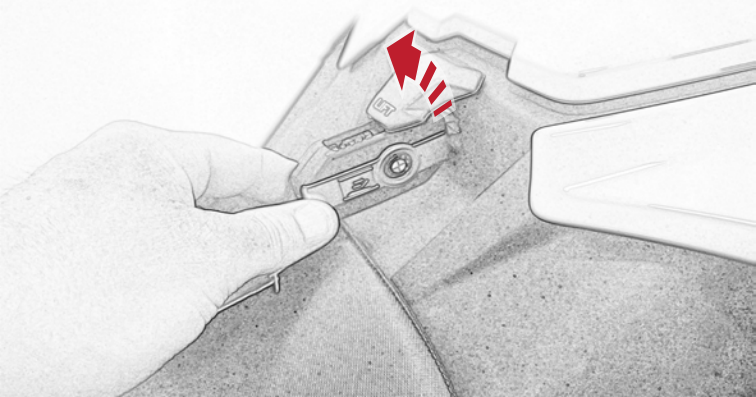

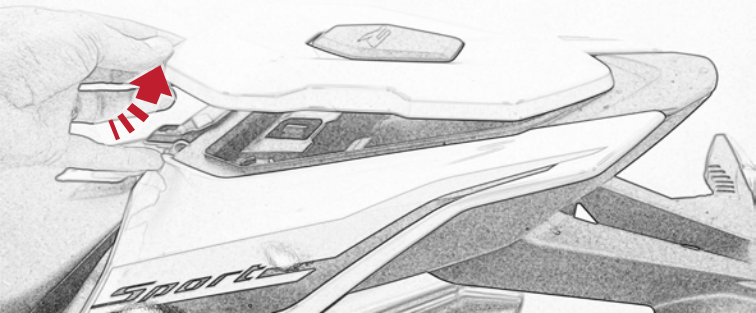





3




Repeat
Both Sides

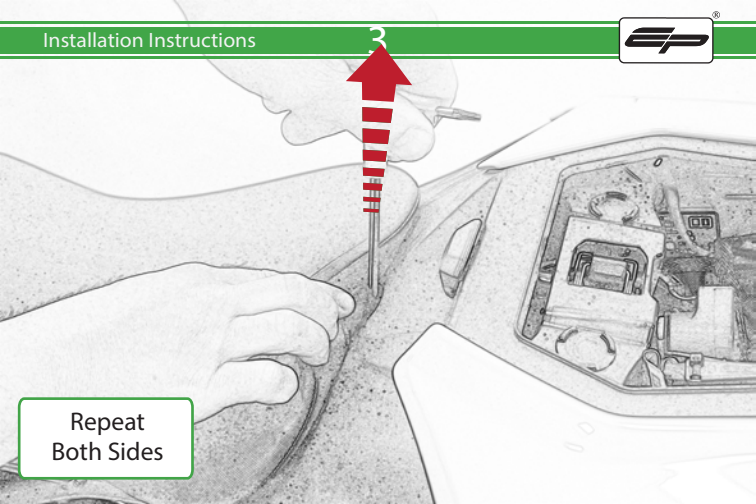


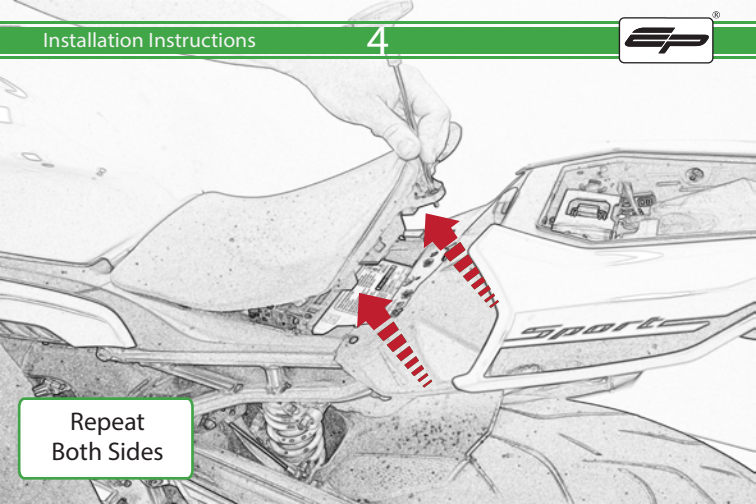

Repeat
Both Sides

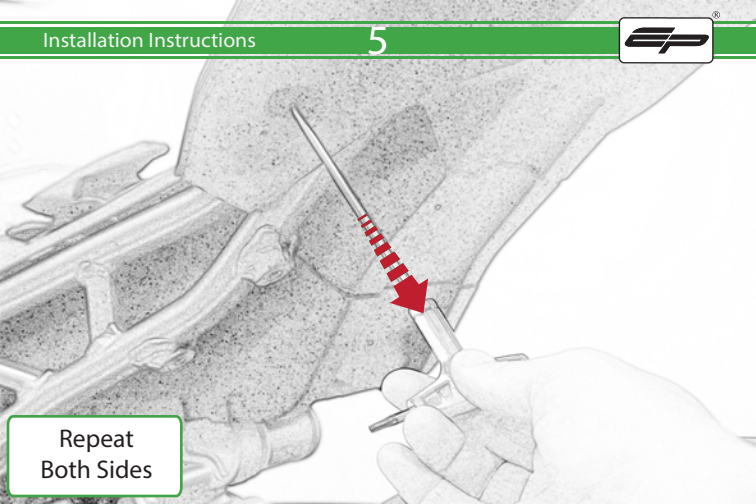


Repeat
Both Sides

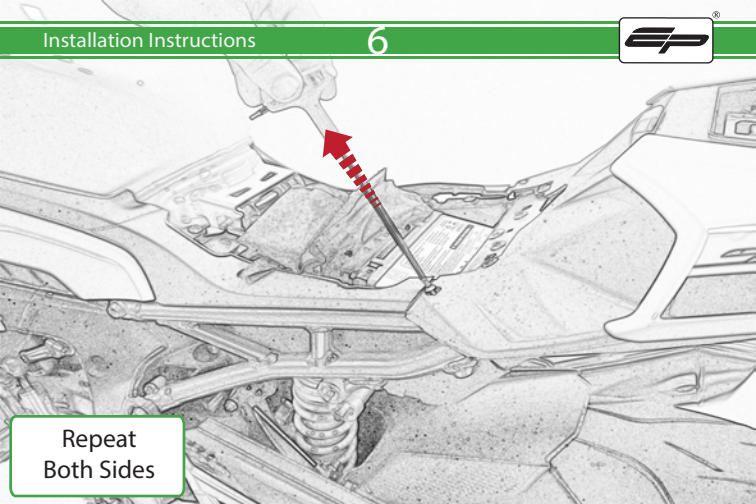


Repeat
Both Sides




Repeat
Both Sides

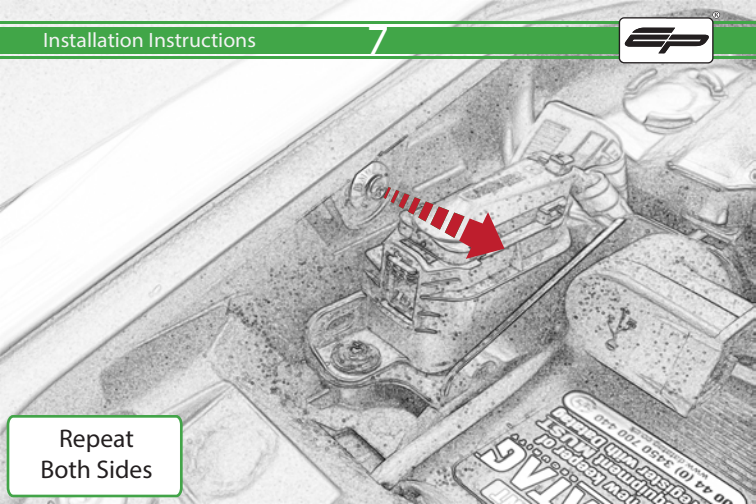


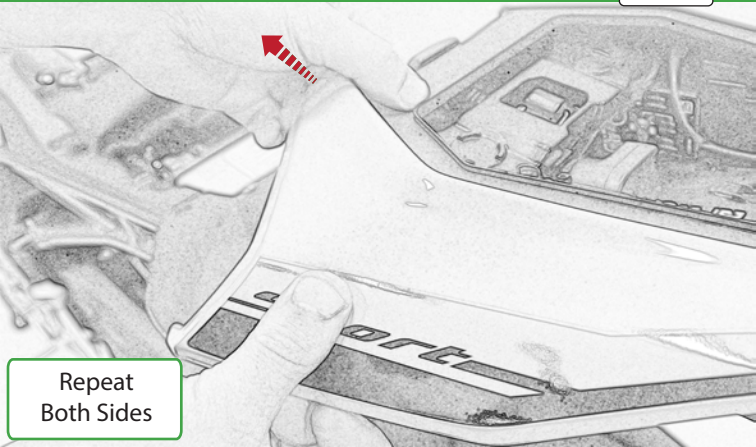

Repeat
Both Sides

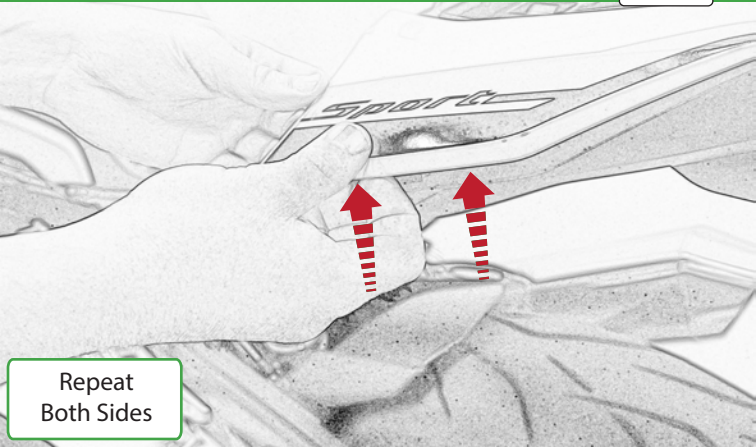

Repeat
Both Sides

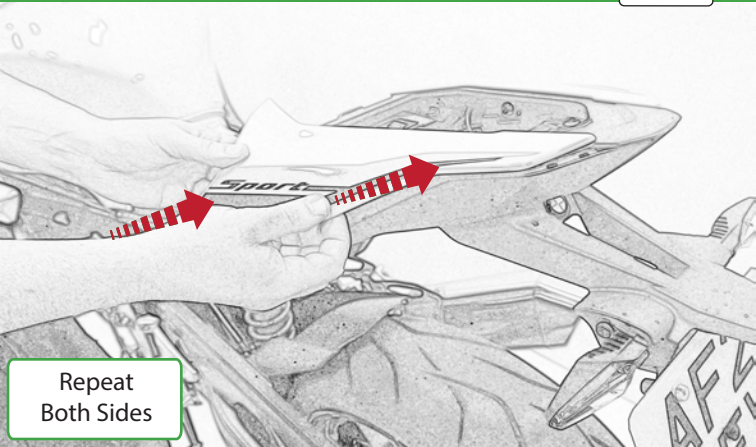


Repeat
Both Sides




Repeat
Both Sides




Repeat
Both Sides

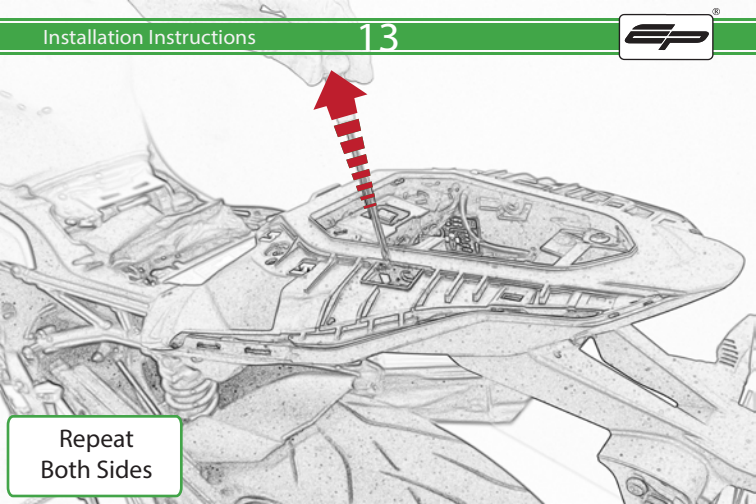


Repeat
Both Sides


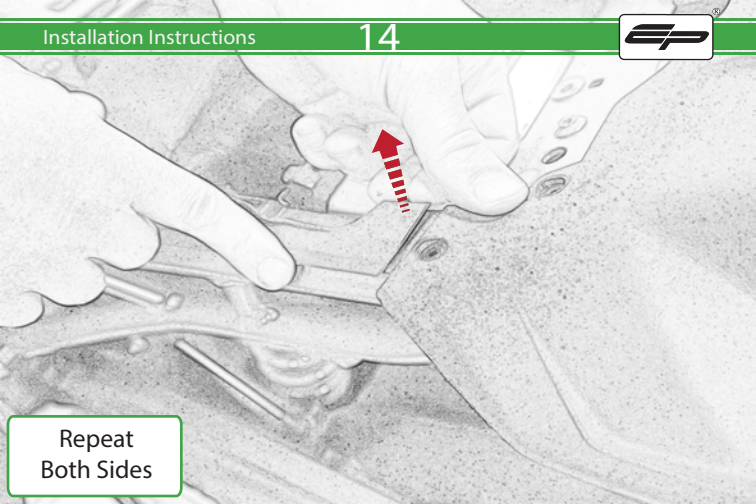




Repeat
Both Sides

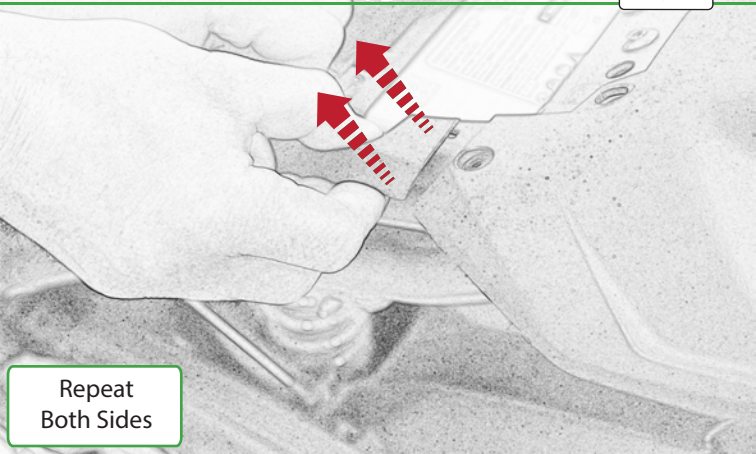



Repeat
Both Sides

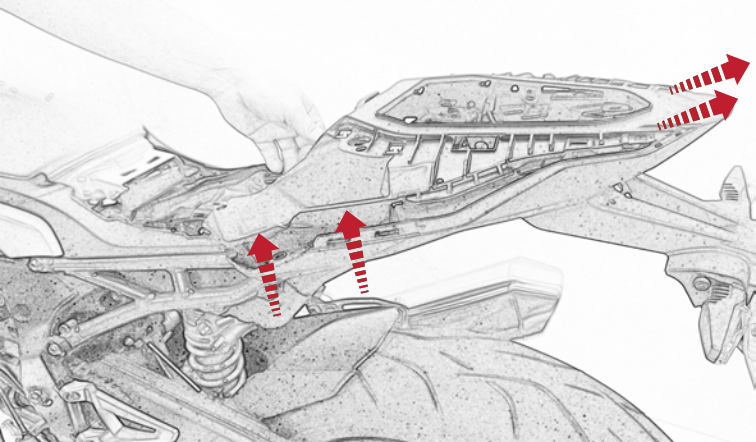


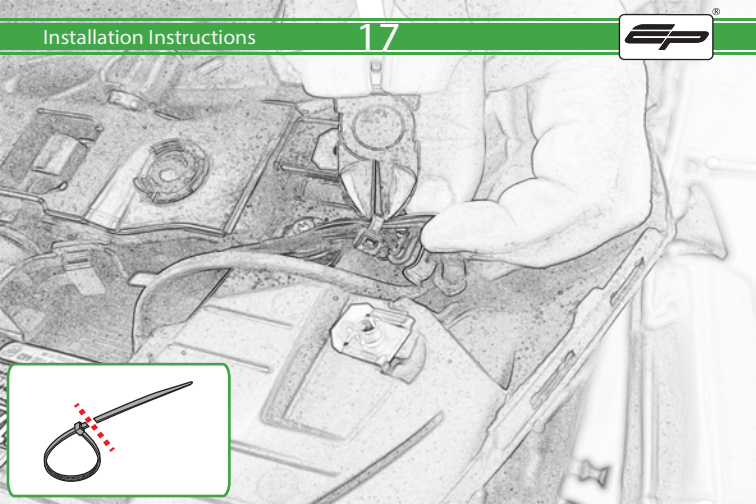


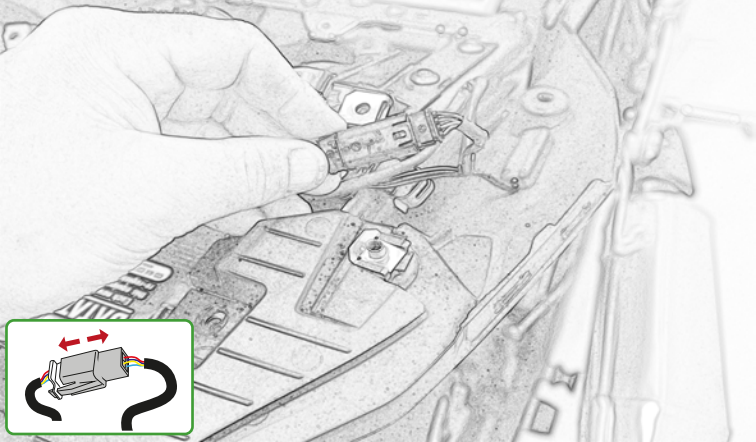

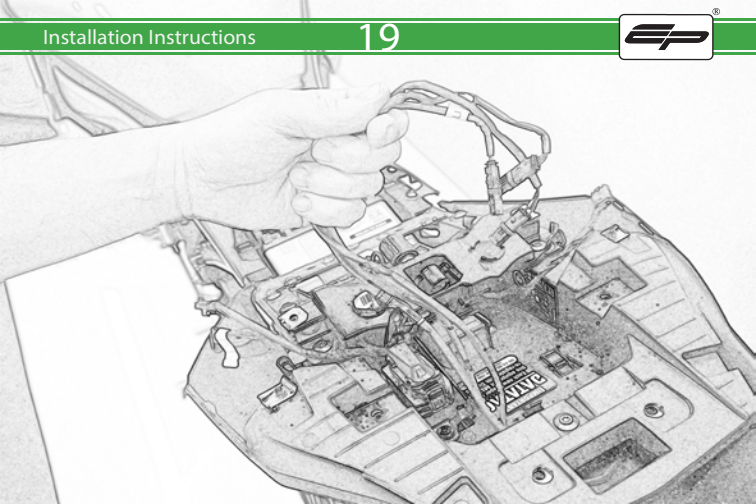


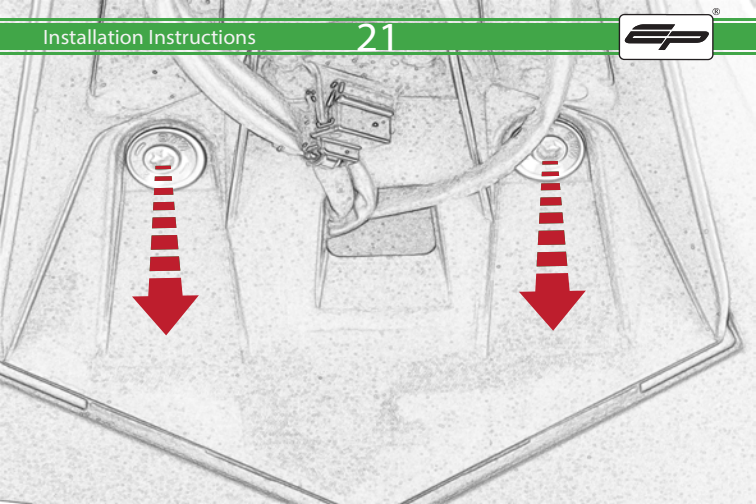


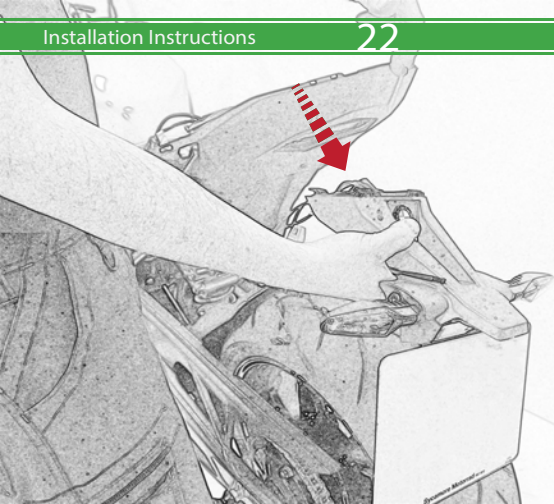


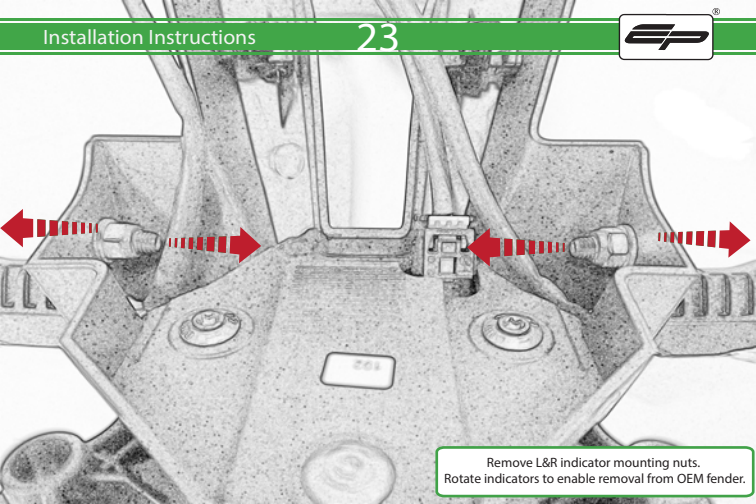


Remove L&R indicator mounting nuts.
Rotate indicators to enable removal from OEM fender.

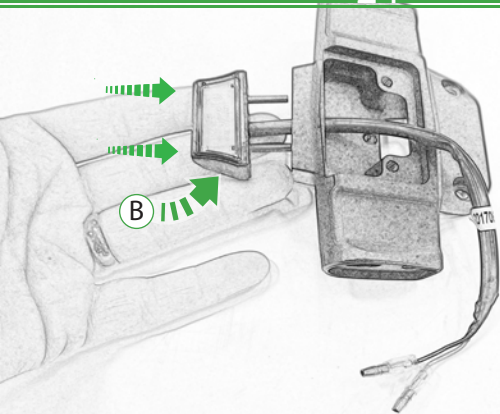

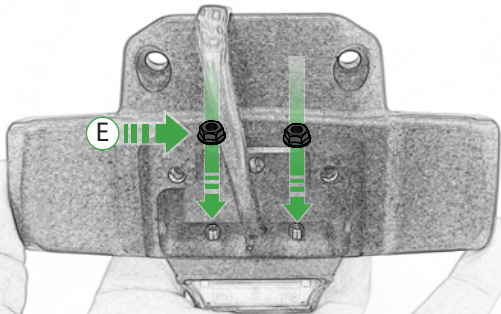


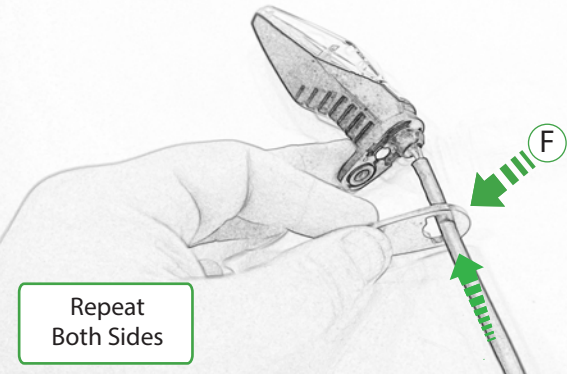


Repeat
Both Sides

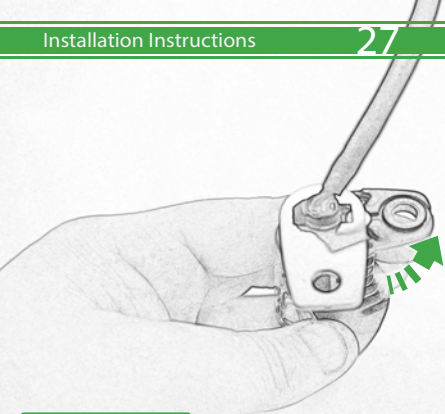


Repeat
Both Sides

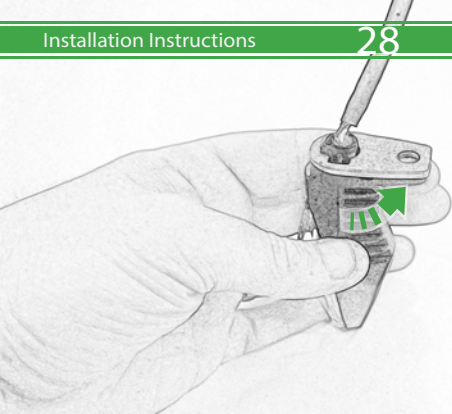


Repeat
Both Sides

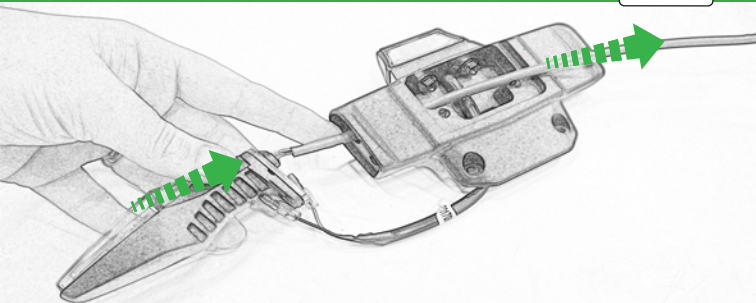

Repeat
Both Sides

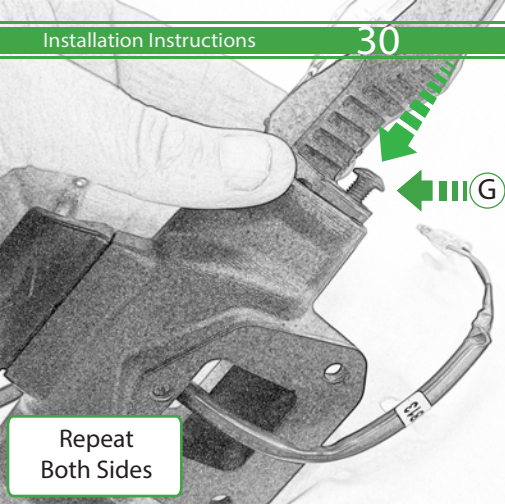



Repeat
Both Sides


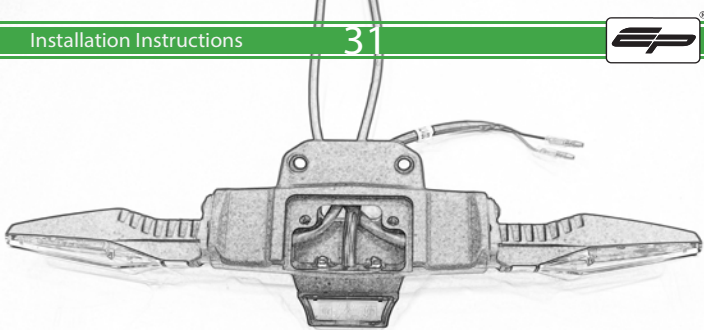



Caution

Run wires neatly down the channel in both parts ensuring they do not get trapped or squashed

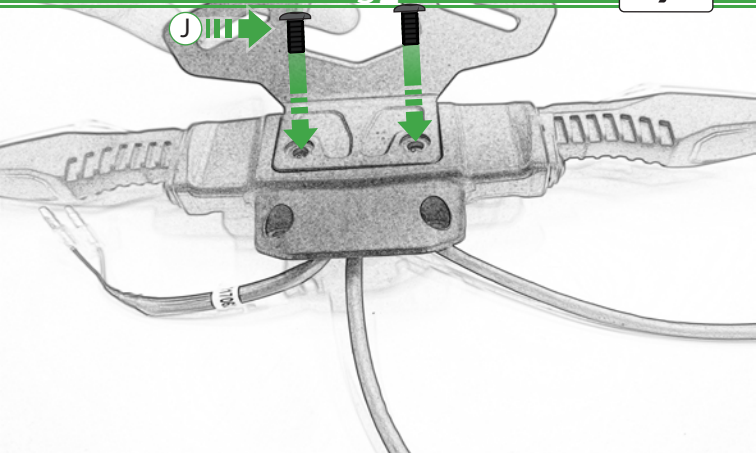

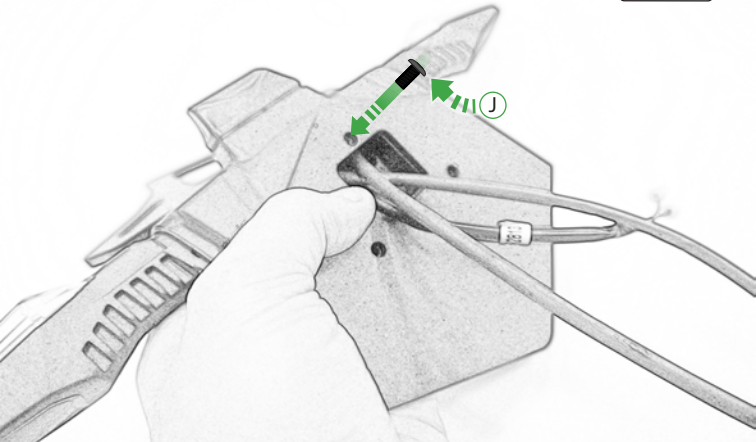


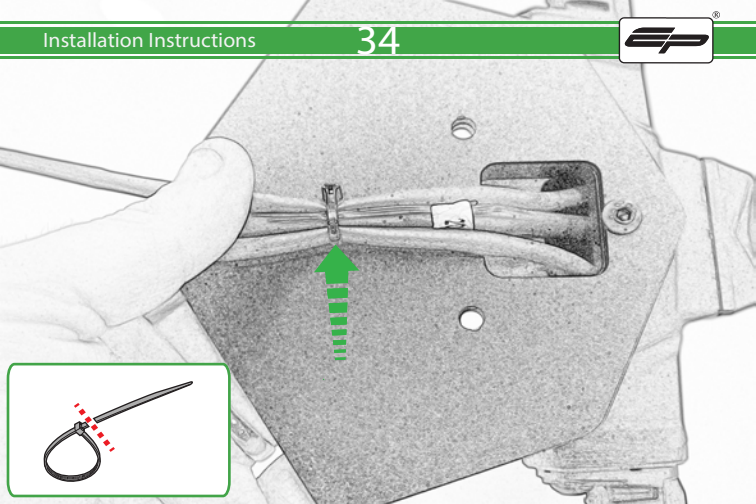


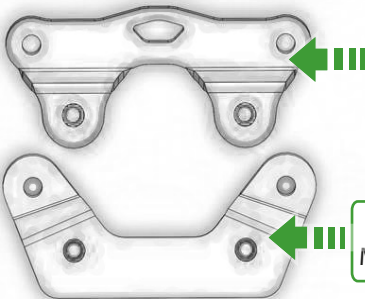


S 1000 RR
2019 - 2020

S 1000 R 2021+
M 1000 RR 2021+

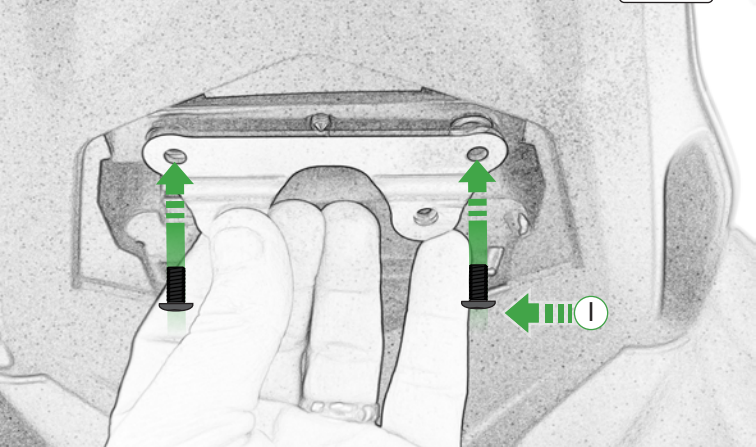


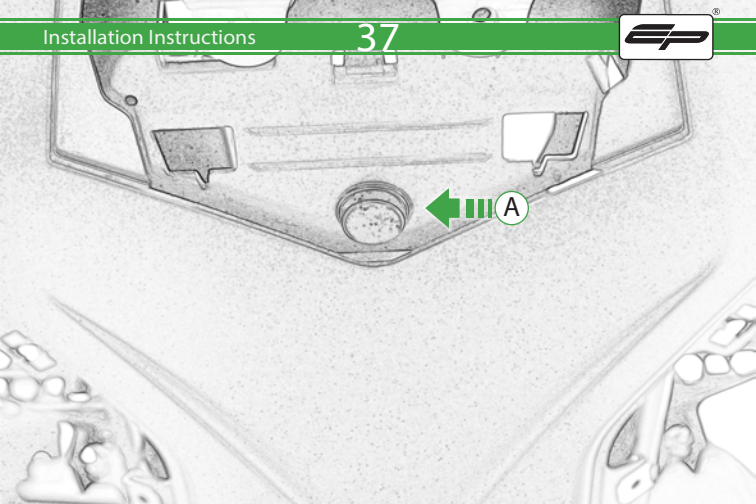

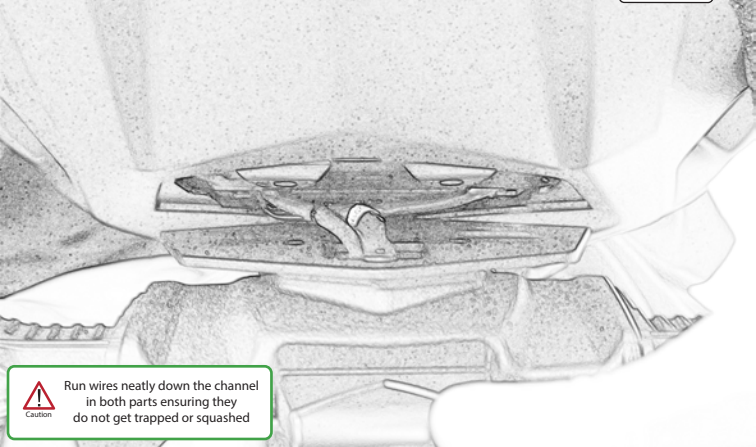



Caution

Run wires neatly down the channel
in both parts ensuring they
do not get trapped or squashed

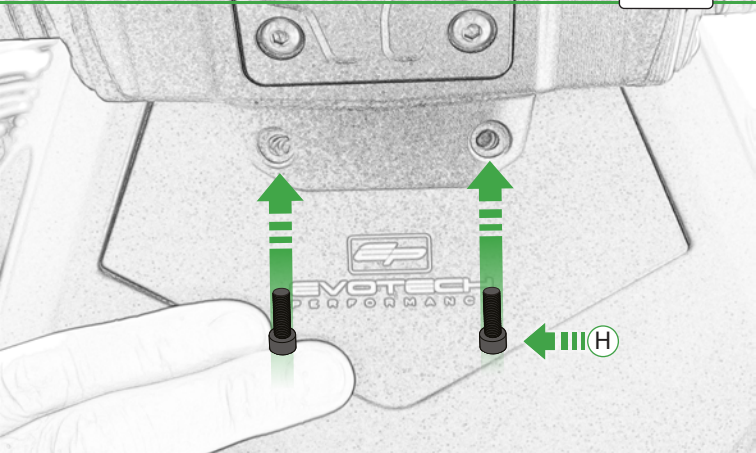



C IIII →




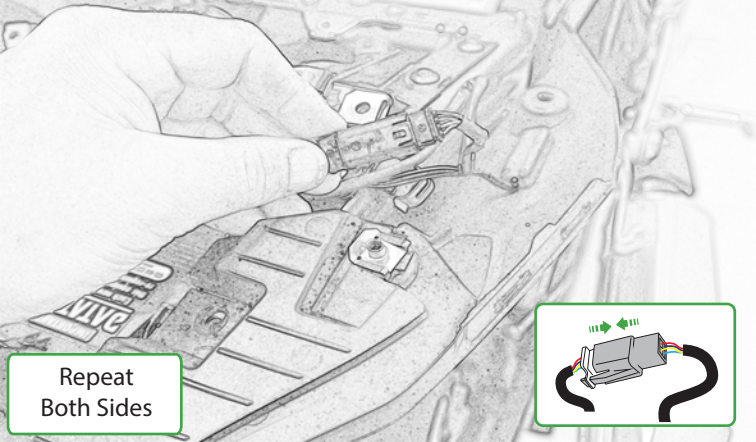


Repeat
Both Sides

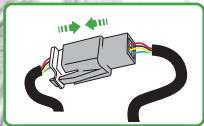

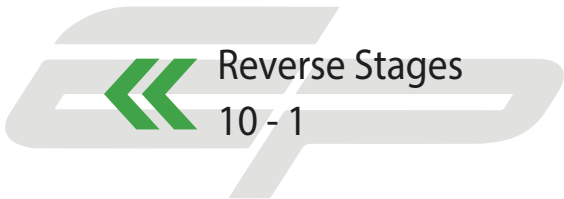

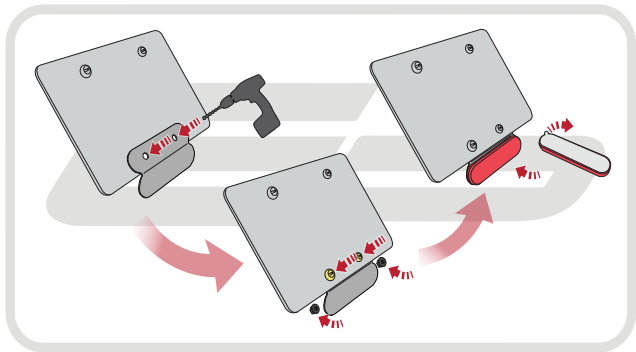

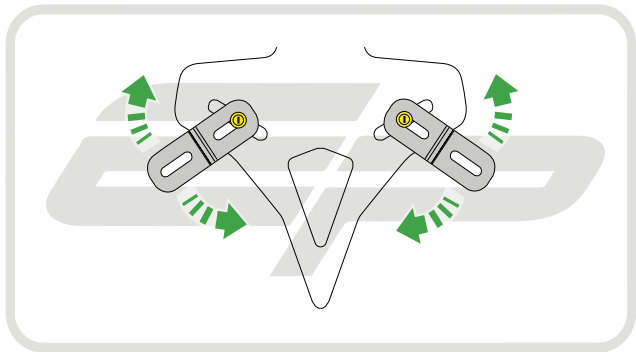



 **ESSENTIAL CHECKS** 

After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com