
# RH TEEN

### RECTANGLE SMALL WOOD CURIO SHELF INSTRUCTIONS

NO.	ITEM	DESCRIPTION	QTY.
1		Anchors	2
2	4mmmm #	Screws	2

# **ASSEMBLY INSTRUCTIONS**

- 1. To affix the shelf to drywall, determine final placement on the wall and mark the shelf's keyhole opening placements on the wall with pencil. Be sure to confirm precise distance and levelness between holes for accurate hanging.
- 2. Drill small pilot holes into the wall at the marked locations and insert plastic anchors. Turn anchors until flush with the wall.
- 3. Insert the screws into the anchors and turn until not quite flush with the wall. Ensure there is enough space to hang the shelf's keyholes over the screw heads.

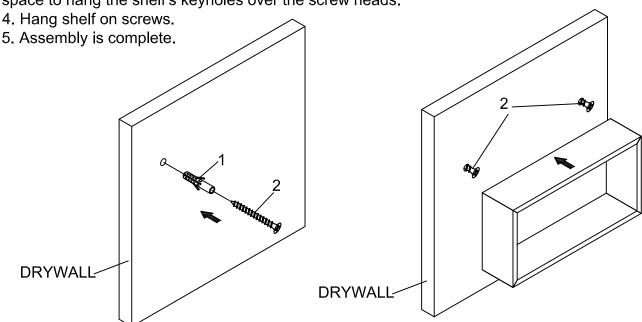

# **CARE INSTRUCTIONS**

- 1. Clean periodically by wiping the frame with a soft clean cloth
- 2. Do not expose your shelf to any liquids. All liquids should be wiped up immediately with a soft, slightly damp cloth in the direction of the wood grain.
- 3. Do not expose your shelf to strong or direct sunlight, near heat outlets or air conditioning units, open windows or dampness. Excessive exposure to sunlight and heat can cause fading of your furniture finish. Extreme temperatures and humidity changes can cause wood cracking and splitting.

# **IMPORTANT SAFETY INSTRUCTIONS**

- 1. These instructions are provided for your safety. It is important that they are read carefully and completely before installation of the fixture. Professional installation is strongly recommended. For your safety, it is recommended that two people hang the fixture.
- 2. This hanging system is meant for drywall/stud mounting only. If walls are concrete, brick or plaster, please consult your local hardware store for assistance.
- 3. Maximum loading weight on this shelf is 20 lbs.


# RH TEEN

### RECTANGLE LARGE WOOD CURIO SHELF INSTRUCTIONS

NO.	ITEM	DESCRIPTION	QTY.
1		Anchors	2
2	41111111111111	Screws	2

#### **ASSEMBLY INSTRUCTIONS**

- 1. To affix the shelf to drywall, determine final placement on the wall and mark the shelf's keyhole opening placements on the wall with pencil. Be sure to confirm precise distance and levelness between holes for accurate hanging.
- 2. Drill small pilot holes into the wall at the marked locations and insert plastic anchors. Turn anchors until flush with the wall.
- 3. Insert the screws into the anchors and turn until not quite flush with the wall. Ensure there is enough space to hang the shelf's keyholes over the screw heads.

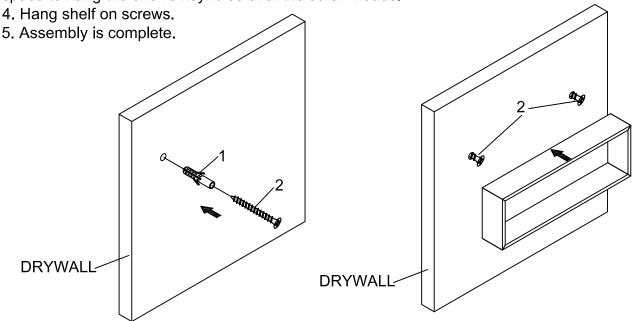

# **CARE INSTRUCTIONS**

- 1. Clean periodically by wiping the frame with a soft clean cloth
- 2. Do not expose your shelf to any liquids. All liquids should be wiped up immediately with a soft, slightly damp cloth in the direction of the wood grain.
- 3. Do not expose your shelf to strong or direct sunlight, near heat outlets or air conditioning units, open windows or dampness. Excessive exposure to sunlight and heat can cause fading of your furniture finish. Extreme temperatures and humidity changes can cause wood cracking and splitting.

# **IMPORTANT SAFETY INSTRUCTIONS**

- 1. These instructions are provided for your safety. It is important that they are read carefully and completely before installation of the fixture. Professional installation is strongly recommended. For your safety, it is recommended that two people hang the fixture.
- 2. This hanging system is meant for drywall/stud mounting only. If walls are concrete, brick or plaster, please consult your local hardware store for assistance.
- 3. Maximum loading weight on this shelf is 30 lbs.