



User Manual

Version 1.0.1 Aug 2021

IEC850-211-S

Modbus TCP to IEC-61850 Gateway



Warranty

All products manufactured by ICP DAS are under warranty regarding defective materials for a period of one year, beginning from the date of delivery to the original purchaser.

Warning

ICP DAS assumes no liability for any damage resulting from the use of this product. ICP DAS reserves the right to change this manual at any time without notice. The information furnished by ICP DAS is believed to be accurate and reliable. However, no responsibility is assumed by ICP DAS for its use, nor for any infringements of patents or other rights of third parties resulting from its use.

Copyright

Copyright © 2021 ICP DAS Co., Ltd. All rights are reserved.

Trademarks

Names are used for identification purposes only and may be registered trademarks of their respective companies.

Document Revision

Version	Author	Date	Description
1.0.0	Evan	2021/01/06	First Released Revision
1.0.1	Evan	2021/08/09	

Contents

1. Introduction.....	4
1.1. IEC-61850 Introduction	4
1.2. Modbus TCP Introduction.....	4
1.3. About IEC850-211-S	4
1.4. Features	5
1.5. Specifications	5
2. Hardware	7
2.1. Dimensions	7
2.2. Appearance	8
2.3. LED Indicator	9
3. Getting Started With IEC850-211-S.....	10
3.1. Preparations for Devices	10
3.2. Hardware Wiring.....	10
3.3. IEC850-211-S Utility	10
3.4. Update Firmware	18

1. Introduction

1.1. IEC-61850 Introduction

IEC 61850 is an international standard defining communication protocols for intelligent electronic devices at electrical substations. It is developed by the International Electrotechnical Commission's (IEC) Technical Committee 57 reference architecture for electric power systems. The objective of the standard is to specify requirements and to provide a framework to achieve interoperability between the IEDs supplied from different suppliers. This protocol can run over TCP/IP networks or substation LANs using high speed switched Ethernet to obtain the necessary response times below four milliseconds for protective relaying.

1.2. Modbus TCP Introduction

MODBUS/TCP is a variant of the MODBUS family of simple, vendor-neutral communication protocols intended for supervision and control of automation equipment. Specifically, it covers the use of MODBUS messaging in an "Intranet" or "Internet" environment using the TCP/IP protocols. The most common use of the protocols at this time are for Ethernet attachment of PLC's, I/O modules, and gateways to other simple field buses or I/O networks.

1.3. About IEC850-211-S

IEC850-211-S is a network gateway allowing IEC-61850 MMS client to access Modbus TCP network as a Modbus TCP client. IEC-61850 protocol is used in substation automation. The IEDs exchange information with other IEDs or SCADA via IEC-61850 protocol for protection and control devices.

IEC850-211-S support Logical Node GGIO and Data Object Ind, IntIn, SPCSO, ISCSO. It also support data set and unbuffered report function to exchange data with a client. The data mapping rule can be configured via ICPDAS Utility.

1.4. Features

- Read/Write Modbus register via IEC-61850
- Configurable IEC-61850 server
- Configurable Modbus TCP client
- Support Logical Node GGIO
- Support common Data Object Ind, IntIn, SPCSO, ISCSO
- Support Modbus DI, DO,AI,AO types
- Support Modbus function code 1, 2, 3, 4, 5, 6
- Maximum support 32 Modbus TCP servers

1.5. Specifications


System		
CPU	Cortex-A8, 1 GHz	
SDRAM	512 MB	
Flash	512 MB	
FRAM	64 KB	
LED Indicators	PWR(Power), RUN(Running), L1, L2, L3	
Communication Ports		
VGA	1 (reserved)	
Ethernet	RJ-45 x 2, 10/100/1000 Based-TX (Auto-negotiating, Auto MDI/MDI-X, LED indicators)	
USB 2.0	2 (reserved)	
Console Port	RS-232 (RxD, TxD and GND); Non-isolated	
ttyO2	RS-485 (reserved) (Data+, Data-); Non-isolated	
ttyO4	RS-232 (reserved) (RxD, TxD and GND); Non-isolated	
ttyO5	RS-485 (reserved) (Data+, Data-); 2500 VDC isolated	
Protocol		
Modbus	identity	Modbus TCP client
	Function	1, 2, 3, 4, 5, 6
	connection	Max. 32 Modbus TCP servers

IEC-61850	identity	IEC-61850 MMS server
	connection	Max. 5 MMS clients
	Logical Node	LLN0 · LPHD · GGIO
	Data Object	Ind, IntIn, SPCSO, ISCSO
	control	status-only direct-with-normal-security direct-with-enhanced-security sbo-with-normal-security sbo-with-enhanced-security
Power		
Supply Voltage	+12 to +48 VDC	
Consumption	4.8 W	
Connector	3-pin Removable Terminal Block	
Mechanism		
Dimensions	35 mm x 167 mm x 119 mm	
Casing	Metal	
Installation	DIN-Rail	
Environment		
Operating Temp.	-25°C ~ +75°C	
Storage Temp	-30°C ~ +85°C	
Humidity	10 ~ 90% RH, non-condensing	


2. Hardware

2.1. Dimensions

Unit: mm

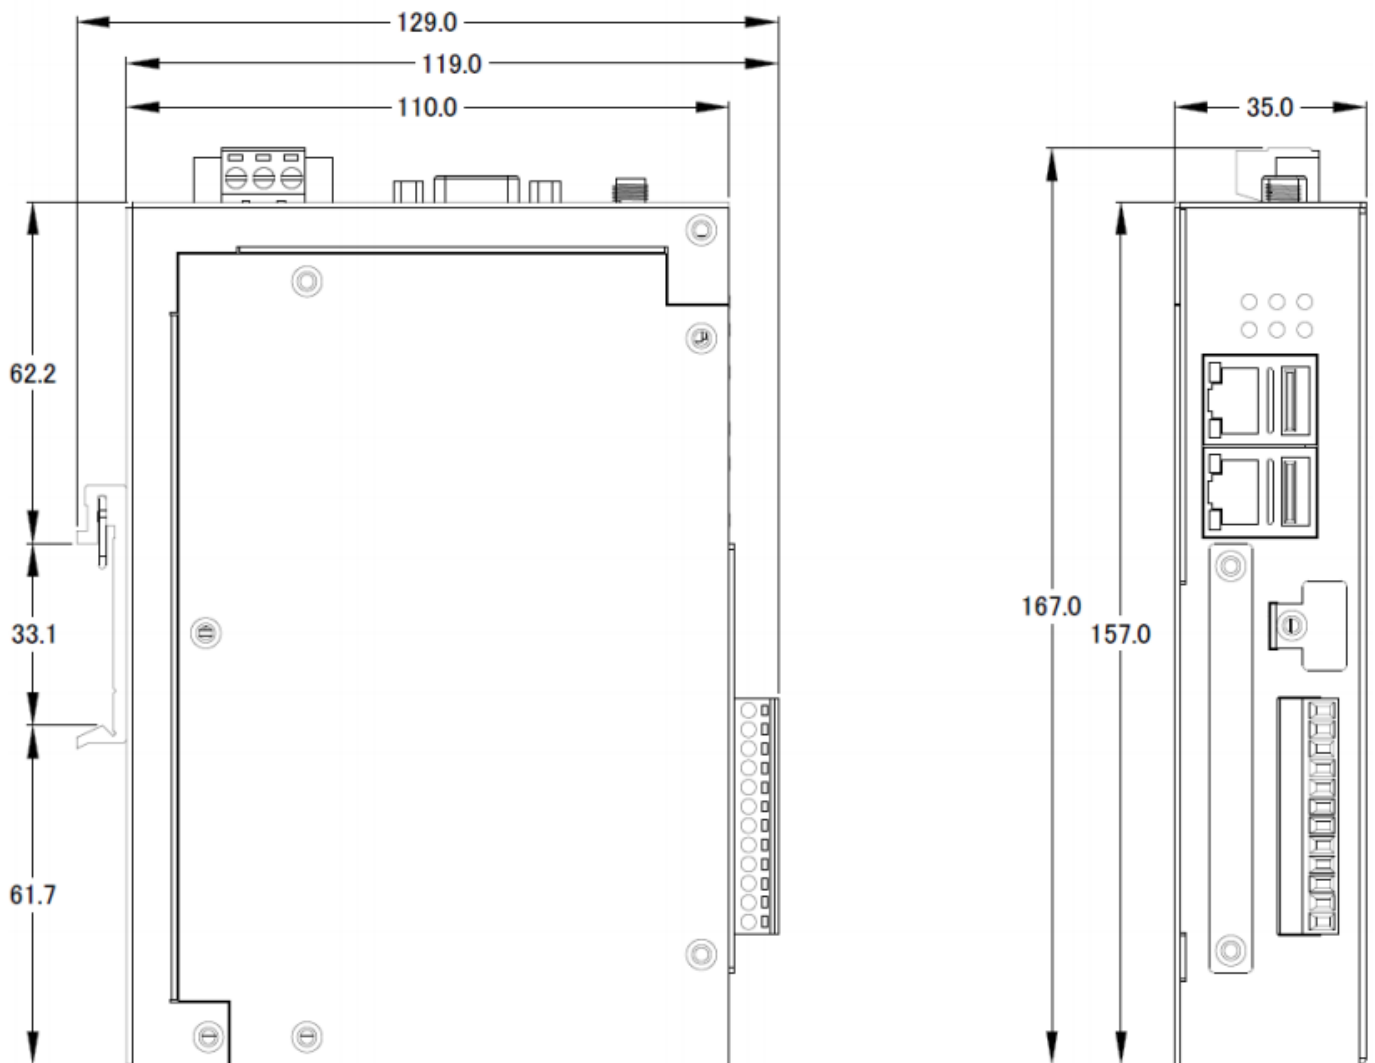


2.2. Appearance

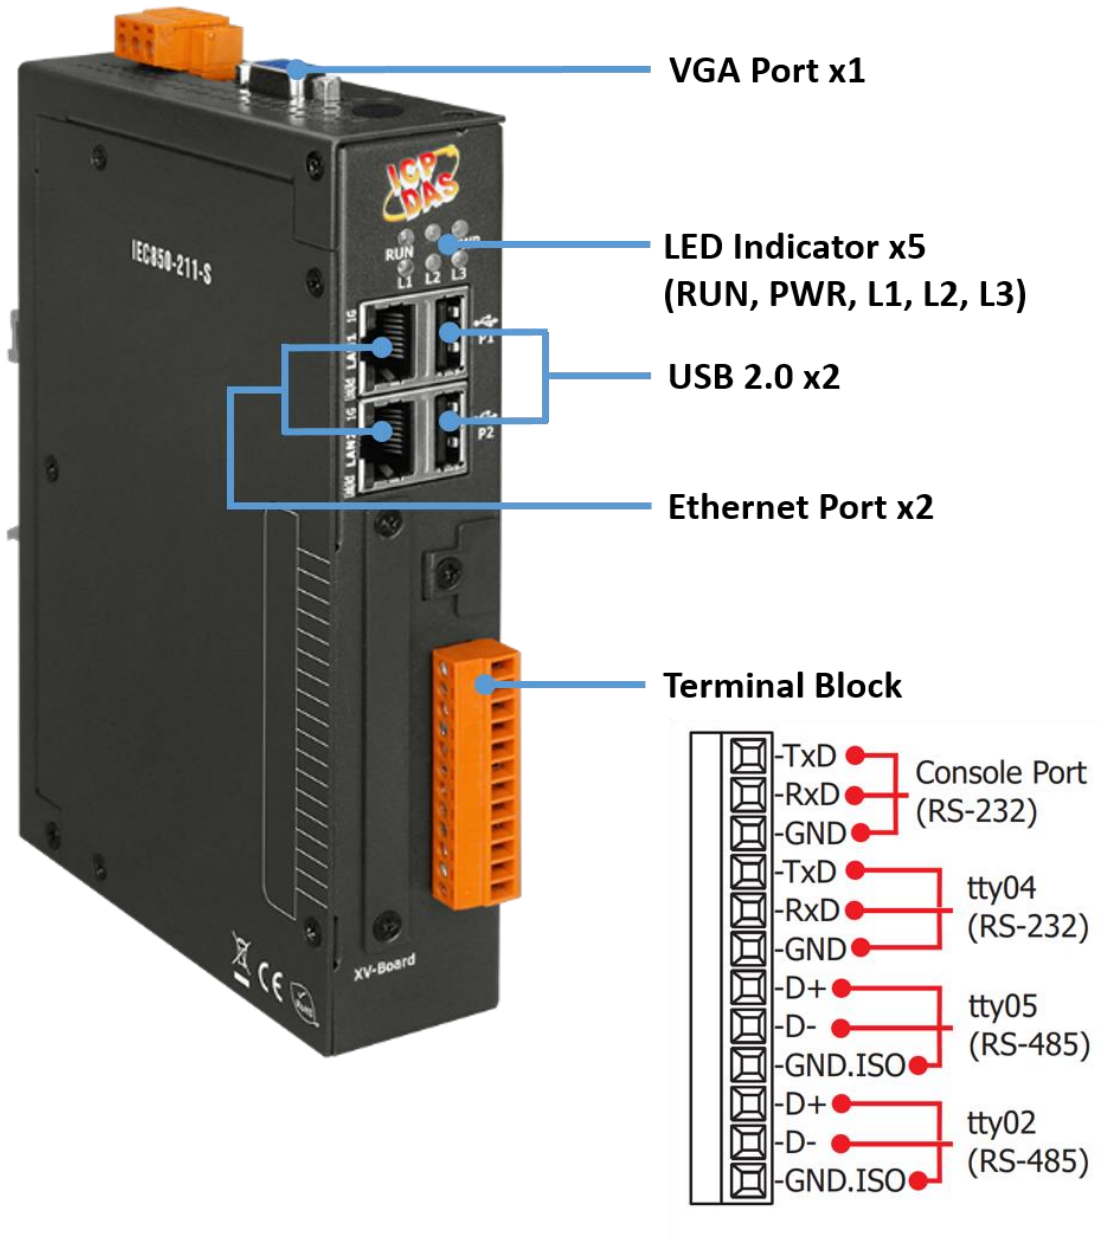

2.3. LED Indicator

There are five LEDs to indicate the various states of the IEC850-211-S. The following is the illustration of these five LEDs.

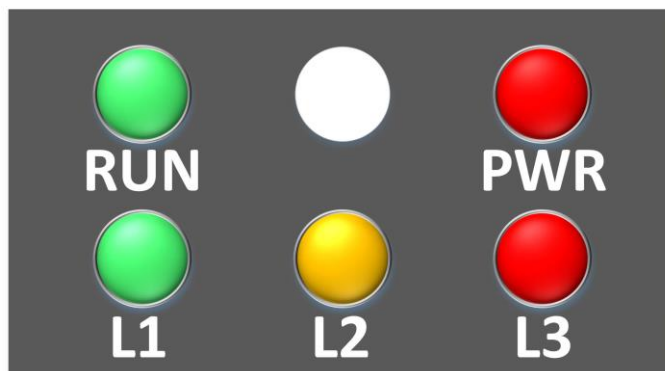

LED Name	LED Status	Description
PWR	ON	Power on
	OFF	Power failure
RUN	Blink	OS is running
	OFF	OS stops running
L1	Flash every second	Firmware is running
	Other	Firmware stops running
L2	Flash every second	Some Modbus servers are disconnected
	OFF	No Warning
L3	ON	The Configuration is incorrect
	OFF	No Error

3. Getting Started With IEC850-211-S

3.1. Preparations for Devices

In addition to the IEC850-211-S, please prepare the following:

1. **Power Supply: +12 ~ +48 VDC** (Ex: DP-665)
2. **Ethernet Hub or Switch** (Ex: NS-205)
3. **PC/NB**: Can connect to the network and set the network

3.2. Hardware Wiring

Connect the IEC850-211-S with the RJ-45 Ethernet port LAN1 to an Ethernet hub/switch and PC. You can also link directly the IEC850-211-S to PC with an Ethernet cable.

After power is connected, please **wait 1 minute** for IEC850-211-S start-up procedure. When the "**RUN**" indicator starts **flashing** and "**PWR**" indicator is **constantly lit**, it represents the boot is complete. After the module boots successfully, if the "**L1**" indicator flashes every second, it means the firmware is running.

3.3. IEC850-211-S Utility


Step 0:

Download and install IEC850_211_S_UTILITY

名稱	修改日期	類型	大小
 Config_Utility_Setup	2021/1/7 上午 11:42	Windows Install...	931 KB
 setup	2021/1/7 上午 11:42	應用程式	518 KB

Step 1:


Open IEC850_211_S_UTILITY and press "Network" option in the top toolbar.

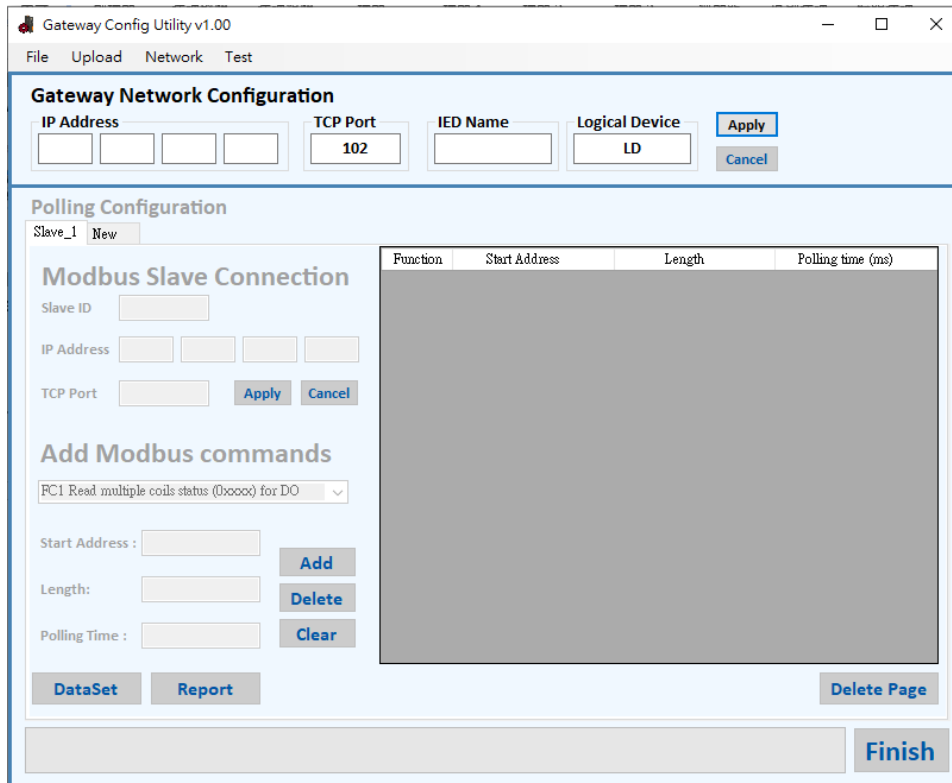

Step 2:

Connect to the module and set network parameter.

- “Set all” is to write the configuration to the module.
- “Save” is to save the configuration.
- “Reboot” is to reboot the module.

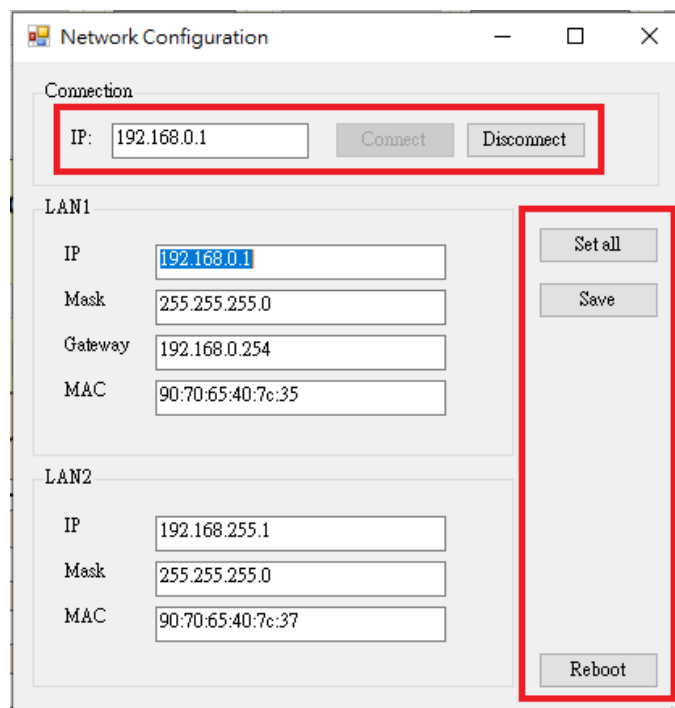

Step 3:

Start to set gateway data mapping.

1. Input the IP address that you want to listen for IEC-61850 and input IED name and LD name.

The screenshot shows the 'Gateway Config Utility v1.00' window. The 'Gateway Network Configuration' section is highlighted with a red border and contains the following fields:

- IP Address: 192, 168, 0, 104
- TCP Port: 102
- IED Name: IED
- Logical Device: LD
- Buttons: Apply, Cancel

The 'Polling Configuration' section is below and includes:

- Slave ID: 1
- IP Address: 192, 168, 255, 101
- TCP Port: 502
- Buttons: Apply, Cancel
- Section: Add Modbus commands
- Dropdown: FC1 Read multiple coils status (0xxxx) for DO
- Fields: Start Address, Length, Polling Time
- Buttons: Add, Delete, Clear
- Buttons: DataSet, Report, Delete Page
- Button: Finish

Function	Start Address	Length	Polling time (ms)
1	0	2	1000
2	0	2	1000
3	0	2	1000
4	0	6	1000

2. Input the Node ID, IP address and port of the Modbus TCP server.

Gateway Config Utility v1.00

File Upload Network Test

Gateway Network Configuration

IP Address: 192 168 0 104 TCP Port: 102 IED Name: IED Logical Device: LD **Apply** **Cancel**

Polling Configuration

Slave_1 New

Modbus Slave Connection

Slave ID: 1

IP Address: 192 168 255 101

TCP Port: 502 **Apply** **Cancel**

Function	Start Address	Length	Polling time (ms)
1	0	2	1000
2	0	2	1000
3	0	2	1000
4	0	6	1000

Add Modbus commands

FC1 Read multiple coils status (0xxxx) for DO

Start Address: **Add**


Length: **Delete**

Polling Time: **Clear**


DataSet **Report** **Delete Page**

Finish


3. Input the registers that you want to map to IEC-61850 data object.
 - “Add” is to add command to the right side table.
 - “Delete” is to delete the command you choose from the right side table.
 - “Clear” is to delete all the commands from the right side table.

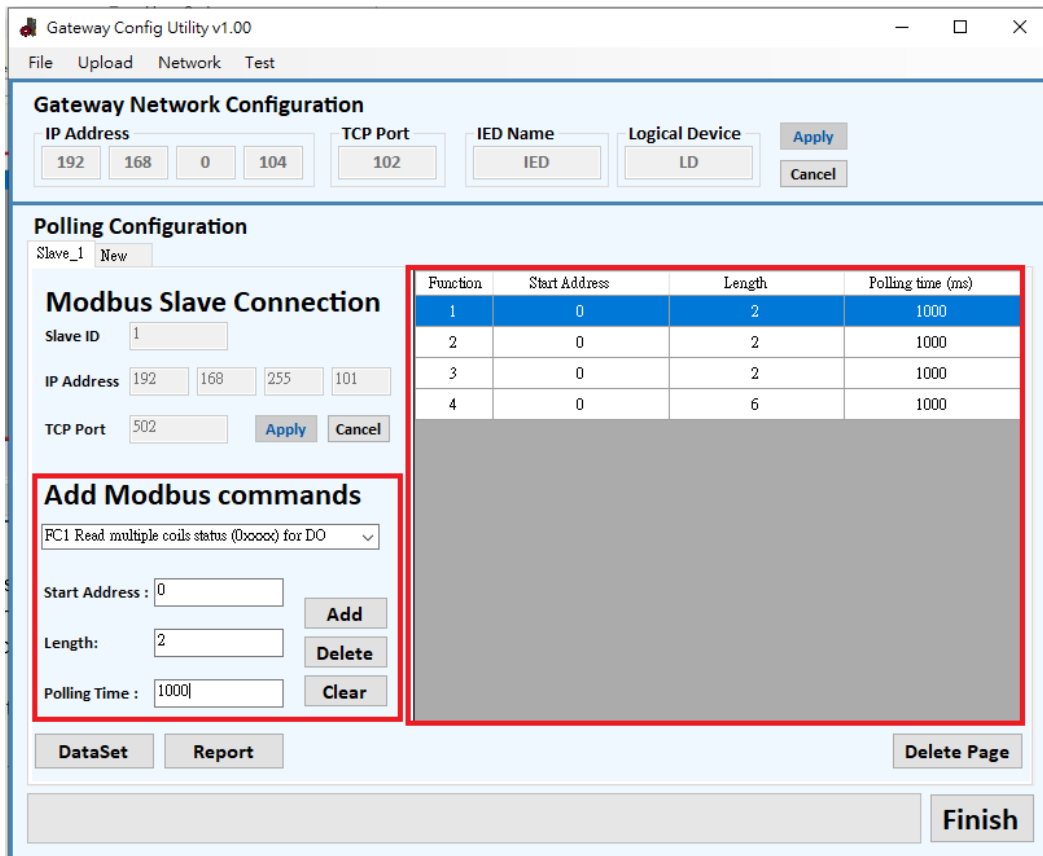


4. Press “DataSet” button and start to configure data set function.
 - “New” is to create a data set named after the text in the top text box.
 - The drop-down menu is to choose which data set can be configured now.
 - “Delete” is to delete the data set chosen now.
 - “Add Data” is to add the data object in the left side table to the data set chosen now.
 - “Delete Data” is to delete the chosen data object in the right side table from the data set.
 - “Finish” is to leave this window.

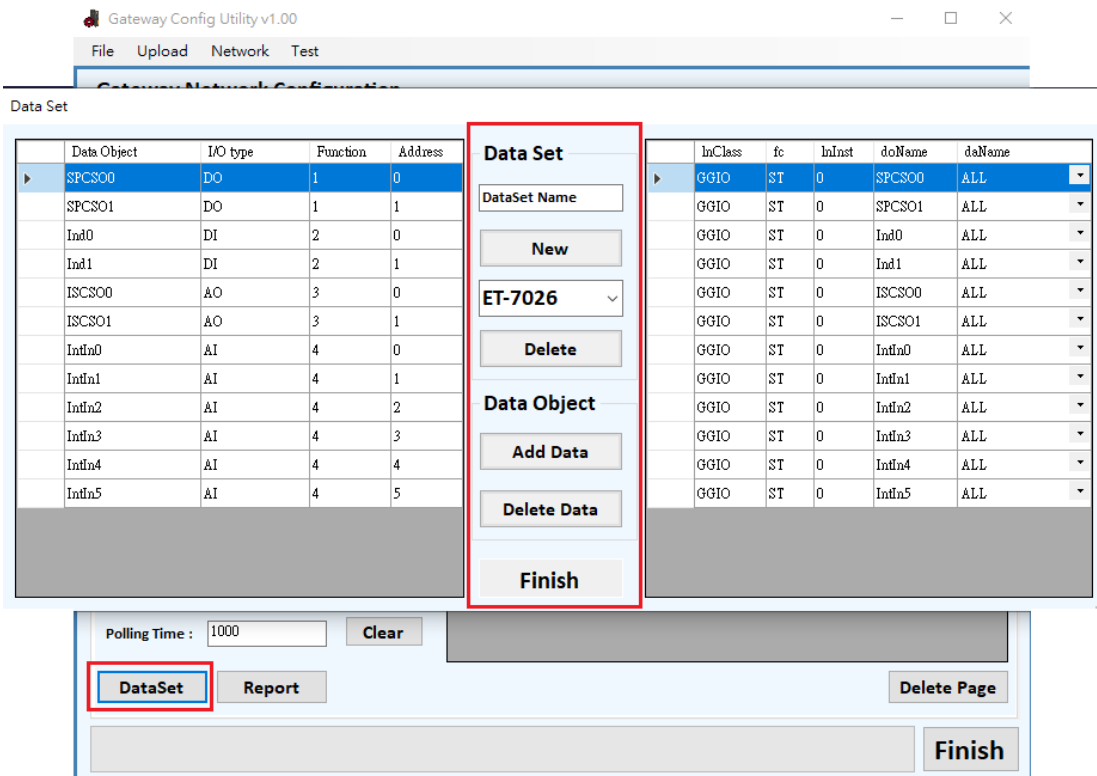

5. Press "Report" button and start to configure report function.
 - "Create" is to create a report control block with parameter in the text boxes, check boxes and drop-down menu.
 - "Modify" is to modify the report control block chosen now.
 - "Delete" is to delete the report control block chosen now.

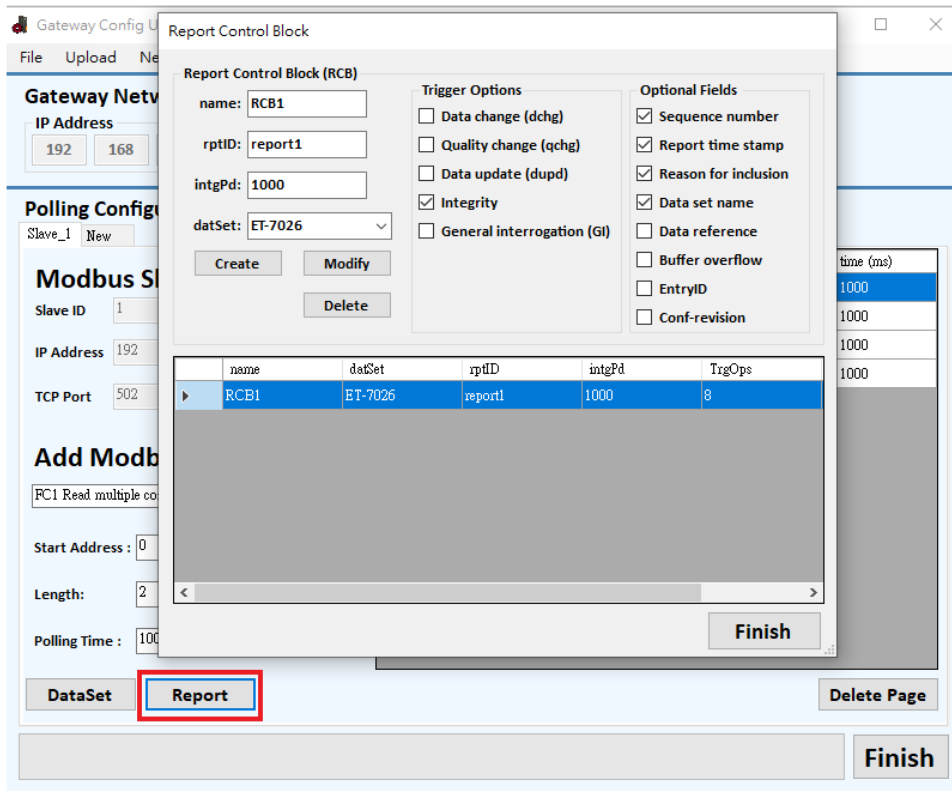


- Press “Finish” button to convert the configuration to a file named “GatewayConfig.toml” and it is put in the folder “Gateway_Configuration” which is next to the utility.

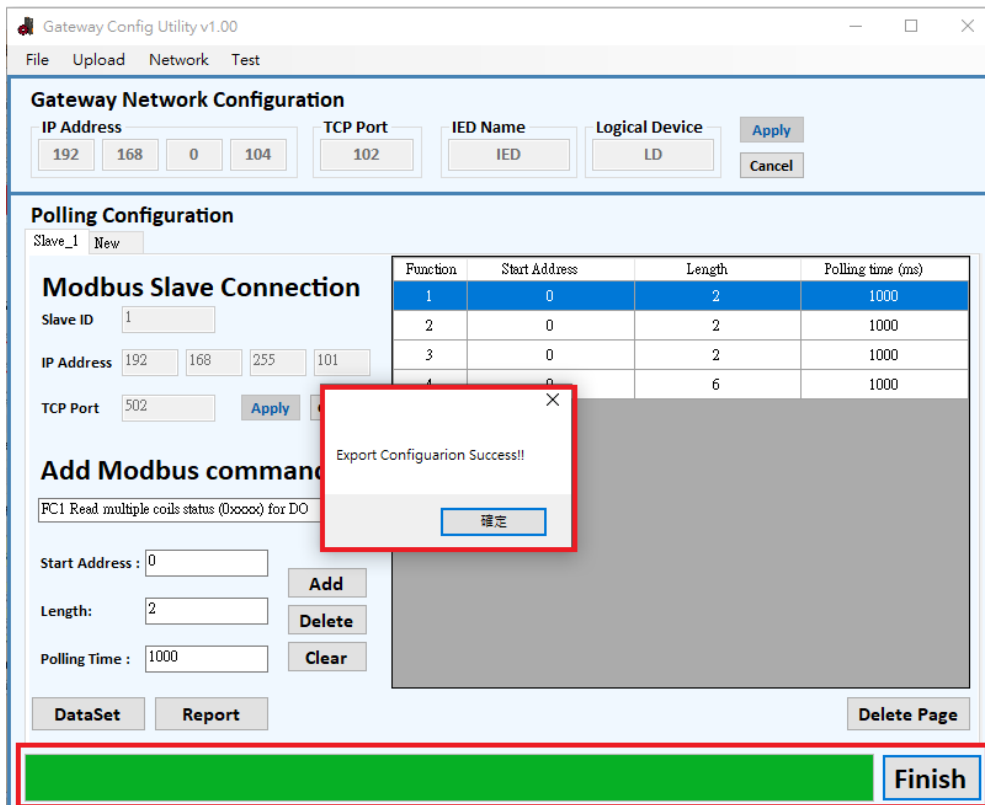

Step 4:


Press “Upload” option in the top toolbar to upload the setting file to IEC850-211-S.

- “Browse” is to choose the file that you want to upload to module.
- “Upload” is to upload the file to module.
 - “Reboot” is to reboot the module. **Note:** After uploading the file, you must press “Reboot” button to reboot module, or the file will be lost.

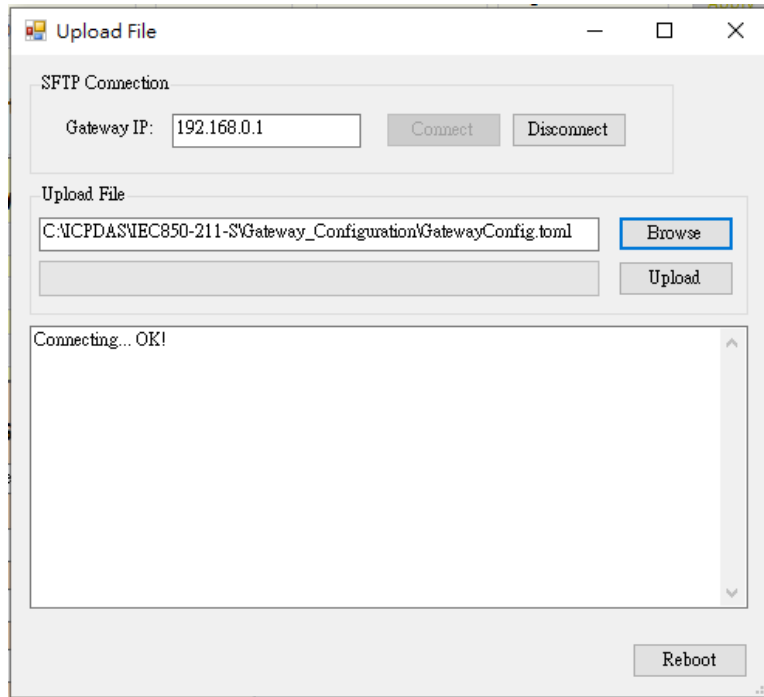

Step 5:

Press “Test” option in the top toolbar to test IEC850-211-S.

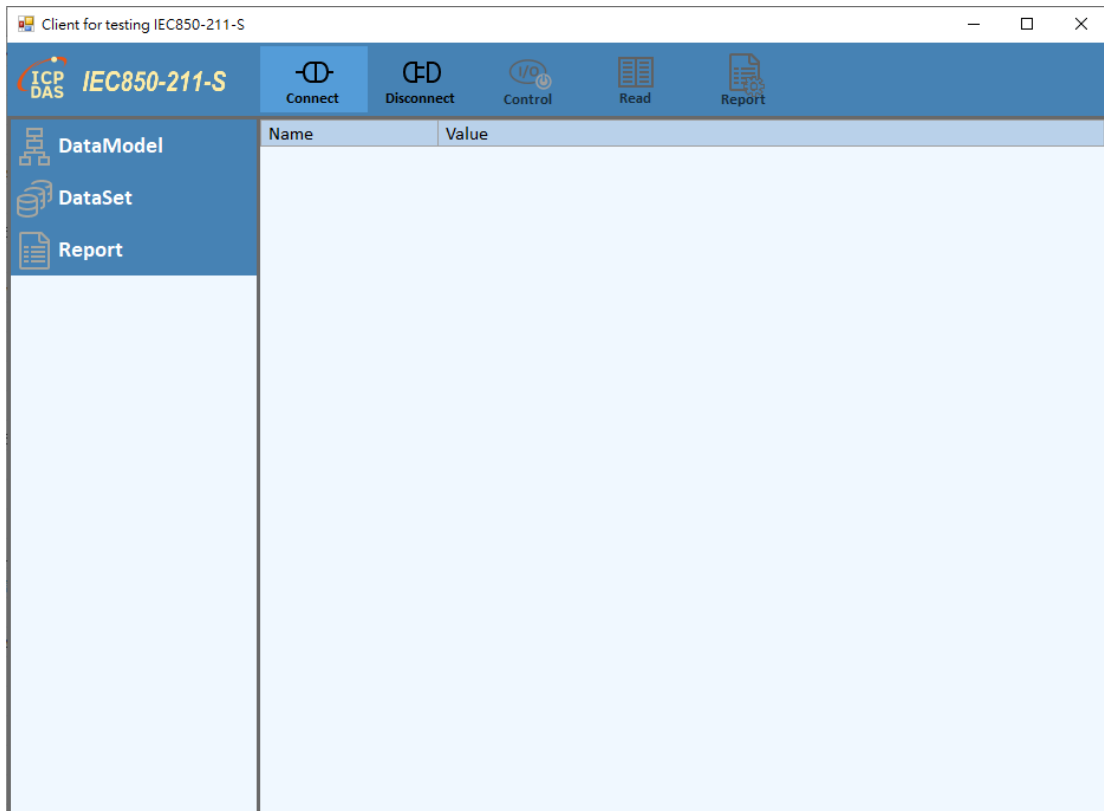

3.4. Update Firmware

Open IEC850_211_S_Utility and press "Upload" option in the top toolbar. Connect to the module and choose the new firmware. Then upload the new firmware to IEC850-211-S and reboot. After reboot the module, it will automatically replace the old firmware with the new one and run it.

